



1020 / 1022 INSTALLATION MANUAL

2 | Table of Contents

Features	03
Specifications	04
Quick - Start	05
Remote Control	07
Hardware Installation	10
1020YH, 1020TSH, 1022YH, 1022TSH Models	
Additional Info	14
Owner's Record	15

Model Comparison Chart

	1020YH	1020TSH	1022YH	1022TSH
VGA (D-SUB 15 Pin) Input	1	1	1	1
VIDEO (RCA) Inputs	2	2	2	2
AUDIO (RCA) Inputs	3	3	3	3
PC AUDIO (DC 3.5mm) Input	1	1	1	1
Built - In Speaker	●	●	●	●
High Quality Scaling	●	●	●	●
High Quality Anti - Aliasing	●	●	●	●
Auto Power On	●	●	●	●
Touch Screen	○	●	○	●
HDMI Input (with sound)	●	●	●	●
AR AF Touch Screen	○	○	○	●

● Standard

○ Not Available


Features

- **1,200NIT Sunlight Readable with Long Life LED Backlight**
- **Automatic Backlight Adjustment through Built-in Ambient Light Sensor**
- **5-wire Resistive Touch Screen (USB) (Optional : Anti-Reflective and Anti-Fingerprint Coating GFG Touch Panel)**
- **Multi - Monitor Touchscreen Support**
- **HDMI Input x 1 (HDCP), VGA Input (15 pin D-SUB) x 1 & Video Input x 2**
- **Audio Input x 3 / Built-In Speaker**
- **1280x800 Native Resolution, 16:9 Aspect Ratio**
- **Chip Monolithic Ceramic Capacitors for Improved Durability**
- **High Performance Image and Video Signal Processor**
- **AISS - Advanced Image-Scaling and Shaping**
- **Last Input and Power Setting Memory**
- **IR Remote Control**
- **Auto Power-On upon signal detection**
- **Vertical Image Flip**
- **Function to Disable Front Button(s) and On Screen Text**
- **AV2 Auto Switching for Backup Camera**
- **360° Copper Monitor Stand or U-Shape Mount**
- **VESA 75mm Mounting Holes**
- **26-Pin Heavy-Duty Connector with Connector Locking**
- **Ruggedized Aluminum Casing**
- **Supports 9V DC ~ 36V DC**
- **"E" Mark Certified for Automotive use**
- **FCC, CE, E13 Certification**
- **ROHS Compliant**
- **36 Month/3 Year Warranty**
- **30 Day No dead Pixel Guarantee**

4 | Specification

Specifications


- **Screen Size : Diagonal 10.1" (16 : 10)**
- **Physical Resolution : 1280 (H) x 800 (V) WXGA**
- **Supported Resolution : 640 x 480 ~ 1920 x 1080**
- **Dot Resolution : 3840 x 800 = 3,072,000 (dots)**
- **Brightness : 500 cd/m² (1020)
1200 cd/m² (1022)**
- **Contrast Ratio : 800 : 1**
- **Viewing Angle : Vertical : 170° , Horizontal : 170°**
- **Response Time (Tr / Tf) : 10/15ms (Typ.)**
- **Touch Screen Interface: USB port**
- **Operating Voltage Range: DC 9V ~ 36V**
- **Power Supply: DC 12V**
- **Power Consumption: ≤ 20W**
- **Operating Temperature: -4°F ~ 158°F (-20°C ~ 70°C)**
- **Storage Temperature: -22°F ~ 176°F (-30°C ~ 80°C)**
- **Vibration: Operating Random Vibration Test (5-500Hz, 1.0Grms), IEC 60068-2-64 standard**
- **Shock: Operating Shock Test, 10G peak acceleration (11ms duration), IEC 60068-2-27 standard**
- **MTBF (Mean Time Between Failures): > 55,000 Hours**
- **Dimension (mm): 265.9W x 186.9H x 34.7D**
- **Weight (lb): 2.87**

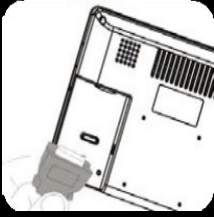


Attach the 26-Pin connector to the monitor




Attach the D-Sub 15-Pin connector to your computer's analog VGA output connector

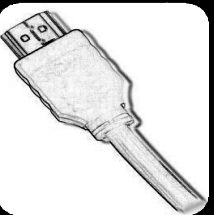

Attach the HDMI connector to your computer's HDMI output connector (TSH / YH Only)

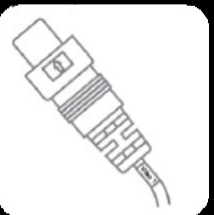

**Attach your “ Video source one ”
(e.g. VCR, Video Game Console)
to the Yellow RCA connector marked Video**

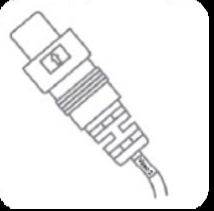

**Attach your “ Video source two ”
(e.g. Rear View Camera)
to the Yellow RCA connector marked CCD**



**Attach your “ Audio sources ” to the red
RCA connectors marked Audio.
The sound will be outputted through the
monitor's internal speaker**



**Attach the mini stereo jack marked “ PC Audio ”
to your computer's earphone jack**




**Touchscreen Installation
(1020TSV / 1022TSV / 1020TSH /1022TSH Only)**

**Please download and install the Touchscreen
driver for your operating system from our
website WWW.XENARC.COM.**


6 | Quick - Start



Attach the USB plug to your USB connector

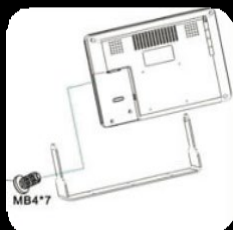

Depending on your application, you can choose to install the included U-Shape bracket onto the monitor

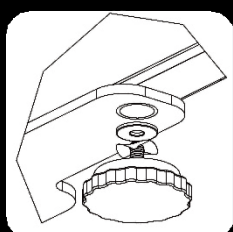

Please make sure that you install the plastic and metal washer as shown if you choose to use the U-Shape bracket.



Insert Power Adapter as shown.

Remote Control | 7



1. Power Button : Turn the monitor ON or OFF.

2. Mirror Button : Enable or Disable the reverse of the display.

**3. Dimmer Button : Dim the brightness of the display by pressing this key continuously to set the brightness level of the display.
(Only available when auto sensor is disabled.)**

4. Display Button : Display the current input signal on the screen.

5. Sleep Button : Enable or Disable the sleep timer. Press this button to select and set the time to turn off the monitor automatically.

6. Picture Button : Enable or select the picture mode you prefer. Press this button and then you can select standard, mild, user, dynamic.

7. PC auto Button : Enable to adjust the picture automatically, only available in VGA mode.

8. Menu Button : Enable the OSD menu. Press this button again to exit.

9. Source Button : Enable to switch to different source input.

10. Up / Down Button (▲ / ▼) : Navigate Up or Down in OSD menu.

11. Left / Right Button (◀ / ▶) : Navigate Left or Right in OSD menu, as well as decreasing or increasing the value of setting in OSD.

12. Enter Button : Confirm the setting or selection

8 | Remote Control

Instructions for remote controller shortcuts

1. Dimmer (Adjust the brightness)

By pressing the Dimmer button, it will adjust the brightness level from 0, 20, 40, 60, 80 and 100.


Default is 100 (Only available when smart light sensor is disabled)



2. Sleep (Set the sleep time out)

Select the time to automatically turn off the monitor.


The minimum is 10 minutes and the maximum is 240 minutes.

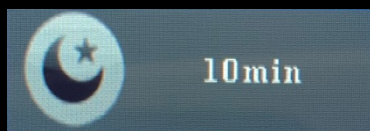

3. Picture (Set the modes of the picture)

Enable to select the picture modes you prefer.

Press this button and then you can select Standard, Mild, User, or Dynamic

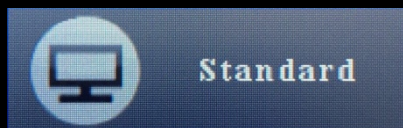

4. PC AUTO (Auto adjust, only on VGA)

By pressing PC AUTO, it will auto adjust the image.


5. Source (Select the source)

Press this button to select the input signal to display.

If one of these modes is disabled in OSD menu, please setup under (ADJUST → Source Enable)

6. Mirror (Image upside down)

Enable or Disable the display upside down. choose the direction you wish to display.

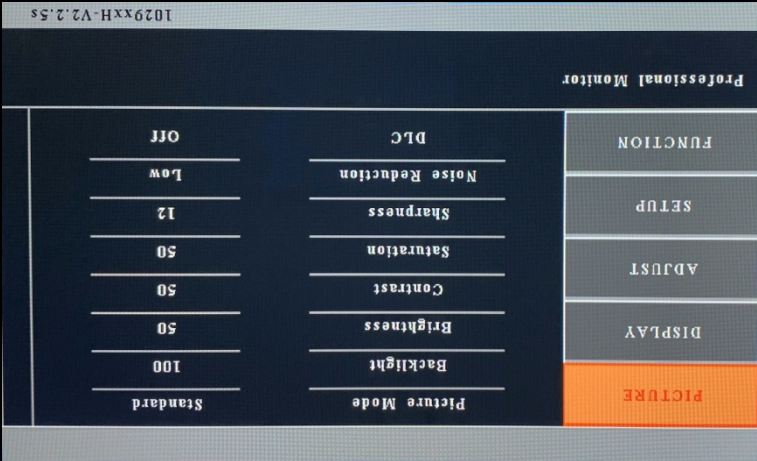


7. Mute

Mute the speaker.
Press again to restore the sound of the speaker.



8. Display (Display mode)

Display the current input signal on the screen.








9. VOL- / VOL+

Volume adjustment.



10 | Hardware Installation

Buttons description:

1.  **Power Button** : Press to turn ON or OFF the monitor.
2.  **Select Button** : Press to select the input signal to display. Press the left (◀) or right (▶) to highlight the input source desired and then wait 2 seconds to make the selection.
3.  **Menu Button** : Press the button to show the OSD menu. And then press the left (◀) or right (▶) to navigate through the menu. Press “ Select “ button to go through a list of settings and options. Press the left (◀) or right (▶) buttons to change the values of settings. Press Menu button again to leave the OSD menu.
4.  **Right Button** : Press this button to the value of settings inside the OSD menu.
5.  **Left Button** : Press this button to the value of settings inside the OSD menu.

Ambient Light Sensor

Ambient light sensor can be enabled or disabled in the OSD by going into the “ **SETUP** ” category, and selecting the option “ **Smart Light Sensor** ”. When Auto Sensor is enabled, the LCD backlight brightness will be adjusted automatically according to the ambient lighting condition.

Note

The brightness cannot be adjusted manually through the dimmer button or through the OSD menu when the Smart Light Sensor function is enabled.

OSD (On-screen display) Menu

Press MENU button to bring up the OSD menu onto the screen. Press LEFT / RIGHT button (Or UP / DOWN button on the remote) to navigate the OSD menu or to Increase / Decrease the value of an selected item. Press SELECT Button (or ENTER button on the remote) to select a category or an item. Press MENU button to go back.

The settings and options in the OSD menu are categorized into 5 Categories : PICTURE, DISPLAY, ADJUST, SETUP, FUNCTION

PICTURE	Picture Mode	Standard
DISPLAY	Backlight	100
ADJUST	Brightness	50
SETUP	Contrast	50
FUNCTION	Saturation	50
	Sharpness	12
	Noise Reduction	Low
	DLC	Off
Professional Monitor		
1029GNH-V2.1.5		

1. PICTURE


- **Picture Mode** : Set the color mode to the desired setting : Standard, Mild User, Dynamic.
- **Backlight** : Adjust backlight intensity by pressing Left (◀) or Right (▶) buttons. Increase the number for a higher level of backlight output. Decrease the number for a lower level of backlight output. Only works when Smart Light sensor is turned off.
- **Brightness** : Adjust brightness by pressing Left (◀) or Right (▶) buttons. Increase the number for a higher level of brightness. Decrease the number for a lower level of brightness.
- **Contrast** : Adjust contrast by pressing Left (◀) or Right (▶) buttons. Increase the number for a higher level of contrast. Decrease the number for a lower level of contrast.
- **Sharpness** : Adjust sharpness by pressing left or right buttons. Press left to decrease sharpness and right to increase the level of sharpness.
- **Noise Reduction** : To adjust the level of noise reduction
- **DLC** : To enable or disable Dynamic Luminance Control (Dynamically boosting display contrast)

PICTURE	Color Temperature	Medium
DISPLAY	RGB Color Range	Auto
ADJUST	Gamma	Gamma_5
SETUP	Aspect Ratio	Auto
FUNCTION	OverScan Select	100% Display
	Display Mirror	Off
	Auto Adjust	>>>
Professional Monitor		
1029GNH-V2.1.5		

2. DISPLAY


- **Color Temp** : Set the color temp to the desired setting : Medium, Warm, Cool and User.
- **RGB Color Range** : Set the RGB color range to the desired setting : Auto, 0-255, 16-235
- **Gamma** : Set the gamma to the desired setting : Gamma_5, Cut White, InCreaseBlack, Enhance Blue and Liner.
- **Aspect Ratio** : Select the display mode (16:9, 4:3 and Auto)
- **OverScan Select** : Adjustment to compensate for overscan.
- **Display Mirror** : Adjust the vertical mirroring position.
- **Auto Adjust** : Adjust display automatically.

12 | Hardware Installation

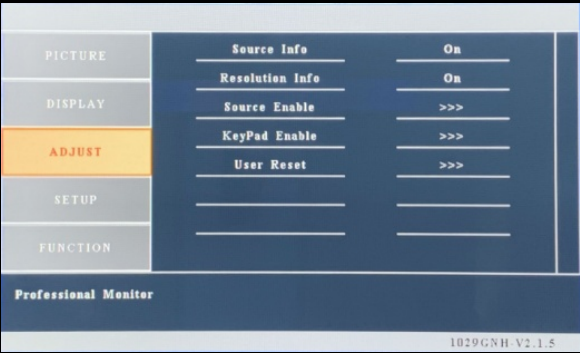

3. ADJUST


- **Source Info** : Display the source of input signal. If it is **ON**.
- **Resolution Info** : Select to turn **OFF** or turn **ON** displaying of On Screen Source Information.
- **Source Enable** : Select to enable or disable the input signal. If an input signal is turned off, the source will automatically be disabled.
- **KeyPad Enable** : Allows you to disable or enable the buttons on the front of the monitor. Power, Menu, Select, Left, and Right buttons can be disabled or enabled. (only operated with remote)
- **User Reset** : Reset to factory default setting.

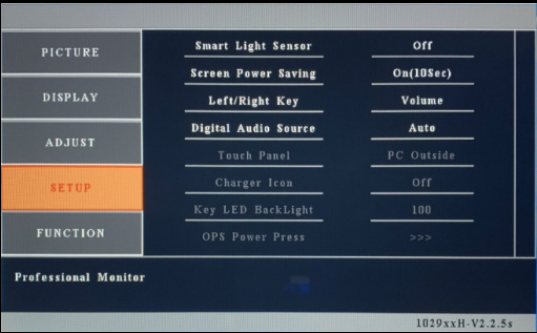

4. Setup

- **Smart Light sensor** : Enable or disable the auto sensor of surrounding environment.
 - “ **On** ” means the monitor can automatically adjust the backlight of the display according to the surrounding environment.
 - Please note : While smart light sensor is enabled, the option of dimmer or backlight inside the OSD can not work until smart light sensor is disabled.
- **Screen Power Saving** : Adjust the time out of the monitor backlight, When there is no signal input. (Default is On 10 Sec)
- **Left/Right Key** : Set front Left/Right buttons as Dimmer or Volume Control.
- **Digital Audio Source** : Select the audio source while only in HDMI source. When set to **AUTO**, the built-in speaker will output the digital audio, if HDMI source include audio signal. Otherwise, the speaker will output the analog audio signal from the mini stereo jack marked as “ **PC Audio** ”
When set to **Digital**, the built-in speaker will output the digital audio signal from HDMI.
When set to **Analog**, the built-in speaker will output the analog audio signal from the mini stereo jack marked as “ **PC Audio** ”

- **Touch Panel : Not available.**
- **Charger Icon : Not available.**
- **Key LED BackLight : Adjust the backlight brightness of the buttons.**
- **OPS Power Press : Not available.**

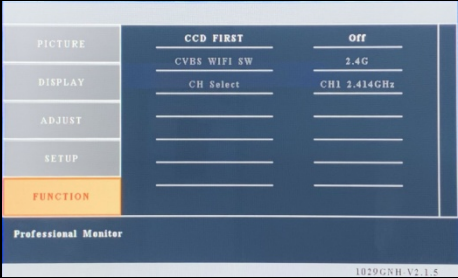

5. FUNCTION

- **CCD FIRST : Set whether to have monitor switch to CCD signal automatically if a signal is present. (Default is OFF)**
- **CVBS WIFI SW : Not available.**
- **CH Select : Not available.**

14 | Additional Info

NOTE:

NOTE 1 :

Depending on your Operating System, Touch Screen device driver might need to be installed onto your computer in order for the Touch Screen to become operational. Touch Screen driver and software for different operating systems can be downloaded from our website at WWW.XENARC.COM.

NOTE 2 :

The maximum voltage supported by the monitor is 36V DC. Feeding the monitor with higher voltage will damage the monitor and void the warranty. Please use a fused power source if you decide to wire the monitor directly to your vehicle's electrical system. It is also crucial that you check the polarity on the connection.

NOTE 3 :

If the monitor is not displaying the VGA signal properly, the VGA signal might be out of range. Please try changing your display refresh rate to 60, 70, 72, or 75 Hertz.


For Technical Support , please contact us at:

Xenarc Technologies Corp.

Toll Free : 888 - 656 - 6536

E - Mail : support@xenarc.com

Website : www.xenarc.com

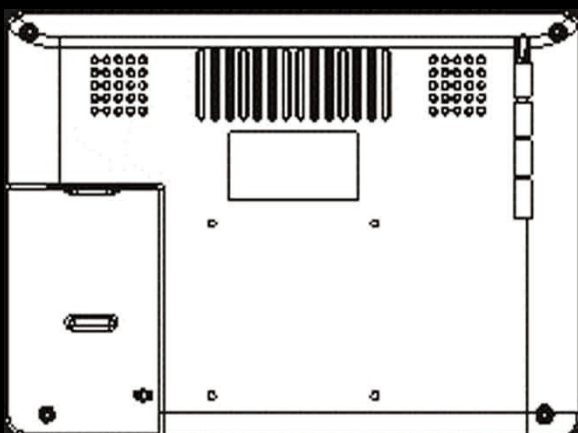

The length of the mounting screw. [M4 x 6 mm (max)]
(common between right side and left side)

Owner's Record

The model and serial number are located on the rear of the unit. Please record these numbers in the spaces provided below, as well as the dealer name, address, and telephone number. Please refer to these records whenever speaking to your dealer regarding this product.

Model Number : _____

Serial Number : _____

Dealer Name : _____

Street Address : _____

City : _____

State : _____

Zip : _____

Phone Number : _____

Purchase Date : _____