

AEC-6877

Fanless Embedded Box PC

User's Manual 3rd Ed

Copyright Notice

This document is copyrighted, 2015. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEMON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEMON reserves the right to make changes in the product design without notice to its users.

Acknowledgement

All other products' name or trademarks are properties of their respective owners.

- Microsoft Windows is a registered trademark of Microsoft Corp.
- Intel, Pentium, Celeron, and Xeon are registered trademarks of Intel Corporation
- Core, Atom are trademarks of Intel Corporation
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.

All other product names or trademarks are properties of their respective owners.

Packing List

Before setting up your product, please make sure the following items have been shipped:

Item	Quantity
● BOXER-6877	1
● Phoenix power connector	1
● M3 x 4mm screws	4
● 6# -32 x 10mm screws	6
● Wall mount brackets	2
● Product DVD with User's Manual (in pdf) and drivers	1

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

About this Document

This User's Manual contains all the essential information, such as detailed descriptions and explanations on the product's hardware and software features (if any), its specifications, dimensions, jumper/connector settings/definitions, and driver installation instructions (if any), to facilitate users in setting up their product.

Users may refer to the AAEON.com for the latest version of this document.

Safety Precautions

Please read the following safety instructions carefully. It is advised that you keep this manual for future references

1. All cautions and warnings on the device should be noted.
2. All cables and adapters supplied by AAEON are certified and in accordance with the material safety laws and regulations of the country of sale. Do not use any cables or adapters not supplied by AAEON to prevent system malfunction or fires.
3. Make sure the power source matches the power rating of the device.
4. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
5. Always completely disconnect the power before working on the system's hardware.
6. No connections should be made when the system is powered as a sudden rush of power may damage sensitive electronic components.
7. If the device is not to be used for a long time, disconnect it from the power supply to avoid damage by transient over-voltage.
8. Always disconnect this device from any AC supply before cleaning.
9. While cleaning, use a damp cloth instead of liquid or spray detergents.
10. Make sure the device is installed near a power outlet and is easily accessible.
11. Keep this device away from humidity.
12. Place the device on a solid surface during installation to prevent falls
13. Do not cover the openings on the device to ensure optimal heat dissipation.
14. Watch out for high temperatures when the system is running.
15. Do not touch the heat sink or heat spreader when the system is running
16. Never pour any liquid into the openings. This could cause fire or electric shock.

17. As most electronic components are sensitive to static electrical charge, be sure to ground yourself to prevent static charge when installing the internal components. Use a grounding wrist strap and contain all electronic components in any static-shielded containers.
18. If any of the following situations arises, please the contact our service personnel:
 - i. Damaged power cord or plug
 - ii. Liquid intrusion to the device
 - iii. Exposure to moisture
 - iv. Device is not working as expected or in a manner as described in this manual
 - v. The device is dropped or damaged
 - vi. Any obvious signs of damage displayed on the device
19. **DO NOT LEAVE THIS DEVICE IN AN UNCONTROLLED ENVIRONMENT WITH TEMPERATURES BEYOND THE DEVICE'S PERMITTED STORAGE TEMPERATURES (SEE CHAPTER 1) TO PREVENT DAMAGE.**

Warning!



This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Caution:

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions and your local government's recycling or disposal directives.

Attention:

Il y a un risque d'explosion si la batterie est remplacée de façon incorrecte. Ne la remplacer qu'avec le même modèle ou équivalent recommandé par le constructeur. Recycler les batteries usées en accord avec les instructions du fabricant et les directives gouvernementales de recyclage.

China RoHS Requirements (CN)

产品中有毒有害物质或元素名称及含量

AAEON Embedded Box PC/ Industrial System

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板 及其电子组件	○	○	○	○	○	○
外部信号 连接器及线材	○	○	○	○	○	○
外壳	○	○	○	○	○	○
中央处理器 与内存	○	○	○	○	○	○
硬盘	○	○	○	○	○	○
电源	○	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 标准规定的限量要求以下。

X：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 标准规定的限量要求。

备注：
 一、此产品所标示之环保使用期限，系指在一般正常使用状况下。
 二、上述部件物质中央处理器、内存、硬盘、电源为选购品。

China RoHS Requirement (EN)

Poisonous or Hazardous Substances or Elements in Products
 AAEON Embedded Box PC/ Industrial System

Component	Poisonous or Hazardous Substances or Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
PCB & Other Components	○	○	○	○	○	○
Wires & Connectors for External Connections	○	○	○	○	○	○
Chassis	○	○	○	○	○	○
CPU & RAM	○	○	○	○	○	○
Hard Disk	○	○	○	○	○	○
PSU	○	○	○	○	○	○

O: The quantity of poisonous or hazardous substances or elements found in each of the component's parts is below the SJ/T 11363-2006-stipulated requirement.

X: The quantity of poisonous or hazardous substances or elements found in at least one of the component's parts is beyond the SJ/T 11363-2006-stipulated requirement.

Note: The Environment Friendly Use Period as labeled on this product is applicable under normal usage only

Table of Contents

Chapter 1 - Product Specifications	1
1.1 Specifications.....	2
Chapter 2 – Hardware Information	4
2.1 Dimensions	5
2.2 List of Connectors	7
2.2.1 COM1 ~ COM2 TX / RX LED (CN2)	7
2.2.2 RS-232 Box Header (COM 1)	7
2.2.3 USB Box Header (USB1 ~ USB3)	8
2.3 CFast™ Card Installation	9
2.4 Hard Disk Drive (HDD) Installation	10
2.5 PCIe Card Installation	11
2.6 Wallmount Kit Installation	12
Chapter 3 - AMI BIOS Setup	13
3.1 System Test and Initialization	14
3.2 AMI BIOS Setup	15
3.3 Setup Submenu: Main.....	16
3.4 Setup Submenu: Advanced	17
3.4.1 Advanced: ACPI Settings.....	18
3.4.2 Advanced: Trusted Computing	19
3.4.3 Advanced: CPU Configuration.....	20
3.4.4 Advanced: SATA Configuration (IDE).....	21
3.4.5 Advanced: SATA Configuration (AHCI).....	22
3.4.6 Advanced: SATA Configuration (RAID).....	23
3.4.7 Advanced: Intel TXT (LT) Configuration	24
3.4.8 Advanced: PCH-FW Configuration	25
3.4.8.1 PCH-FW Configuration: Firmware Update	

Configuration	26
3.4.9 Advanced: AMT Configuration	27
3.4.10 Advanced: USB Configuration	28
3.4.11 Advanced: Super IO Configuration.....	29
3.4.11.1 Super IO Configuration: Serial Port 0 Configuration.	30
3.4.11.2 Super IO Configuration: Serial Port 1 Configuration.	31
3.4.12 Advanced: H/W Monitor	32
3.5 Setup submenu: Chipset.....	33
3.5.1 Chipset: PCH-IO Configuration	34
3.5.2 Chipset: System Agent (SA) Configuration	36
3.5.3 Chipset: Graphic Configuration	37
3.5.3.1 Graphic Configuration: Display Control	39
3.6 Setup submenu: Boot.....	40
3.6.1 Boot: Hard Drive BBS Priorities.....	41
3.7 Security.....	42
3.8 Setup submenu: Save & Exit.....	43
Chapter 4 – Drivers Installation	44
4.1 Product CD/DVD.....	45
Appendix A - Watchdog Timer Programming.....	54
A.1 Watchdog Timer Programming	55
A.2 ITE8728 Watchdog Timer Initial Program	58
Appendix B - I/O Information.....	63
B.1 I/O Address Map.....	64
B.2 Memory Address Map	66
B.3 IRQ Mapping Chart	67
B.4 DMA Channel Assignments	70
Appendix C – RAID & AHCI Settings	71
C.1 Setting RAID	72

C.2 Setting AHCI..... 82

Chapter 1

Product Specifications

1.1 Specifications

System

● Processor		Intel® Core™ i7-3610QE 2.3 GHz Intel® Core™ i7-2710QE 2.1 GHz Intel® Core™ i5-2510E 2.5 GHz Intel® Celeron® -B810 1.6 GHz
● System Memory		204-pin dual-channel DDR3 SODIMM 1066/1333/1600 MHz x 2, up to 16 GB
● Chipset		Intel® QM77
● Display	VGA	DB-15 x 1
● Interface	DVI	DVI-D x 1, support 1920 x 1080 @ 60 Hz
	Others	DisplayPort™ x 2
● Storage	SSD	CFast™ slot
	Device	HDD SATA 6.0Gb/s x 2 support RAID 0, 1, 5, 10
● Network	LAN	Gigabit Ethernet, RJ-45 x 2
	Wireless	Optional by MiniCard
● Front I/O	Serial Port	RS-232 x 1
	Others	Push Power button x 1
		Standard Antenna Hole x 2
● Rear I/O	USB Host	USB3.0 x 4
	LAN	RJ-45 x 2
	Serial Port	RS-232/422/485 x 1
	Audio	Mic-in, Line-out, Line-out
	KB/MS	PS/2 Keyboard x 1 + Mouse x 1
	Others	Power input x 1
● Expansion	PCIe	PCI-E[x4] x 1 (AxM series) or PCI x 2 (BxM series)
● Indicator	Front	Power LED x 1
		Hard Disk Drive active LED x 1

- Power Requirement DC 9~30V with 3-pin terminal block
- System Cooling Passive cooling
- Mounting Wall mounted
- Dimension (W x H x D) 208 x 102 x 238 mm (8.19 x 4.02 x 9.37")
- Gross Weight 6 kg (13.2 lb)
- Certification EMC CE/FCC Class A
- Safety —
- OS Support Windows® 10
Windows® 7
Windows® XP
Windows® XP Embedded
Linux Fedora 10


Environmental



- Operating Temperature 0 ~ 50°C (32 ~ 122°F) – with air flow
- Storage Temperature -20 ~ 70°C (-4 ~ 158°F)
- Storage Humidity 10 ~ 95% @ 40°C, non-condensing
- Anti-Vibration 5 G_{rms}/5~500 Hz/ operation- CFast™
1 G_{rms}/5~500 Hz/ operation- HDD
- Anti-Shock 20G peak acceleration (11 msec duration)- HDD

Chapter 2

Hardware Information

2.1 Dimensions

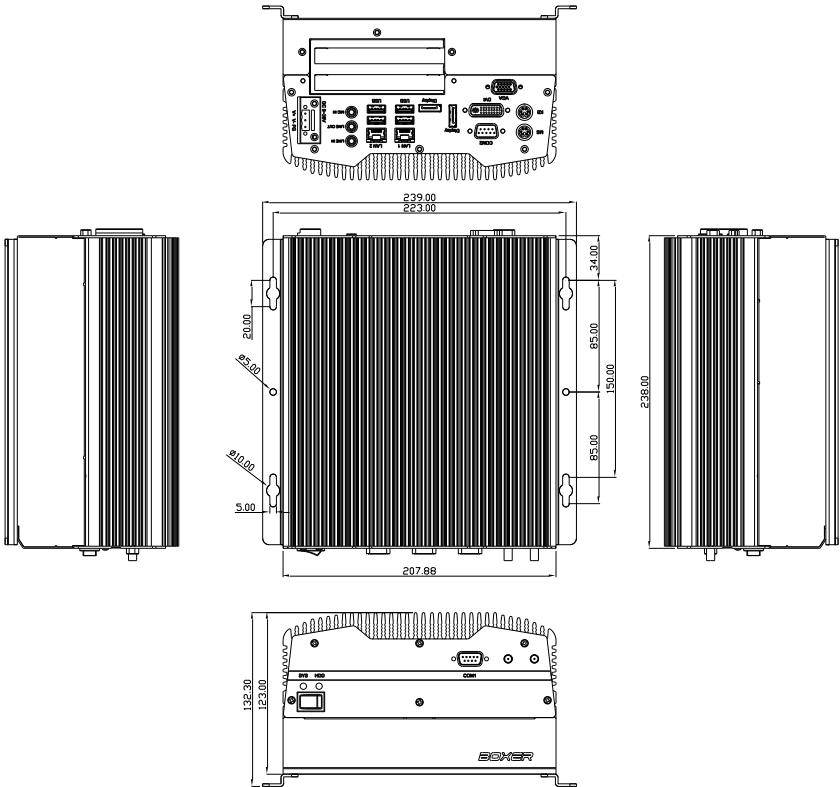

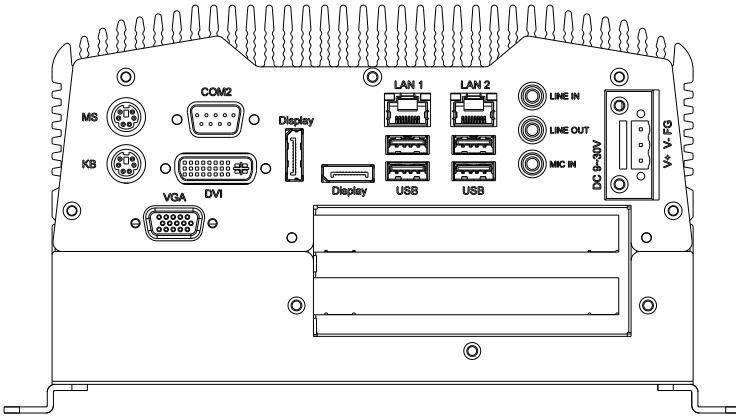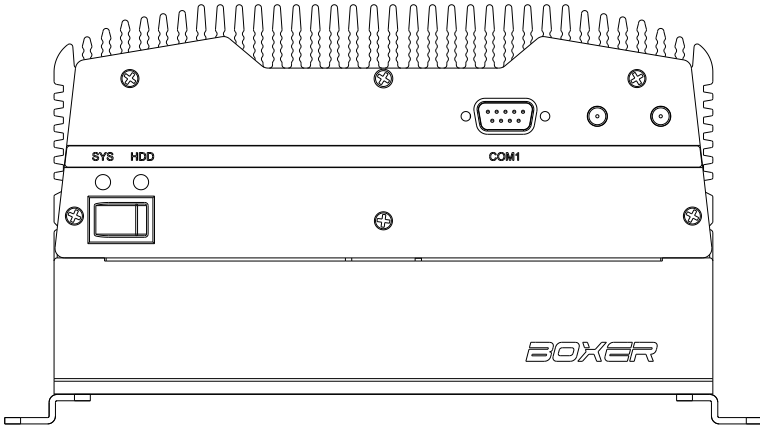

2.2 List of Connectors

Please refer to the table below for all of the system's connectors that you can configure for your application

2.2.1 COM1 ~ COM2 TX / RX LED (CN2)

Pin	Signal	Pin	Signal
1	+5V	2	GND
3	TX_LED_COM1	4	-TX_LED_COM1
5	RX_LED_COM1	6	-RX_LED_COM1
7	COM2_RS232_PWR	8	GND
9	TX_LED_COM2	10	-TX_LED_COM2
11	RX_LED_COM2	12	-RX_LED_COM2
13	COM2_RS485_PWR	14	COM2_RS422_PWR

Note: The 115200 baud rate is not supported by the COM ports due to hardware limitation of the EMB-QM77 motherboard

2.2.2 RS-232 Box Header (COM 1)


Pin	Signal	Pin	Signal
1	DCD	2	RXD
3	TXD	4	DTR
5	GND	6	DSR
7	RTS	8	CTS
9	RI	10	N.C

2.2.3 USB Box Header (USB1 ~ USB3)


Pin	Signal	Pin	Signal
1	DCD	2	RXD
3	TXD	4	DTR
5	GND	6	DSR
7	RTS	8	CTS
9	RI	10	N.C

2.3 CFast™ Card Installation

Step 1: Remove the screws on the front and rear panels

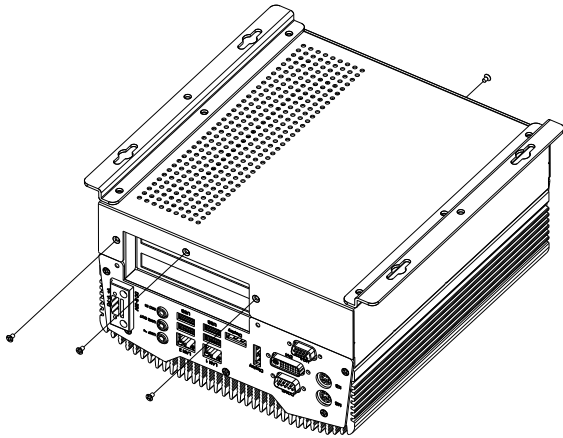


Step 2: Slot the CFast™ Card in to the CFast™ slot and secure the cover with screws

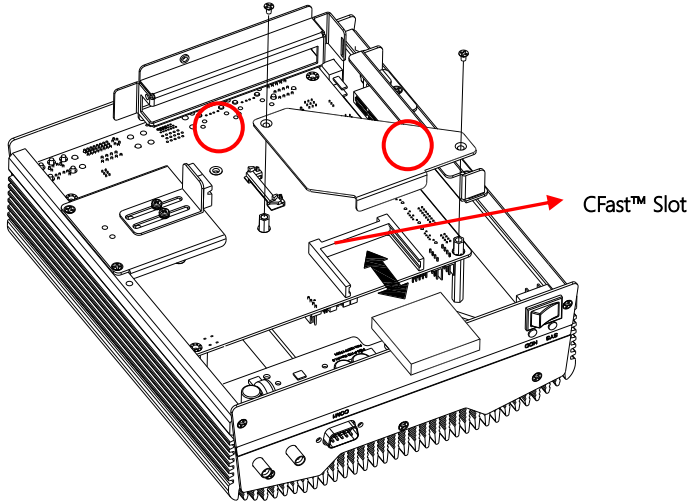


2.4 Hard Disk Drive (HDD) Installation

Step 1: Remove the four screws on the front and rear panels

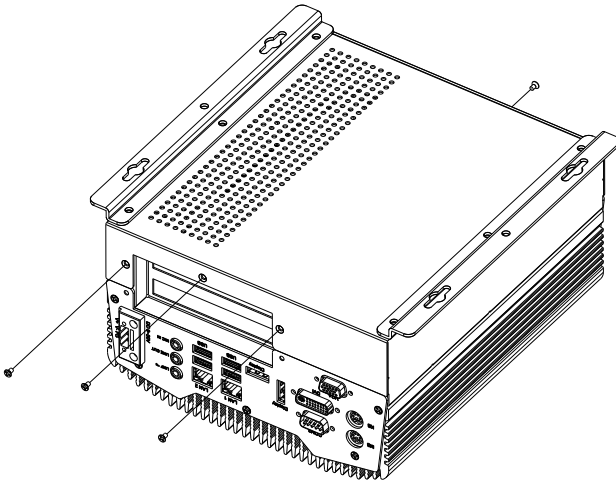


Step 2: Place the HDD onto the HDD bracket and attach it to the base of AEC-6877

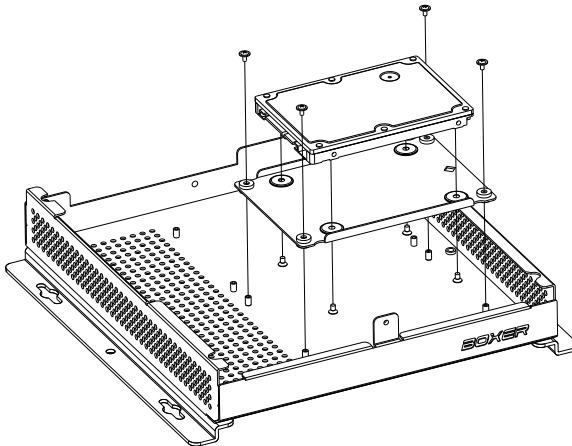


2.5 PCIe Card Installation

Step 1: Remove the screws on the front and rear panels

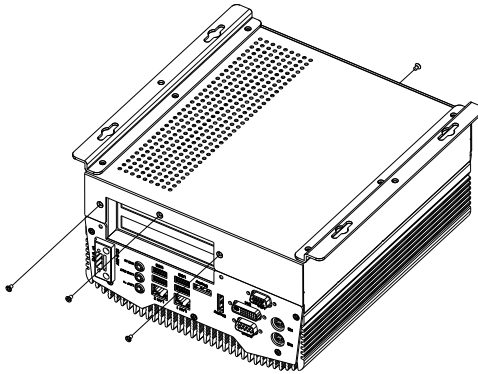

Step 2: Install a hold-down bracket to fix the PCI or PCIe Card and make sure the card is secured

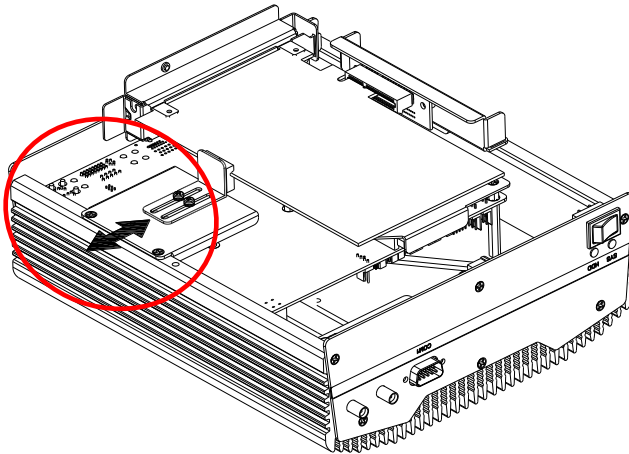

Chapter 3

AMI BIOS Setup

3.1 System Test and Initialization

The system uses certain routines to perform testing and initialization. If an error, fatal or non-fatal, is encountered, a few short beeps or an error message will be outputted. The board can usually continue the boot up sequence with non-fatal errors.

The system configuration verification routines check the current system configuration against the values stored in the CMOS memory. If they do not match, an error message will be outputted, in which case you will need to run the BIOS setup program to set the configuration information in memory.

There are three situations in which you will need to change the CMOS settings:

- You are starting your system for the first time
- You have changed your system's hardware
- The CMOS memory has lost power and the configuration information is erased

The system's CMOS memory uses a backup battery for data retention, which is to be replaced once emptied.

3.2 AMI BIOS Setup

The AMI BIOS ROM has a pre-installed Setup program that allows users to modify basic system configurations, which is stored in the battery-backed CMOS RAM and BIOS NVRAM so that the information is retained when the power is turned off.

To enter BIOS Setup, press or <F2> immediately while your computer is powering up.

The function for each interface can be found below.

Main – Date and time can be set here. Press <Tab> to switch between date elements

Advanced – Enable/ Disable boot option for legacy network devices


Chipset – For hosting bridge parameters

Boot – Enable/ Disable quiet Boot Option


Security – The setup administrator password can be set here

Save & Exit – Save your changes and exit the program


3.3 Setup Submenu: Main

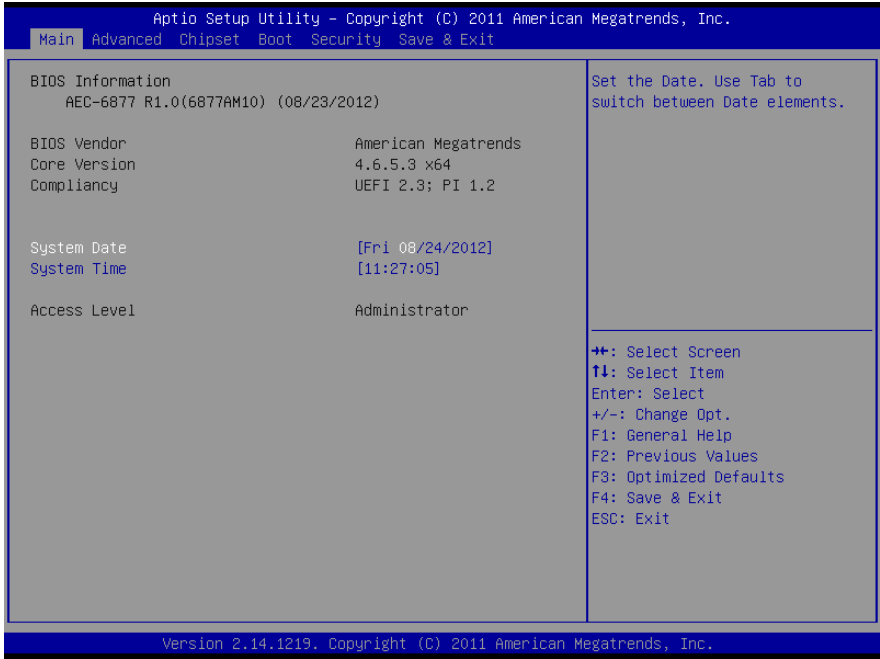

3.4 Setup Submenu: Advanced

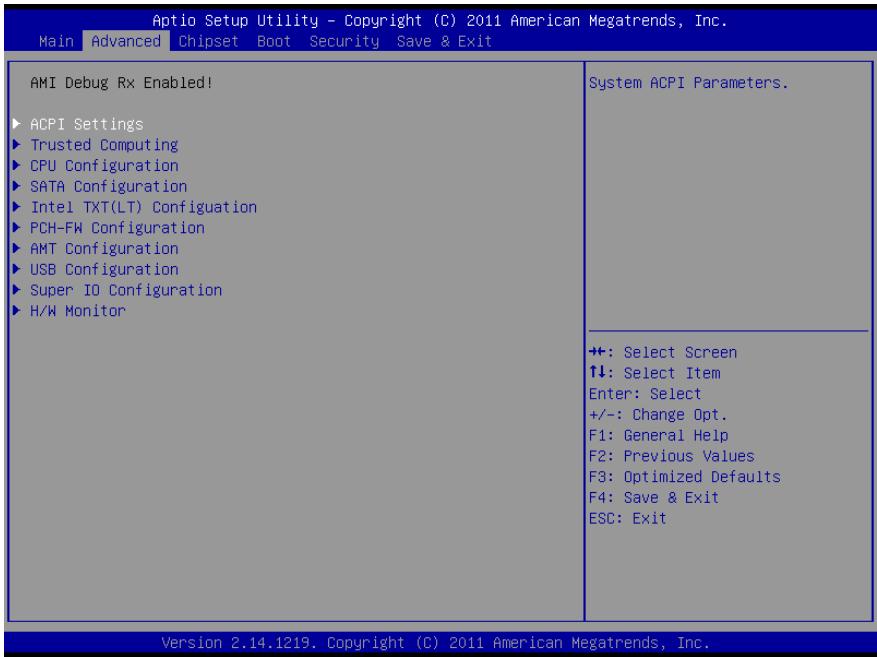

3.4.1 Advanced: ACPI Settings

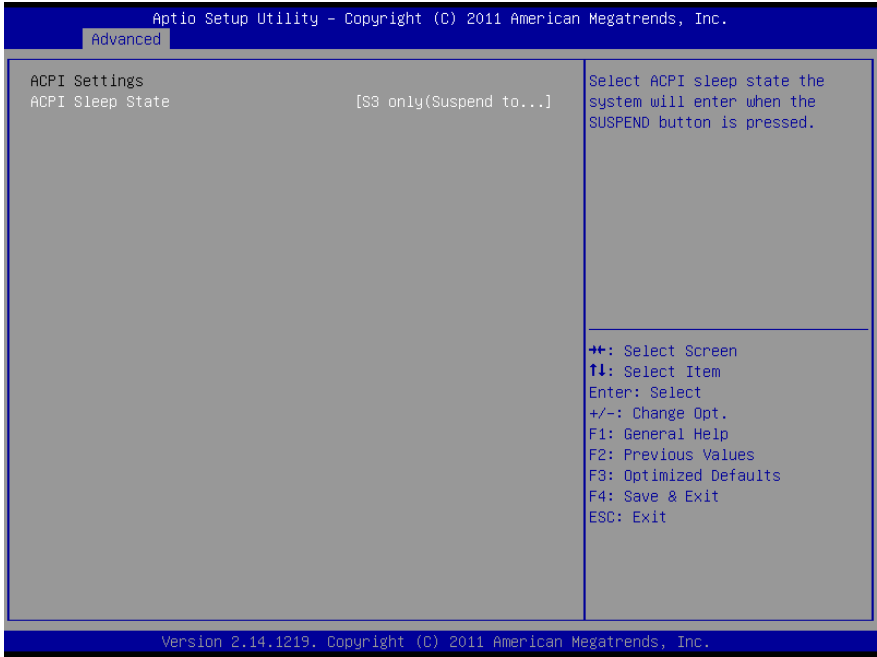


Options Summary:

ACPI Sleep State	Suspend Disabled	
	S1 (CPU Stop Clock)	
	S3 (Suspend to RAM)	Default

Select the ACPI sleep state the system will enter when the SUSPEND button is pressed.


3.4.2 Advanced: Trusted Computing

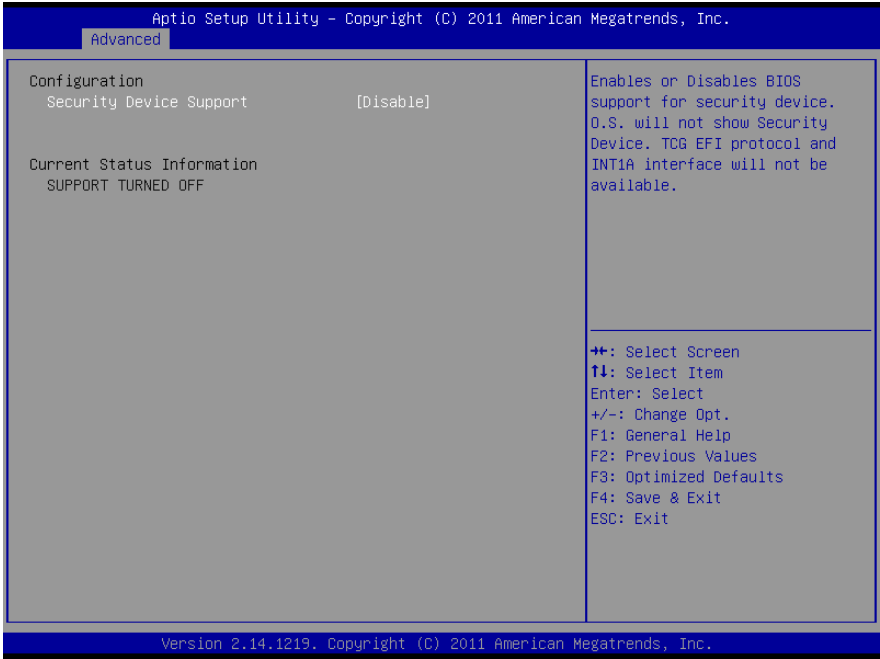

Option Summary:

TPM SUPPORT	Disable	Default
	Enable	
<p>Enables or Disables BIOS support for security device. O.S. will not show Security Device. TCG EFI protocol and INT1A interface will not be available.</p>		


3.4.3 Advanced: CPU Configuration

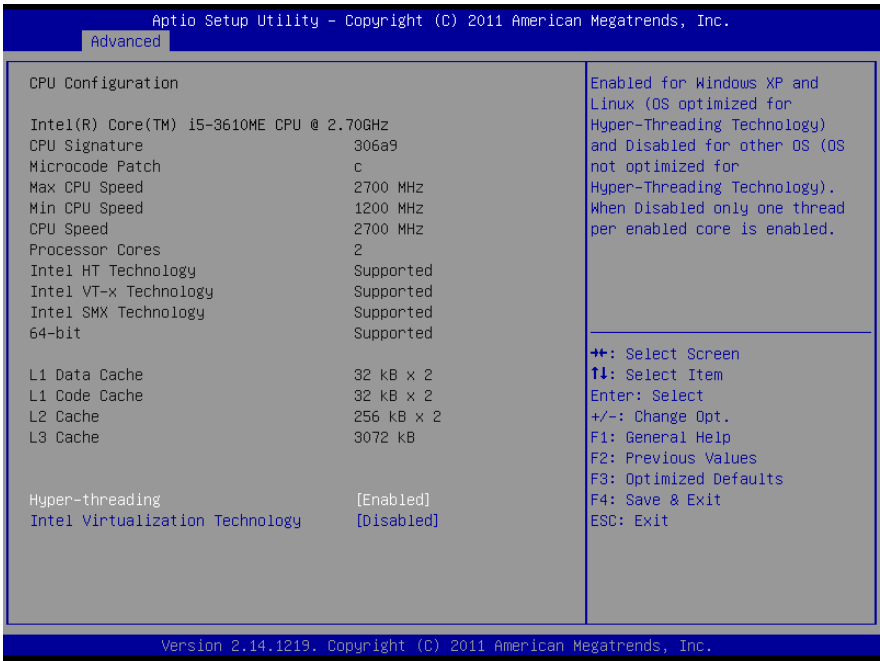

Options Summary:

Hyper-threading	Disabled	
	Enabled	Default
Enabled for Windows XP and Linux (OS optimized for Hyper-Threading Technology) and Disabled for other OS (OS not optimized for Hyper-Threading Technology). When Disabled only one thread per enabled core is enabled.		
Intel Virtualization Technology	Disabled	Default
	Enabled	
When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology		


3.4.4 Advanced: SATA Configuration (IDE)

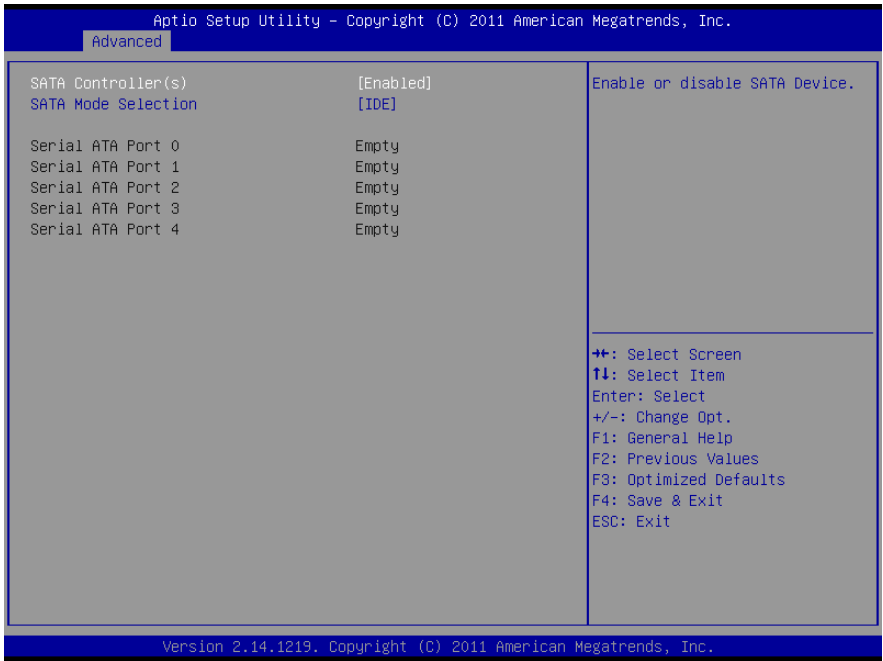

Options Summary:

SATA Controller(s)	Enabled	Default
	Disabled	
Enable or disable SATA Device.		
SATA Mode Selection	IDE	Default
	AHCI	
	RAID	
Determines how SATA controller(s) operate.		


3.4.5 Advanced: SATA Configuration (AHCI)

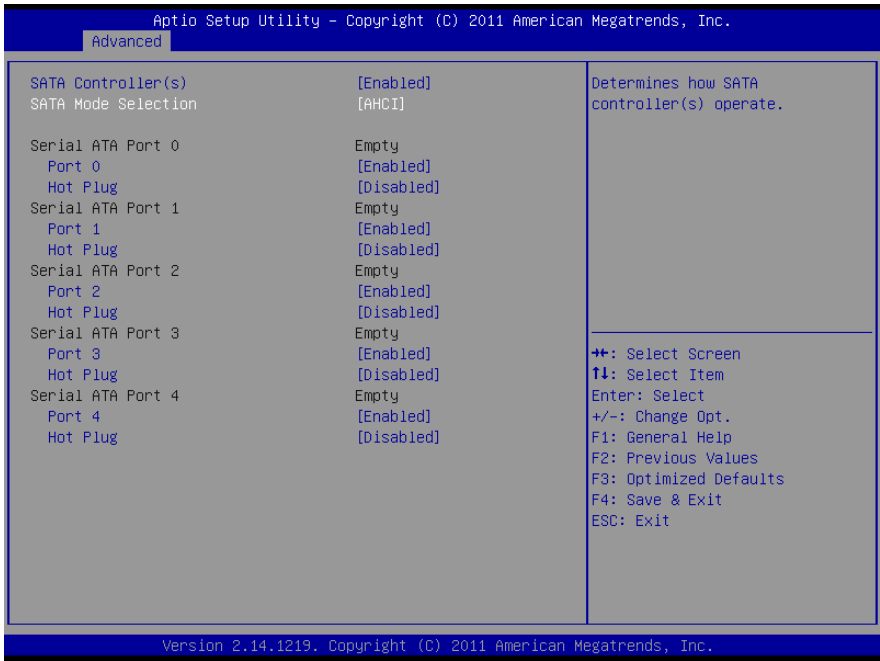

Options Summary:

SATA Controller(s)	Disabled	
	Enabled	Default
Enable or Disable SATA Port.		
SATA Mode Selection	IDE	
	AHCI	Selected
	RAID	
Determines how SATA controller(s) operate.		
Port 0 ~ Port 4	Disable	
	Enabled	Enabled
Enable or Disable SATA Port		
Serial ATA Port Hot Plug Port 0 ~ Port 4	Disable	Default
	Enabled	
Designates this port as Hot Pluggable.		


3.4.6 Advanced: SATA Configuration (RAID)

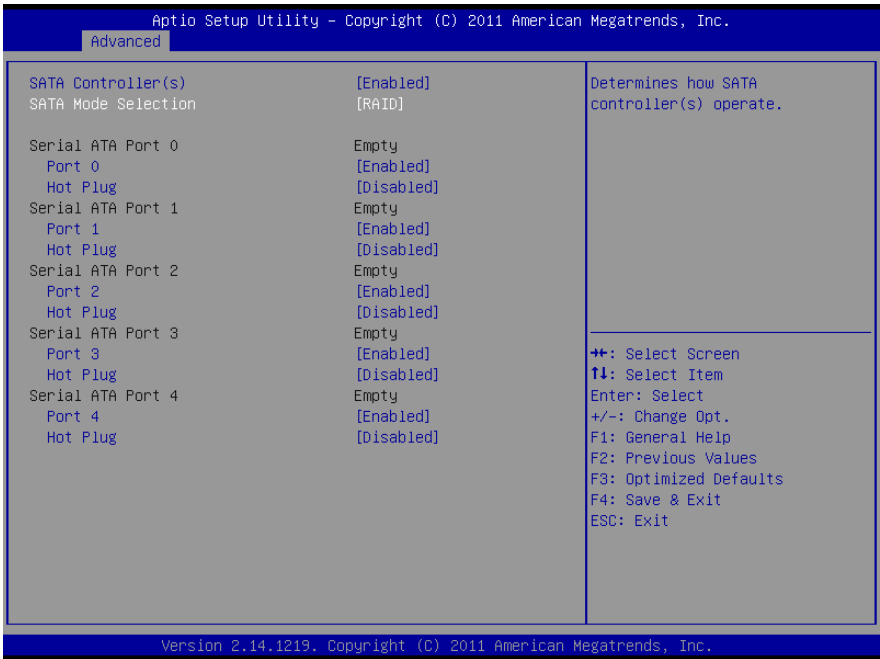

Options Summary:

SATA Controller(s)	Disabled	
	Enabled	Default
Enable or Disable SATA Port.		
SATA Mode Selection	IDE	
	AHCI	
	RAID	Selected
Determines how SATA controller(s) operate.		
Port 0 ~ Port 4	Disable	
	Enabled	Enabled
Enable or Disable SATA Port		
Serial ATA Port Hot Plug Port 0 ~ Port 4	Disable	Default
	Enabled	
Designates this port as Hot Pluggable.		


3.4.7 Advanced: Intel TXT (LT) Configuration

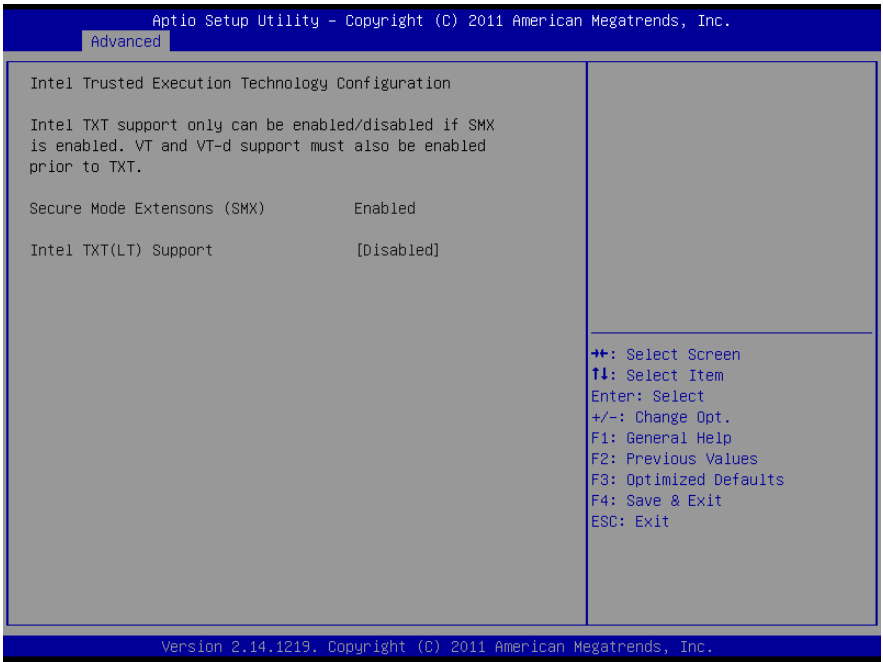

Options summary: (default setting)

Serial Port 1/2/3/4 Configuration		
Set Parameters of Serial Port 1/2/3/4		
Restore AC Power Loss	Power Off	
	Power On	
	Last State	
Select AC power state when power is re-applied after a power failure.		
EuP Power Control	Disabled	
	Enabled	
Configure Energy-using Product(EuP) Power Control.		


3.4.8 Advanced: PCH-FW Configuration

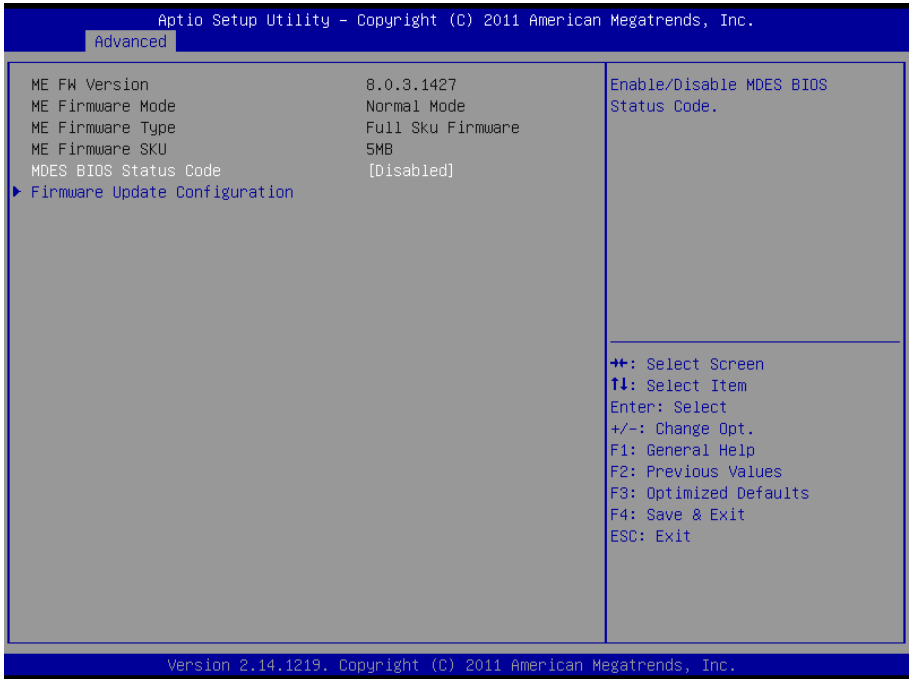

Options Summary:

MDES BIOS Status Code	Disabled	Default
	Enabled	
Enable/Disable MDES BIOS Status Code.		
Firmware Update Configuration	Configure Management Engine Technology Parameters	


3.4.8.1 PCH-FW Configuration: Firmware Update Configuration

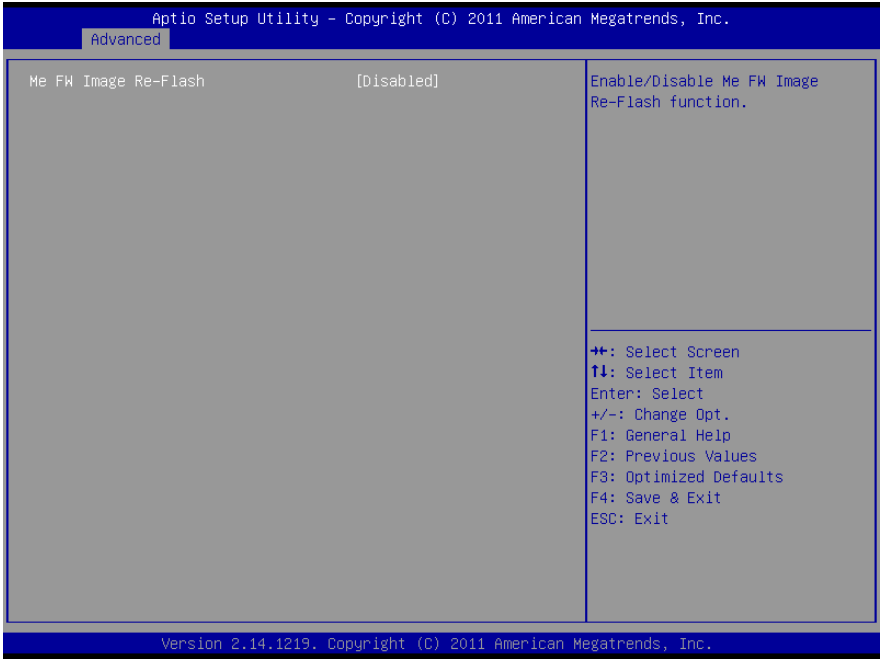

Options Summary:

Me FW Image Re-Flash	Disabled	Default
	Enabled	
Enable/Disable Me FW Image Re-Flash function.		


3.4.9 Advanced: AMT Configuration

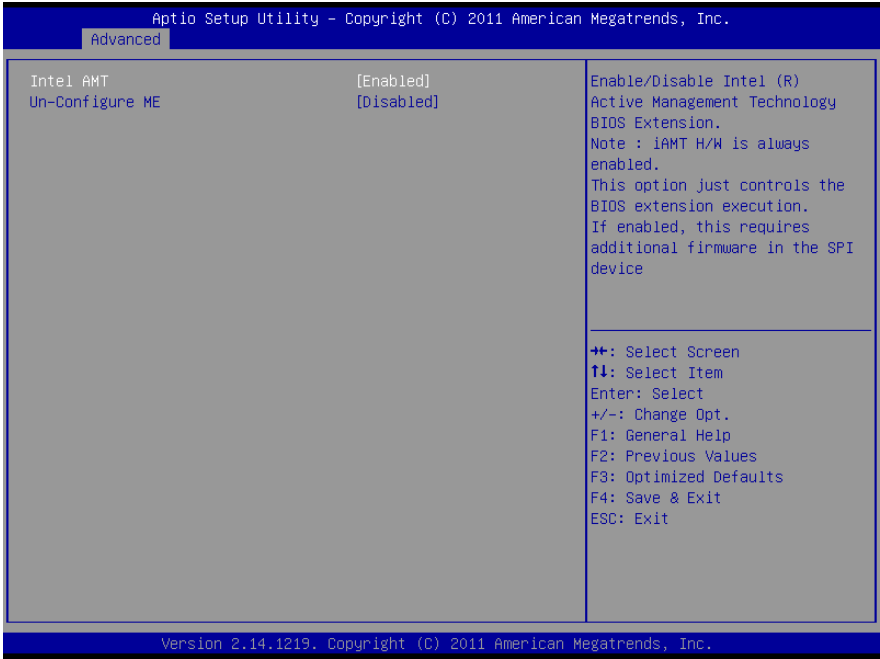

Options Summary:

Intel AMT	Disabled	
	Enabled	Default
Enable/Disable Intel ® Active Management Technology BIOS Extension. Note : iAMT H/W is always enabled. This option just controls the BIOS extension execution. If enabled, this requires additional firmware in the SPI device		
Un-Configure ME	Disabled	Default
	Enabled	
OEMFlag Bit 15: Un-Configure ME without password.		


3.4.10 Advanced: USB Configuration

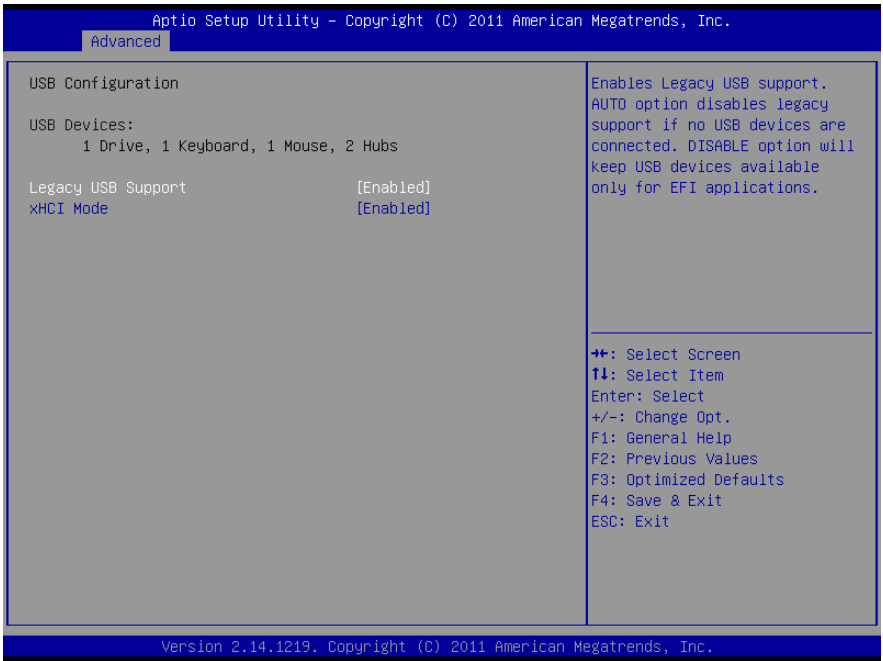

Options Summary:

Legacy USB Support	Enabled	Default
	Disabled	
	Auto	
<p>Enable Legacy USB support. AUTO option disables legacy support if no USB devices are connected. DISABLE option will keep USB devices available only for EFI applications.</p>		
xHCI Mode	Disabled	
	Enabled	
Mode of operation of xHCI controller:		


3.4.11 Advanced: Super IO Configuration

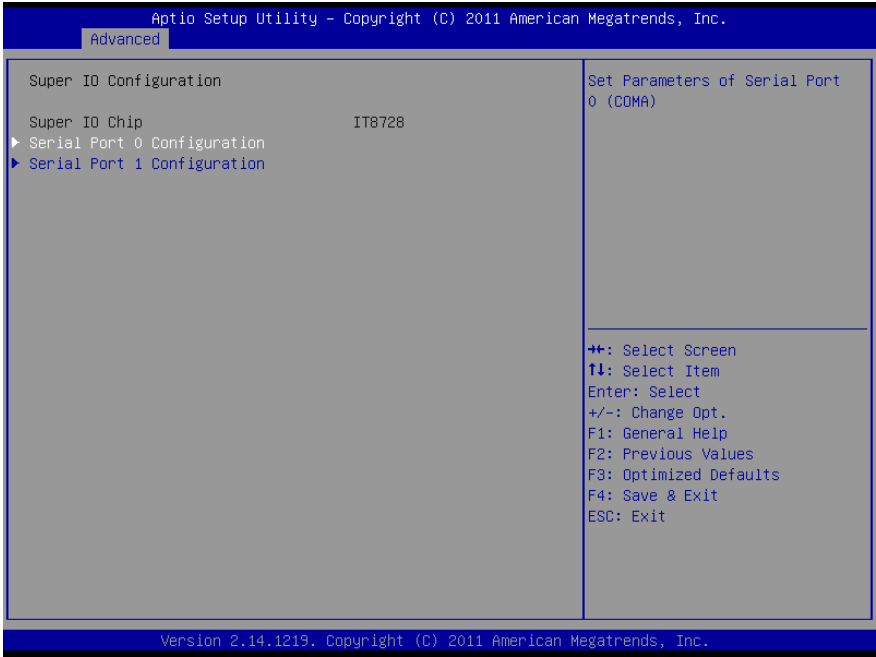

Options Summary :

Serial Port 0 Configuration	Set Parameters of Serial Port 3 (COMA)
Serial Port 1 Configuration	Set Parameters of Serial Port 4 (COMB)


3.4.11.1 Super IO Configuration: Serial Port 0 Configuration

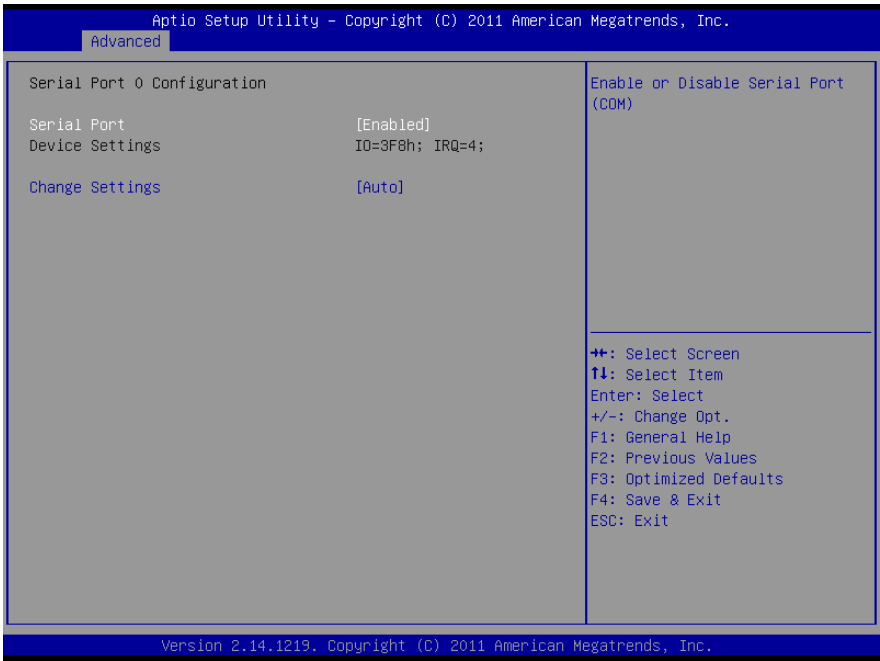

Options Summary:

Serial Port	Disabled	
	Enabled	Default
Enable or Disable Serial Port (COM)		
Change Settings	Auto	Default
	IO=3F8h; IRQ=3,4;	
	IO=2F8h; IRQ=3,4;	
	IO=3E8h; IRQ=3,4;	
	IO=2E8h; IRQ=3,4;;	
Select an optimal setting for Super IO device.		

3.4.11.2 Super IO Configuration: Serial Port 1 Configuration

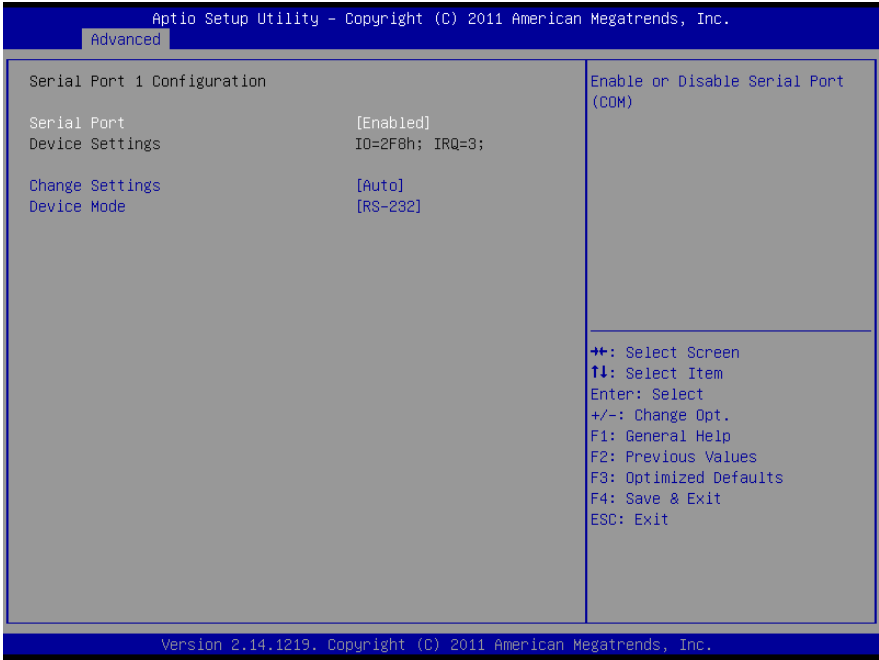

Options Summary:

Serial Port	Disabled	
	Enabled	Default
Enable or Disable Serial Port (COM)		
Change Settings	Auto	Default
	IO=3F8h; IRQ=3,4;	
	IO=2F8h; IRQ=3,4;	
	IO=3E8h; IRQ=3,4;	
IO=2E8h; IRQ=3,4;;		
Select an optimal setting for Super IO device.		
Device Mode	RS-232	Default
	RS-422	
	RS-485	
Change the Serial Port mode. Select <RS-232> or <RS-422> or <RS-485> mode		

3.4.12 Advanced: H/W Monitor

Aptio Setup Utility - Copyright (C) 2011 American Megatrends, Inc.


Advanced

Pc Health Status		For En/Disable CPU Fan1 Control Enabled: Fan is running in accordance with user settings Disabled: Fan is always running with full speed
CPU Fan1 Control	[Disabled]	
SYS Fan1 Control	[Disabled]	
CPU Temperature	: +44 C	
PCH Temperature	: +36 C	
System Temperature	: +31 C	
CPU Fan1 Speed	: N/A	
SYS Fan1 Speed	: 7941 RPM	
VCORE	: +0.900 V	
+V1.5S	: +1.500 V	
+V3.3S	: +3.360 V	
+V5S	: +5.040 V	
+V12S	: +11.904 V	
VBAT	: +3.048 V	

++: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.14.1219. Copyright (C) 2011 American Megatrends, Inc.


3.5 Setup submenu: Chipset

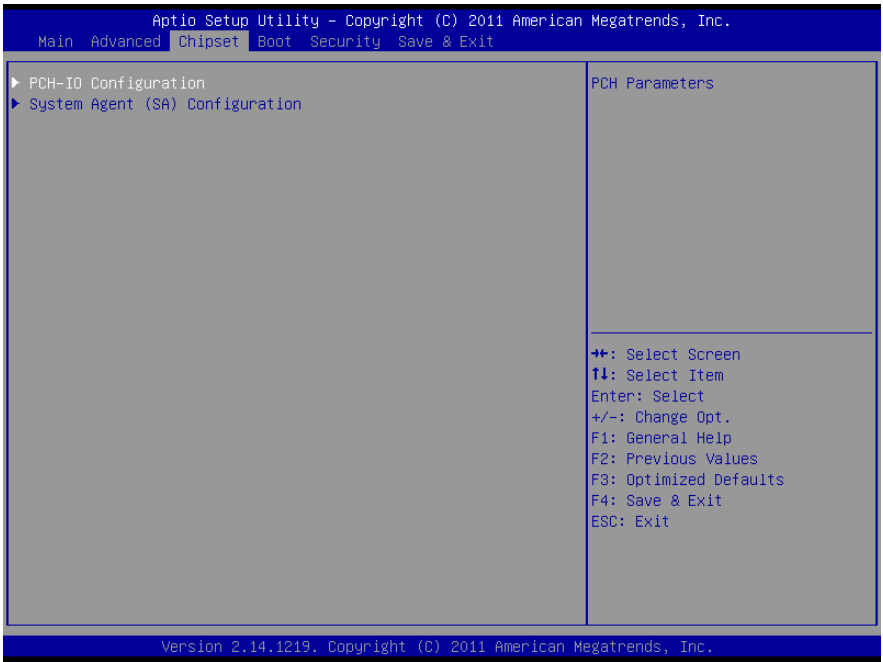

Options summary: **(default setting)**

Onboard Device		
Configure Onboard Devices		
PCI-IO Configuration		
South Bridge Parameters		
Memory Configuration		
Memory Parameters		
Graphic Configuration		
Graphic Parameters		

3.5.1 Chipset: PCH-IO Configuration

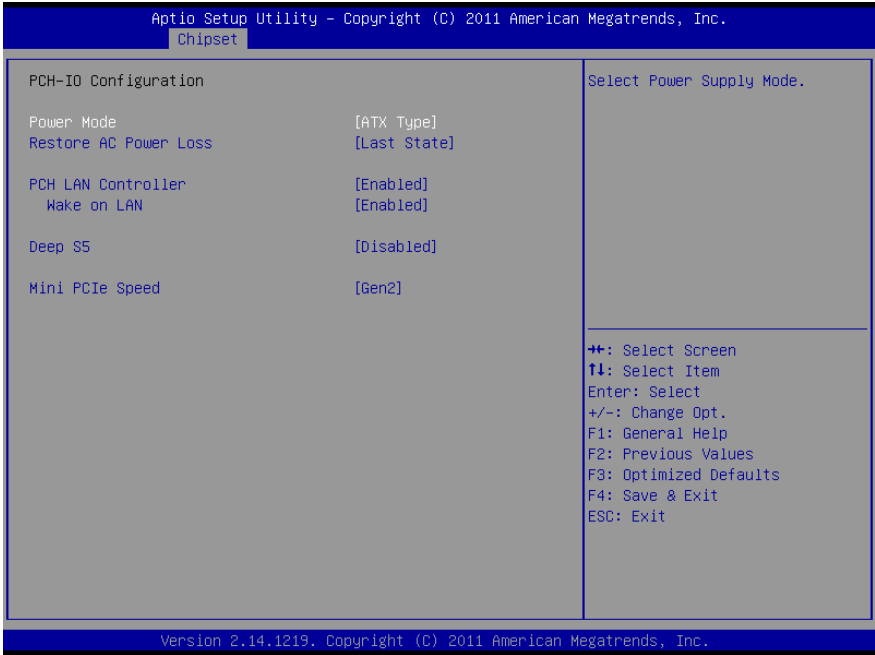

Options Summary:

Power Mode	ATX Type	Default
	AT Type	
Select power supply mode.		
Restore AC Power Loss	Power off	
	Power on	
	Last State	Default
Select AC power state when power is re-applied after a power failure. Notice: The system will power up after restore AC power if this item set to last state and shuts down via iAMT remote control.		
PCH LAN Controller	Enabled	Default
	Disabled	
Enable or disable onboard NIC.		
Wake on LAN	Enabled	Default
	Disabled	
Enable or disable integrated LAN to wake the system. (The Wake On LAN cannot be disabled if ME is on at Sx state.)		

Deep S5	Disabled	Default
	Enabled	
Enabled/Disabled Deep S5. Note : When Deep S5 is enabled, Intel ® AMT and Wake On PCH LAN functions are not available In system shut down.		
Mini PCIe Speed	Gen1	
	Gen2	Default
Select Mini PCI Express port speed.		


3.5.2 Chipset: System Agent (SA) Configuration



Options Summary:

VT-d	Disabled	
	Enabled	Default
Check to enable VT-d function on MCH		
PEG0 – Gen X	Auto	Default
	Gen1	
	Gen2	
	Gen3	
Configure PEG0 B0:D1:F0 Gen1-Gen3		
Graphics Configuration	Config Graphics Settings.	

3.5.3 Chipset: Graphic Configuration

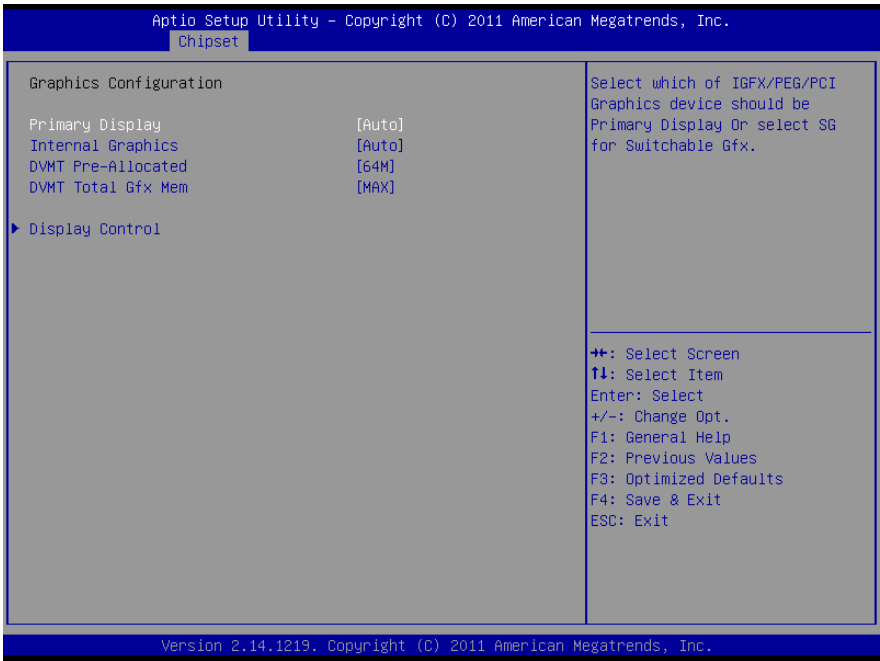

Options Summary :

Primary Display	Auto	Default
	IGfx	
	PEG	
Select which of IGFX/PEG/PCI Graphics device should be Primary Display Or select SG for Switchable Gfx		
Internal Graphics	Auto	Default
	Disabled	
	Enabled	
Keep IGD enabled based on the setup options.		
DVMT Pre-Allocated	0M	
	32M	
	64M	Default
	96M	
	128M	
	160M	
	192M	

	224M	
	256M	
	288M	
	320M	
	352M	
	384M	
	416M	
	448M	
	480M	
	512M	
Select DVMT 5.0 Pre-Allocated (Fixed) Graphics Memory size used by the Internal Graphics Device.		
DVMT Total Gfx Mem	128M	
	256M	
	MAX	Default
Select DVMT5.0 Total Graphic Memory size used by the Internal Graphics Device.		


3.5.3.1 Graphic Configuration: Display Control



Options Summary:

Boot Display Select	VBIOS Default	Default
	CRT	
	DisplayPort 1	
	DVI	
	DisplayPort 2	
<p>Select the Video Device during POST and DOS. This has no effect if external graphics present.</p>		


3.6 Setup submenu: Boot

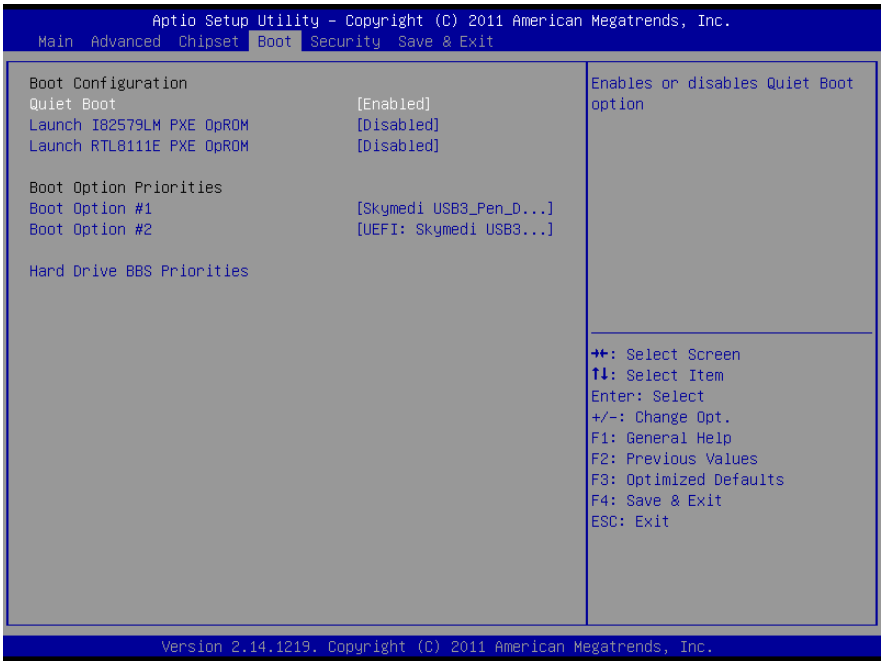


Options Summary :

Quiet Boot	Disabled	
	Enabled	Default
Enables or disables Quiet Boot option		
Launch I82579LM PXE OpROM	Disabled	Default
	Enabled	
Enable or Disable Legacy Boot Option for I82579LM.		
Launch RTL8111E PXE OpROM	Disabled	Default
	Enabled	
Enable or Disable Legacy Boot Option for RTL8111E		
Boot options #X	Your storage/disk devices	
Sets the system boot order		

3.6.1 Boot: Hard Drive BBS Priorities

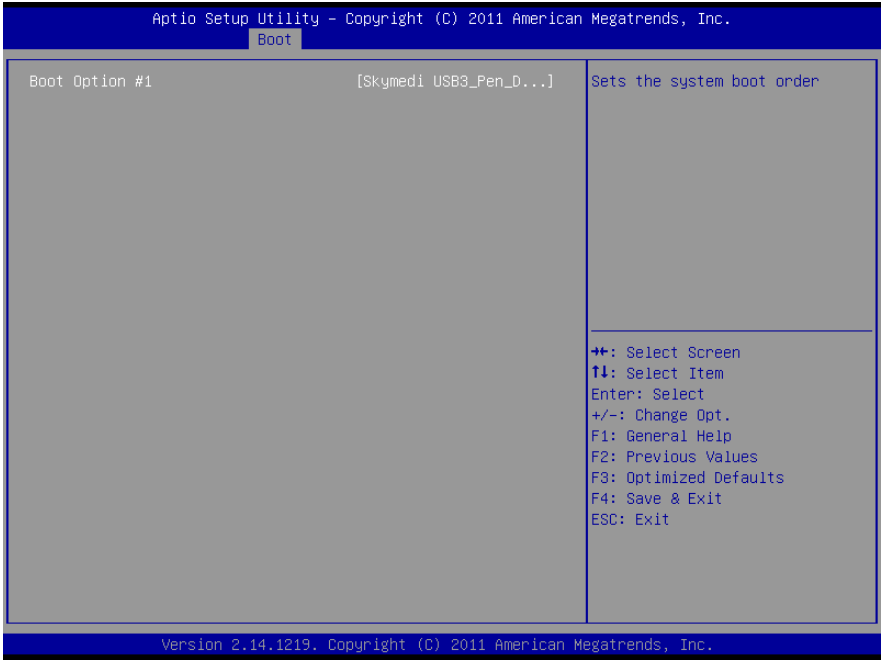

3.7 Security

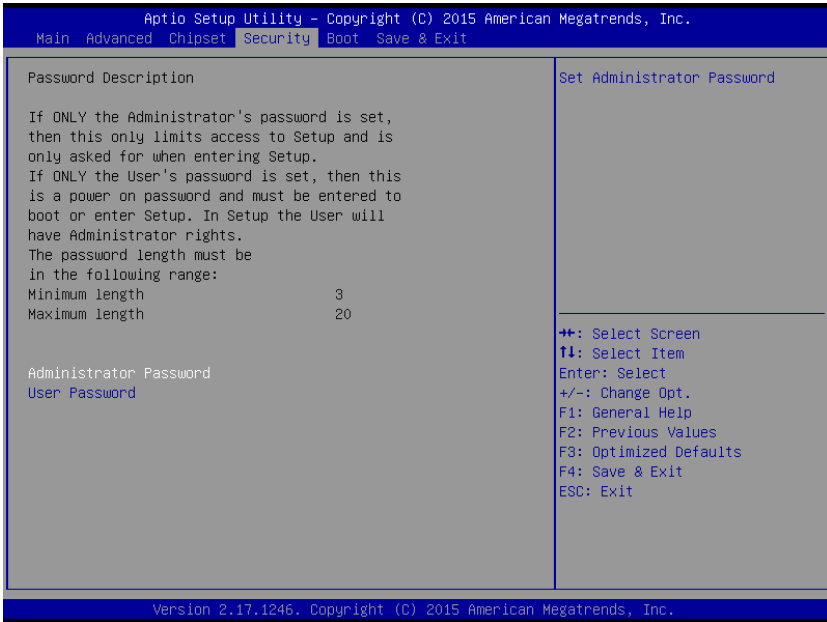

Change User/Administrator Password


You can set a User Password once an Administrator Password is set. The password will be required during boot up, or when the user enters the Setup utility. Please Note that a User Password does not provide access to many of the features in the Setup utility.

Select the password you wish to set, press Enter to open a dialog box to enter your password (you can enter no more than six letters or numbers). Press Enter to confirm your entry, after which you will be prompted to retype your password for a final confirmation. Press Enter again after you have retyped it correctly.

Removing the Password

Highlight this item and type in the current password. At the next dialog box press Enter to disable password protection.

3.8 Setup submenu: Save & Exit

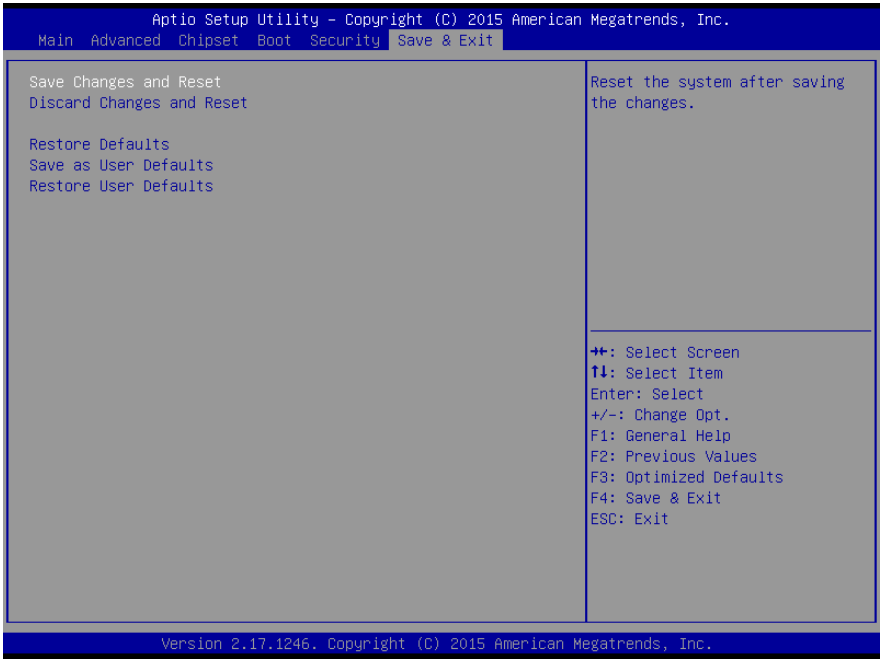

Chapter 4

Drivers Installation

4.1 Product CD/DVD

The AEC-6877 comes with a product DVD that contains all the drivers and utilities you need to setup your product. Insert the DVD and follow the steps in the autorun program to install the drivers.

In case the program does not start, follow the sequence below to install the drivers.

Step 1 – Install Chipset Driver

1. Open the **STEP1 - Chipset** folder and select your OS
2. Open the **.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Step 2 – Install Graphic Driver

1. Open the **STEP2 - VGA** folder and select your OS
2. Open the **Setup.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Note: If you are using Windows XP, install **dotnet35.exe** first.

Step 3 – Install LAN Driver

1. Open the **STEP3 – LAN** folder
2. Both Intel and Realtek drivers have to be installed. Open either folder and select your OS
3. Open the **.exe** file in the folder and follow the instructions
4. Drivers will be installed automatically
5. Repeat step 2-4 for the remaining driver

Step 4 – Install Audio Driver

1. Open the **STEP4 - Audio** folder and select your OS
2. Open the **Setup.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Step 5 – Install USB 3.0 Driver (Windows 7 only)

1. Open the **STEP5 – USB3.0** folder followed by **Setup.exe**
2. Follow the instructions
3. Drivers will be installed automatically

Step 6 – Install RAID & AHCI Driver

Please refer to Appendix C


Step 7 – Install ME Driver

1. Open the **STEP7 - ME** folder and select your OS
2. Open the **.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically


Step 8 – Install Serial Port Driver (Optional)

For Windows 7:


1. Change User Account Control settings to **Never notify**

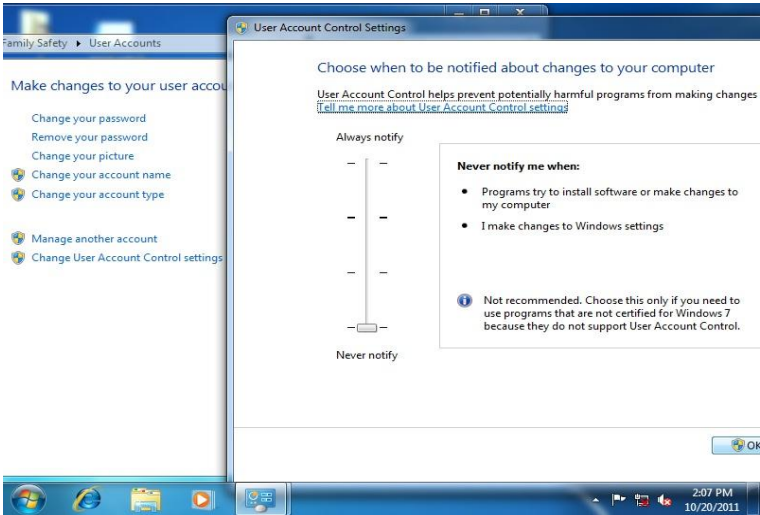

2. Reboot and log in as administrator

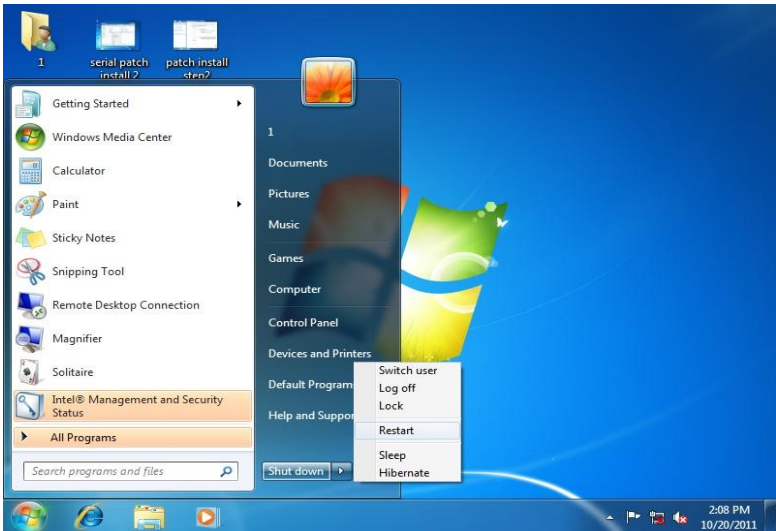


3. Run patch.bat as administrator

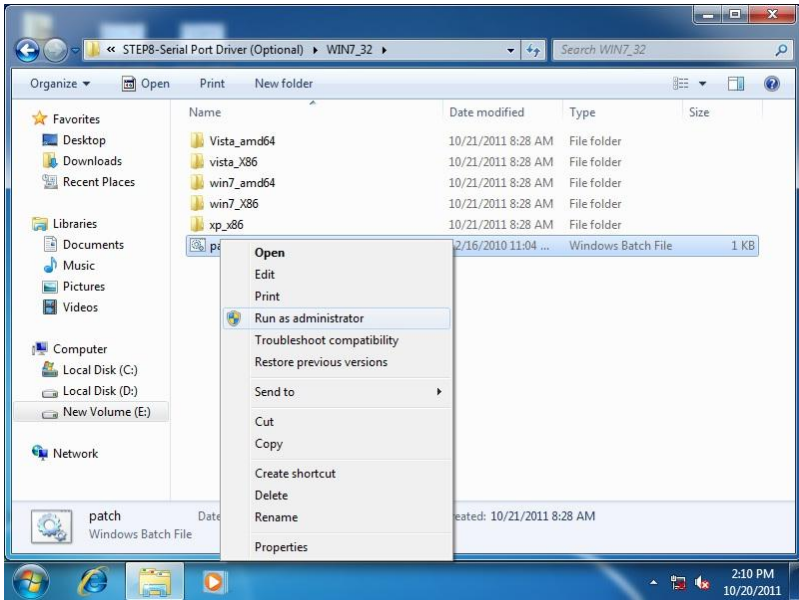


For Windows 8:


1. Open the Apps Screen, right click on the **Command Prompt** tile and select **Run as Administrator**

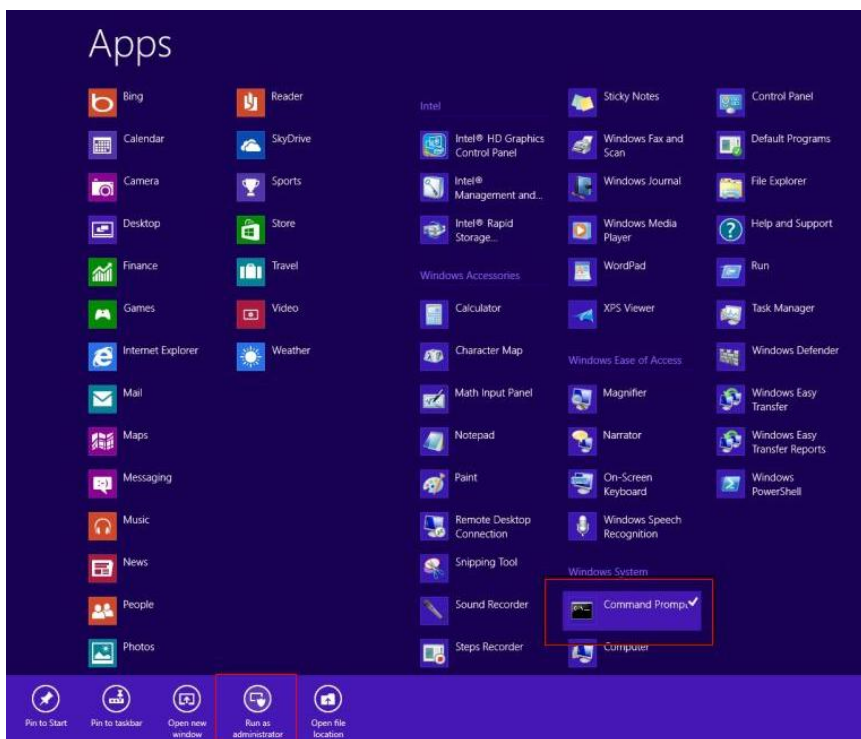

2. To install the driver (patch.bat), you will first have to locate the file in command prompt. To do that, go to the folder in which the file resides by entering **cd (file path)** eg: if the file is in a folder named abc in c drive, enter `cd c:\abc` (screenshot for reference only)
3. You are now at the folder where the file is located. Enter the **patch.bat** to open and install the drivers.

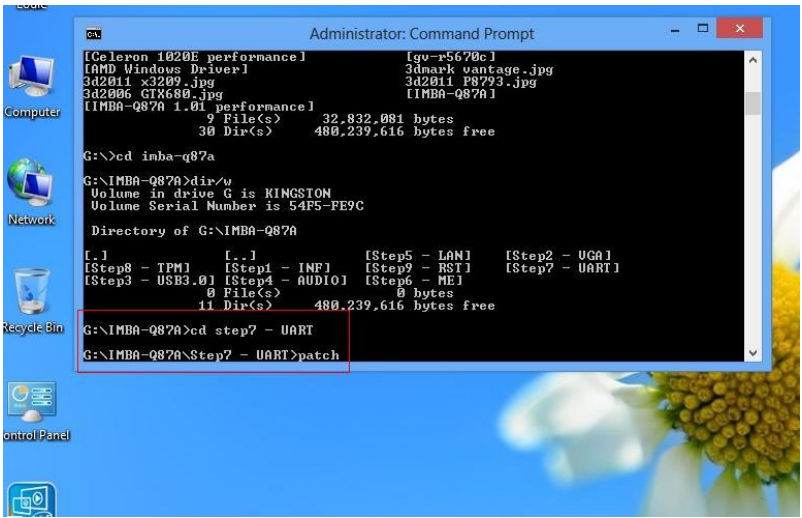


4. Reboot after installation completes.
5. To confirm the installation, go to Device Manager, expand the Ports (COM & LPT) tree and double click on any of the COM ports to open its properties. Go to the Driver tab, select Driver Details and click on **serial.sys**, you should see its provider as **Windows (R) Win 7 DDK Provider**.

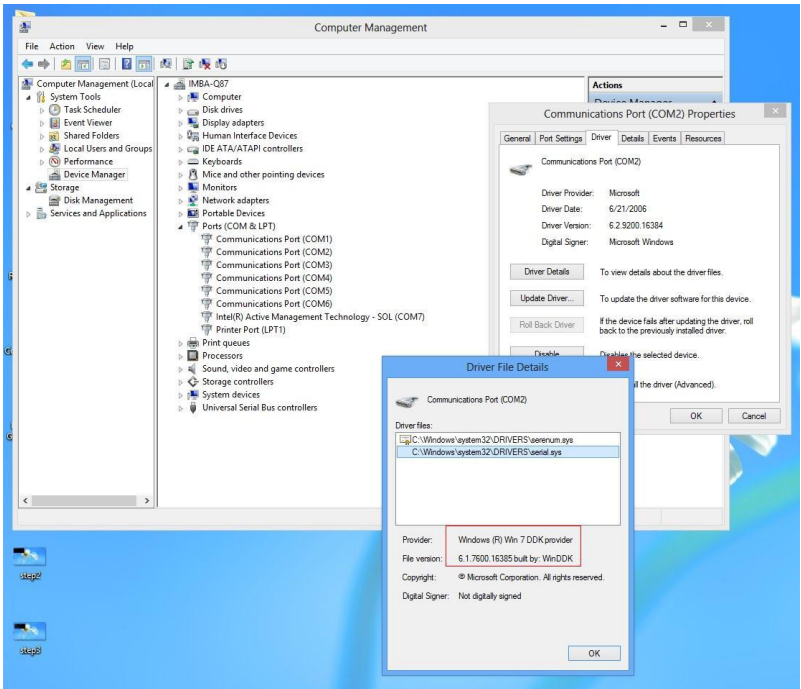


For Windows 10:

1. You will need administrator rights to install the drivers. To get it, first go to **Computer Management** in **Control Panel** and double-click on **Administrator**

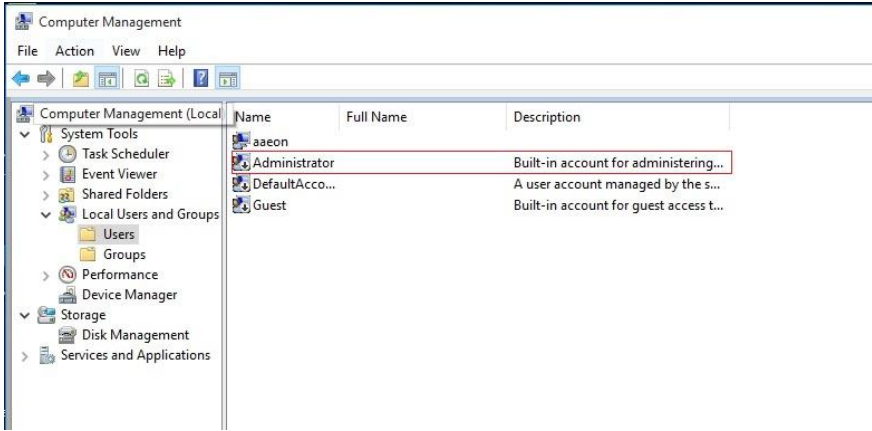


2. In the dialog box, **uncheck** the **Account is disabled** option to enable administrator account.

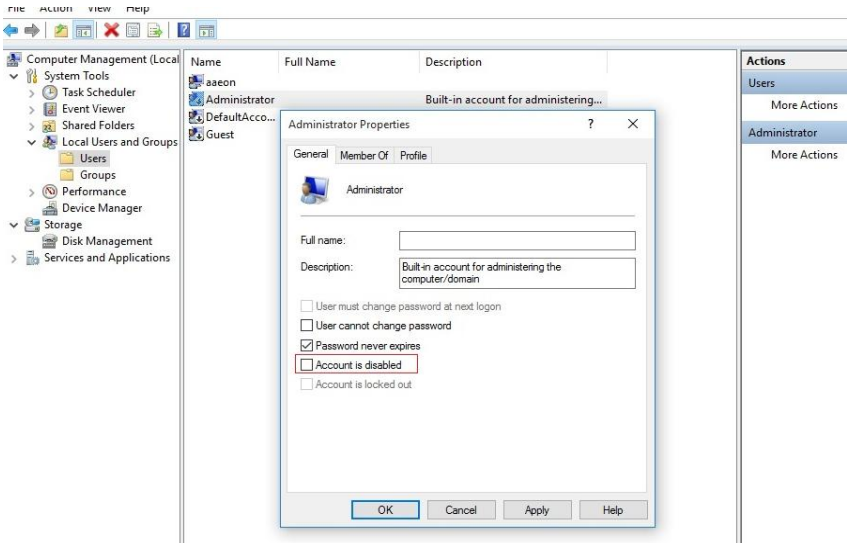

- Restart and sign in as the administrator (not password-protected by default)



- Go back to the Windows 10 Serial Port drivers directory and run `patch.bat` as administrator.

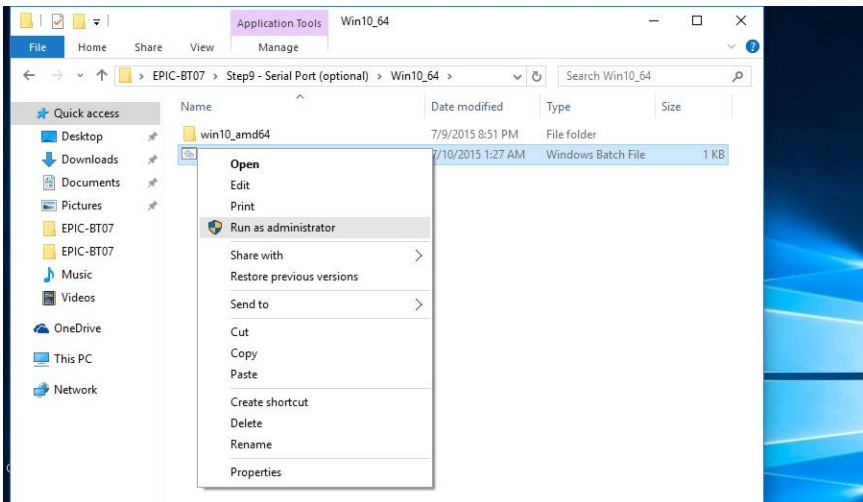

Appendix A

Watchdog Timer Programming


A.1 Watchdog Timer Programming

AEC-6877 utilizes ITE IT8728 chipset as its watchdog timer controller.

Below are the procedures to complete its configuration and the AAEON initial watchdog timer program is also attached based on which you can develop customized program to fit your application.

Configuring Sequence Description

After the hardware reset or power-on reset, the ITE 8728F enters the normal mode with all logical devices disabled except KBC. The initial state (enable bit) of this logical device (KBC) is determined by the state of pin 121 (DTR1#) at the falling edge of the system reset during power-on reset.

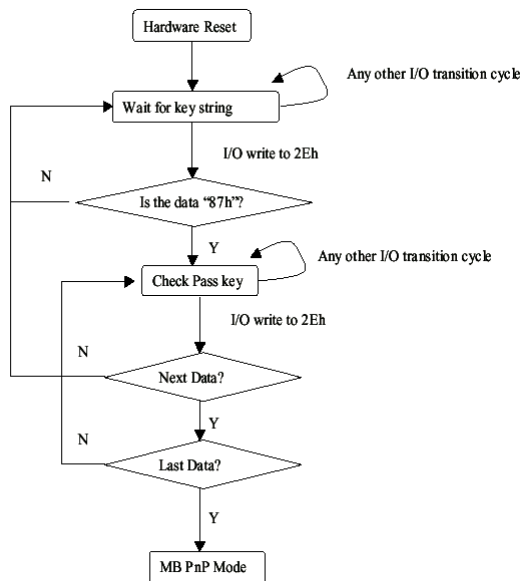

There are three steps to complete the configuration setup: (1) Enter the MB PnP Mode; (2) Modify the data of configuration registers; (3) Exit the MB PnP Mode. Undesired result may occur if the MB PnP Mode is not exited normally.

(1) Enter the MB PnP Mode

To enter the MB PnP Mode, four special I/O write operations are to be performed during Wait for Key state. To ensure the initial state of the key-check logic, it is necessary to perform four write operations to the Special Address port (2EH). Two different enter keys are provided to select configuration ports (2Eh/2Fh) of the next step.

	Address Port	Data Port
87h, 01h, 55h, 55h:	2Eh	2Fh

(2) Modify the Data of the Registers

All configuration registers can be accessed after entering the MB PnP Mode. Before accessing a selected register, the content of Index 07h must be changed to the LDN to which the register belongs, except some Global registers.

(3) Exit the MB PnP Mode

Set bit 1 of the configure control register (Index=02h) to 1 to exit the MB PnP Mode.

WatchDog Timer Configuration Registers

LDN	Index	R/W	Reset	Configuration Register or Action
All	02H	W	N/A	Configure Control
07H	71H	R/W	00H	WatchDog Timer Control Register
07H	72H	R/W	00H	WatchDog Timer Configuration Register
07H	73H	R/W	00H	WatchDog Timer Time-out Value Register

Configure Control (Index=02h)

This register is write only. Its values are not sticky; that is to say, a hardware reset will automatically clear the bits, and does not require the software to clear them.

Bit	Description
7-2	Reserved
1	Returns to the Wait for Key state. This bit is used when the configuration sequence is completed
0	Resets all logical devices and restores configuration registers to their power-on states.

WatchDog Timer Control Register (Index=71h, Default=00h)

Bit	Description
7	WDT is reset upon a CIR interrupt
6	WDT is reset upon a KBC (mouse) interrupt
5	WDT is reset upon a KBC (keyboard) interrupt
4	WDT is reset upon a read or a write to the Game Port base address
3-2	Reserved
1	Force Time-out. This bit is self-clearing
0	WDT Status 1: WDT value reaches 0. 0: WDT value is not 0

WatchDog Timer Configuration Register (Index=72h, Default=00h)

Bit	Description
7	WDT Time-out value select 1: Second 0: Minute
6	WDT output through KRST (pulse) enable
5-4	Reserved
3-0	Select the interrupt level ^{Note} for WDT

WatchDog Timer Time-out Value Register (Index=73h, Default=00h)

Bit	Description
7-0	WDT Time-out value 7-0

A.2 ITE8728 Watchdog Timer Initial Program

```
.MODEL SMALL
```

```
.CODE
```

Main:

```
CALL Enter_Configuration_mode
```

```
CALL Check_Chip
```

```
mov cl, 7
```

```
call Set_Logic_Device
```

```
;time setting
```

```
mov cl, 10 ; 10 Sec
```

```
dec al
```

Watch_Dog_Setting:

```
;Timer setting
```

```
mov al, cl
```

```
mov cl, 73h
```

```
call Superio_Set_Reg
```

```
;Clear by keyboard or mouse interrupt
```

```
mov al, 0f0h
```

```
mov cl, 71h
```

```
call Superio_Set_Reg
```

```
;unit is second.
```

```
mov al, 0C0H
```

```
mov cl, 72h
```

```
call Superio_Set_Reg
```

```
; game port enable
```

```
mov cl, 9
```

```
call Set_Logic_Device
```

Initial_OK:

CALL Exit_Configuration_mode

MOV AH,4Ch

INT 21h

Enter_Configuration_Mode PROC NEAR

MOV SI,WORD PTR CS:[Offset Cfg_Port]

MOV DX,02Eh

MOV CX,04h

Init_1:

MOV AL,BYTE PTR CS:[SI]

OUT DX,AL

INC SI

LOOP Init_1

RET

Enter_Configuration_Mode ENDP

Exit_Configuration_Mode PROC NEAR

MOV AX,0202h

CALL Write_Configuration_Data

RET

Exit_Configuration_Mode ENDP

Check_Chip PROC NEAR

MOV AL,20h


```
CALL Read_Configuration_Data
CMP AL,87h
JNE Not_Initial
```

```
MOV AL,21h
CALL Read_Configuration_Data
CMP AL,12h
JNE Not_Initial
```

Need_Initial:

```
STC
RET
```

Not_Initial:

```
CLC
RET
Check_Chip ENDP
Read_Configuration_Data PROC NEAR
MOV DX,WORD PTR CS:[Cfg_Port+04h]
OUT DX,AL
MOV DX,WORD PTR CS:[Cfg_Port+06h]
IN AL,DX
RET
Read_Configuration_Data ENDP
```

```
Write_Configuration_Data PROC NEAR
MOV DX,WORD PTR CS:[Cfg_Port+04h]
OUT DX,AL
XCHG AL,AH
```

```
MOV DX,WORD PTR CS:[Cfg_Port+06h]
OUT DX,AL
RET
Write_Configuration_Data ENDP
```

```
Superio_Set_Reg proc near
push ax
MOV DX,WORD PTR CS:[Cfg_Port+04h]
mov al,cl
out dx,al
pop ax
inc dx
out dx,al
ret
Superio_Set_Reg endp.Set_Logic_Device proc near
Set_Logic_Device proc near
push ax
push cx
xchg al,cl
mov cl,07h
call Superio_Set_Reg
pop cx
pop ax
ret
Set_Logic_Device endp
```

```
;Select 02Eh->Index Port, 02Fh->Data Port
Cfg_Port DB 087h,001h,055h,055h
```

DW 02Eh,02Fh

END Main

Note: Interrupt level mapping

0Fh-Dh: not valid

0Ch: IRQ12

.

.

03h: IRQ3

02h: not valid


01h: IRQ1

00h: no interrupt selected







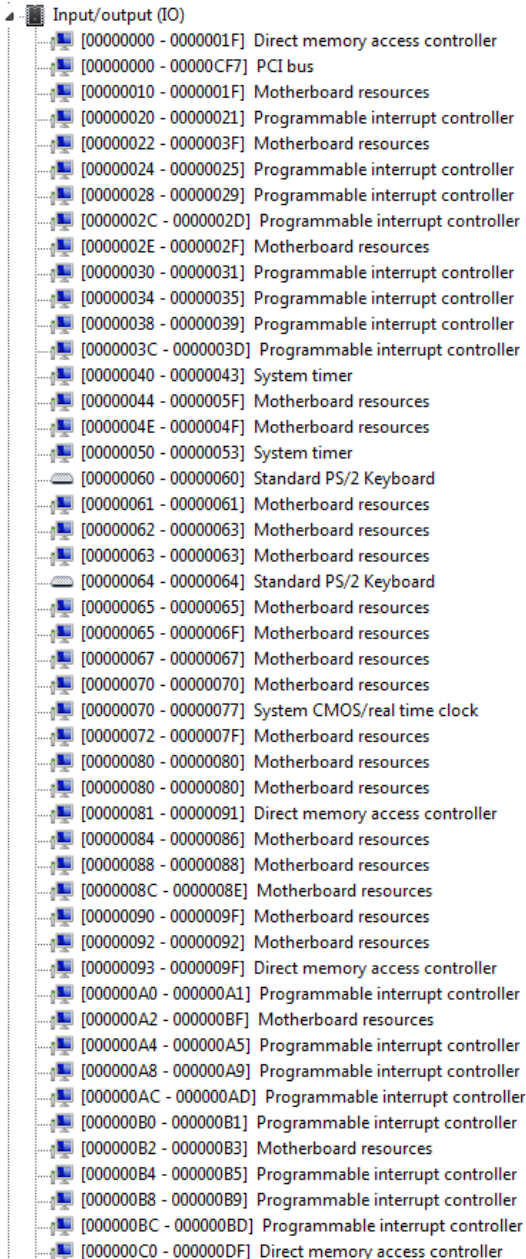
























Appendix B

I/O Information


B.1 I/O Address Map



Address Range	Description
[00000000 - 0000001F]	Direct memory access controller
[00000000 - 00000CF7]	PCI bus
[00000010 - 0000001F]	Motherboard resources
[00000020 - 00000021]	Programmable interrupt controller
[00000022 - 0000003F]	Motherboard resources
[00000024 - 00000025]	Programmable interrupt controller
[00000028 - 00000029]	Programmable interrupt controller
[0000002C - 0000002D]	Programmable interrupt controller
[0000002E - 0000002F]	Motherboard resources
[00000030 - 00000031]	Programmable interrupt controller
[00000034 - 00000035]	Programmable interrupt controller
[00000038 - 00000039]	Programmable interrupt controller
[0000003C - 0000003D]	Programmable interrupt controller
[00000040 - 00000043]	System timer
[00000044 - 0000005F]	Motherboard resources
[0000004E - 0000004F]	Motherboard resources
[00000050 - 00000053]	System timer
[00000060 - 00000060]	Standard PS/2 Keyboard
[00000061 - 00000061]	Motherboard resources
[00000062 - 00000063]	Motherboard resources
[00000063 - 00000063]	Motherboard resources
[00000064 - 00000064]	Standard PS/2 Keyboard
[00000065 - 00000065]	Motherboard resources
[00000065 - 0000006F]	Motherboard resources
[00000067 - 00000067]	Motherboard resources
[00000070 - 00000070]	Motherboard resources
[00000070 - 00000077]	System CMOS/real time clock
[00000072 - 0000007F]	Motherboard resources
[00000080 - 00000080]	Motherboard resources
[00000080 - 00000080]	Motherboard resources
[00000081 - 00000091]	Direct memory access controller
[00000084 - 00000086]	Motherboard resources
[00000088 - 00000088]	Motherboard resources
[0000008C - 0000008E]	Motherboard resources
[00000090 - 0000009F]	Motherboard resources
[00000092 - 00000092]	Motherboard resources
[00000093 - 0000009F]	Direct memory access controller
[000000A0 - 000000A1]	Programmable interrupt controller
[000000A2 - 000000BF]	Motherboard resources
[000000A4 - 000000A5]	Programmable interrupt controller
[000000A8 - 000000A9]	Programmable interrupt controller
[000000AC - 000000AD]	Programmable interrupt controller
[000000B0 - 000000B1]	Programmable interrupt controller
[000000B2 - 000000B3]	Motherboard resources
[000000B4 - 000000B5]	Programmable interrupt controller
[000000B8 - 000000B9]	Programmable interrupt controller
[000000BC - 000000BD]	Programmable interrupt controller
[000000C0 - 000000DF]	Direct memory access controller

	[00000E0 - 00000EF]	Motherboard resources
	[00000F0 - 00000FF]	Numeric data processor
	[00000200 - 0000020F]	Motherboard resources
	[000002F8 - 000002FF]	Communications Port (COM2)
	[000003B0 - 000003BB]	Intel(R) HD Graphics 4000
	[000003C0 - 000003DF]	Intel(R) HD Graphics 4000
	[000003F8 - 000003FF]	Communications Port (COM1)
	[00000400 - 00000453]	Motherboard resources
	[00000454 - 00000457]	Motherboard resources
	[00000458 - 0000047F]	Motherboard resources
	[000004D0 - 000004D1]	Motherboard resources
	[000004D0 - 000004D1]	Programmable interrupt controller
	[00000500 - 0000057F]	Motherboard resources
	[00000680 - 0000069F]	Motherboard resources
	[0000A00 - 0000A1F]	Motherboard resources
	[0000A20 - 0000A2F]	Motherboard resources
	[0000A30 - 0000A3F]	Motherboard resources
	[00000D00 - 0000FFFF]	PCI bus
	[0000164E - 0000164F]	Motherboard resources
	[0000E000 - 0000E0FF]	Realtek PCIe GBE Family Controller #3
	[0000E000 - 0000EFFF]	Intel(R) 7 Series/C216 Chipset Family PCI Express Root Port 2 - 1E12
	[0000F000 - 0000F03F]	Intel(R) HD Graphics 4000
	[0000F040 - 0000F05F]	Intel(R) 7 Series/C216 Chipset Family SMBus Host Controller - 1E22
	[0000F060 - 0000F07F]	Intel(R) 7 Series Chipset Family SATA AHCI Controller
	[0000F0A0 - 0000F0A3]	Intel(R) 7 Series Chipset Family SATA AHCI Controller
	[0000F0B0 - 0000F0B7]	Intel(R) 7 Series Chipset Family SATA AHCI Controller
	[0000F0C0 - 0000F0C3]	Intel(R) 7 Series Chipset Family SATA AHCI Controller
	[0000F0D0 - 0000F0D7]	Intel(R) 7 Series Chipset Family SATA AHCI Controller
	[0000F0E0 - 0000F0E7]	Intel(R) Active Management Technology - SOL (COM3)
	[0000FFFF - 0000FFFF]	Motherboard resources
	[0000FFFF - 0000FFFF]	Motherboard resources

B.2 Memory Address Map

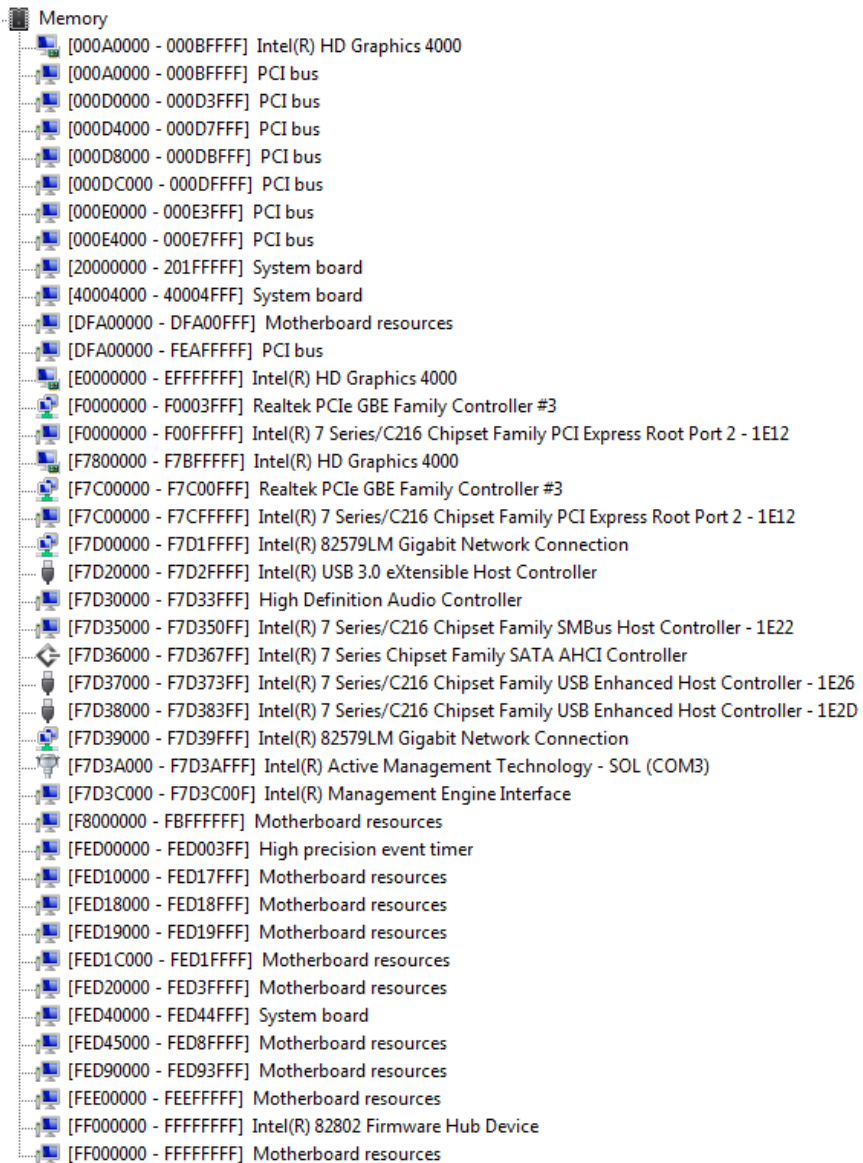

















































































The image shows a screenshot of the Windows System Information tool, specifically the 'Memory' section. It displays a list of memory addresses and their corresponding hardware components. The list includes various system resources, graphics cards, network controllers, and motherboard resources.

Memory Address	Hardware Component
[000A0000 - 000BFFFF]	Intel(R) HD Graphics 4000
[000A0000 - 000BFFFF]	PCI bus
[000D0000 - 000D3FFF]	PCI bus
[000D4000 - 000D7FFF]	PCI bus
[000D8000 - 000DBFFF]	PCI bus
[000DC000 - 000DFFFF]	PCI bus
[000E0000 - 000E3FFF]	PCI bus
[000E4000 - 000E7FFF]	PCI bus
[20000000 - 201FFFFFF]	System board
[40004000 - 40004FFF]	System board
[DFA00000 - DFA00FFF]	Motherboard resources
[DFA00000 - FEFFFFFF]	PCI bus
[E0000000 - EFFFFFFF]	Intel(R) HD Graphics 4000
[F0000000 - F0003FFF]	Realtek PCIe GBE Family Controller #3
[F0000000 - F00FFFFFF]	Intel(R) 7 Series/C216 Chipset Family PCI Express Root Port 2 - 1E12
[F7800000 - F7BFFFFFF]	Intel(R) HD Graphics 4000
[F7C00000 - F7C00FFF]	Realtek PCIe GBE Family Controller #3
[F7C00000 - F7CFFFFFF]	Intel(R) 7 Series/C216 Chipset Family PCI Express Root Port 2 - 1E12
[F7D00000 - F7D1FFFF]	Intel(R) 82579LM Gigabit Network Connection
[F7D20000 - F7D2FFFF]	Intel(R) USB 3.0 eXtensible Host Controller
[F7D30000 - F7D33FFF]	High Definition Audio Controller
[F7D35000 - F7D350FF]	Intel(R) 7 Series/C216 Chipset Family SMBus Host Controller - 1E22
[F7D36000 - F7D367FF]	Intel(R) 7 Series Chipset Family SATA AHCI Controller
[F7D37000 - F7D373FF]	Intel(R) 7 Series/C216 Chipset Family USB Enhanced Host Controller - 1E26
[F7D38000 - F7D383FF]	Intel(R) 7 Series/C216 Chipset Family USB Enhanced Host Controller - 1E2D
[F7D39000 - F7D39FFF]	Intel(R) 82579LM Gigabit Network Connection
[F7D3A000 - F7D3AFFF]	Intel(R) Active Management Technology - SOL (COM3)
[F7D3C000 - F7D3C00F]	Intel(R) Management Engine Interface
[F8000000 - FBFFFFFF]	Motherboard resources
[FED00000 - FED003FF]	High precision event timer
[FED10000 - FED17FFF]	Motherboard resources
[FED18000 - FED18FFF]	Motherboard resources
[FED19000 - FED19FFF]	Motherboard resources
[FED1C000 - FED1FFFF]	Motherboard resources
[FED20000 - FED3FFFF]	Motherboard resources
[FED40000 - FED44FFF]	System board
[FED45000 - FED8FFFF]	Motherboard resources
[FED90000 - FED93FFF]	Motherboard resources
[FEE00000 - FEEFFFFFF]	Motherboard resources
[FF000000 - FFFFFFFF]	Intel(R) 82802 Firmware Hub Device
[FF000000 - FFFFFFFF]	Motherboard resources

B.3 IRQ Mapping Chart

Device	IRQ
System timer	(00)
Standard PS/2 Keyboard	(01)
Communications Port (COM2)	(03)
Communications Port (COM1)	(04)
System CMOS/real time clock	(08)
Microsoft PS/2 Mouse	(12)
Numeric data processor	(13)
Microsoft ACPI-Compliant System	(81)
Microsoft ACPI-Compliant System	(82)
Microsoft ACPI-Compliant System	(83)
Microsoft ACPI-Compliant System	(84)
Microsoft ACPI-Compliant System	(85)
Microsoft ACPI-Compliant System	(86)
Microsoft ACPI-Compliant System	(87)
Microsoft ACPI-Compliant System	(88)
Microsoft ACPI-Compliant System	(89)
Microsoft ACPI-Compliant System	(90)
Microsoft ACPI-Compliant System	(91)
Microsoft ACPI-Compliant System	(92)
Microsoft ACPI-Compliant System	(93)
Microsoft ACPI-Compliant System	(94)
Microsoft ACPI-Compliant System	(95)
Microsoft ACPI-Compliant System	(96)
Microsoft ACPI-Compliant System	(97)
Microsoft ACPI-Compliant System	(98)
Microsoft ACPI-Compliant System	(99)
Microsoft ACPI-Compliant System	(100)
Microsoft ACPI-Compliant System	(101)
Microsoft ACPI-Compliant System	(102)
Microsoft ACPI-Compliant System	(103)
Microsoft ACPI-Compliant System	(104)
Microsoft ACPI-Compliant System	(105)
Microsoft ACPI-Compliant System	(106)
Microsoft ACPI-Compliant System	(107)
Microsoft ACPI-Compliant System	(108)
Microsoft ACPI-Compliant System	(109)
Microsoft ACPI-Compliant System	(110)
Microsoft ACPI-Compliant System	(111)
Microsoft ACPI-Compliant System	(112)
Microsoft ACPI-Compliant System	(113)
Microsoft ACPI-Compliant System	(114)
Microsoft ACPI-Compliant System	(115)
Microsoft ACPI-Compliant System	(116)
Microsoft ACPI-Compliant System	(117)
Microsoft ACPI-Compliant System	(118)
Microsoft ACPI-Compliant System	(119)
Microsoft ACPI-Compliant System	(120)

 (ISA) 0x00000079 (121)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007A (122)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007B (123)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007C (124)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007D (125)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007E (126)	Microsoft ACPI-Compliant System
 (ISA) 0x0000007F (127)	Microsoft ACPI-Compliant System
 (ISA) 0x00000080 (128)	Microsoft ACPI-Compliant System
 (ISA) 0x00000081 (129)	Microsoft ACPI-Compliant System
 (ISA) 0x00000082 (130)	Microsoft ACPI-Compliant System
 (ISA) 0x00000083 (131)	Microsoft ACPI-Compliant System
 (ISA) 0x00000084 (132)	Microsoft ACPI-Compliant System
 (ISA) 0x00000085 (133)	Microsoft ACPI-Compliant System
 (ISA) 0x00000086 (134)	Microsoft ACPI-Compliant System
 (ISA) 0x00000087 (135)	Microsoft ACPI-Compliant System
 (ISA) 0x00000088 (136)	Microsoft ACPI-Compliant System
 (ISA) 0x00000089 (137)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008A (138)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008B (139)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008C (140)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008D (141)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008E (142)	Microsoft ACPI-Compliant System
 (ISA) 0x0000008F (143)	Microsoft ACPI-Compliant System
 (ISA) 0x00000090 (144)	Microsoft ACPI-Compliant System
 (ISA) 0x00000091 (145)	Microsoft ACPI-Compliant System
 (ISA) 0x00000092 (146)	Microsoft ACPI-Compliant System
 (ISA) 0x00000093 (147)	Microsoft ACPI-Compliant System
 (ISA) 0x00000094 (148)	Microsoft ACPI-Compliant System
 (ISA) 0x00000095 (149)	Microsoft ACPI-Compliant System
 (ISA) 0x00000096 (150)	Microsoft ACPI-Compliant System
 (ISA) 0x00000097 (151)	Microsoft ACPI-Compliant System
 (ISA) 0x00000098 (152)	Microsoft ACPI-Compliant System
 (ISA) 0x00000099 (153)	Microsoft ACPI-Compliant System
 (ISA) 0x0000009A (154)	Microsoft ACPI-Compliant System
 (ISA) 0x0000009B (155)	Microsoft ACPI-Compliant System
 (ISA) 0x0000009C (156)	Microsoft ACPI-Compliant System
 (ISA) 0x0000009D (157)	Microsoft ACPI-Compliant System
 (ISA) 0x0000009E (158)	Microsoft ACPI-Compliant System
 (ISA) 0x0000009F (159)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A0 (160)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A1 (161)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A2 (162)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A3 (163)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A4 (164)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A5 (165)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A6 (166)	Microsoft ACPI-Compliant System
 (ISA) 0x000000A7 (167)	Microsoft ACPI-Compliant System
(ISA) 0x000000A8 (168)	Microsoft ACPI-Compliant System
(ISA) 0x000000A9 (169)	Microsoft ACPI-Compliant System
(ISA) 0x000000AA (170)	Microsoft ACPI-Compliant System

	(ISA) 0x000000AB (171)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AC (172)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AD (173)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AE (174)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AF (175)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B0 (176)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B1 (177)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B2 (178)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B3 (179)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B4 (180)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B5 (181)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B6 (182)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B7 (183)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B8 (184)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B9 (185)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BA (186)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BB (187)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BC (188)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BD (189)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BE (190)	Microsoft ACPI-Compliant System
	(PCI) 0x0000000B (11)	Intel(R) 7 Series/C216 Chipset Family SMBus Host Controller - 1E22
	(PCI) 0x00000010 (16)	Intel(R) 7 Series/C216 Chipset Family USB Enhanced Host Controller - 1E2D
	(PCI) 0x00000010 (16)	Intel(R) Management Engine Interface
	(PCI) 0x00000013 (19)	Intel(R) Active Management Technology - SOL (COM3)
	(PCI) 0x00000016 (22)	High Definition Audio Controller
	(PCI) 0x00000017 (23)	Intel(R) 7 Series/C216 Chipset Family USB Enhanced Host Controller - 1E26
	(PCI) 0xFFFFFFFF8 (-8)	Realtek PCIe GBE Family Controller #3
	(PCI) 0xFFFFFFFF9 (-7)	Intel(R) 82579LM Gigabit Network Connection
	(PCI) 0xFFFFFFFFA (-6)	Intel(R) USB 3.0 eXtensible Host Controller
	(PCI) 0xFFFFFFFFB (-5)	Intel(R) HD Graphics 4000
	(PCI) 0xFFFFFFFFC (-4)	Intel(R) 7 Series Chipset Family SATA AHCI Controller
	(PCI) 0xFFFFFFFFD (-3)	Intel(R) 7 Series/C216 Chipset Family PCI Express Root Port 2 - 1E12
	(PCI) 0xFFFFFFFFE (-2)	Intel(R) 7 Series/C216 Chipset Family PCI Express Root Port 1 - 1E10

B.4 DMA Channel Assignments

- Direct memory access (DMA)
- 4 Direct memory access controller

Appendix C

RAID & AHCI Settings

C.1 Setting RAID

OS installation to setup RAID Mode

Step 1: Copy the files below from "Driver CD -> Step 6 - RAID&AHCI -> F6 Floppy - x86" to Disk



iaAHCI
安全性目錄
8 KB



iaStorAC
安全性目錄
8 KB



bdtsetup.oem
OEM 檔案
8 KB



iaAHCI
安裝資訊
9 KB



iaStorAC
安裝資訊
7 KB



iaStorA
系統檔案
571 KB




iaStorF
系統檔案
23 KB


Step 2: Connect the USB Floppy (disk with RAID files) to the board



Step 3: The setting procedures "In BIOS Setup Menu"
A: Advanced -> SATA Configuration -> SATA Mode -> RAID Mode

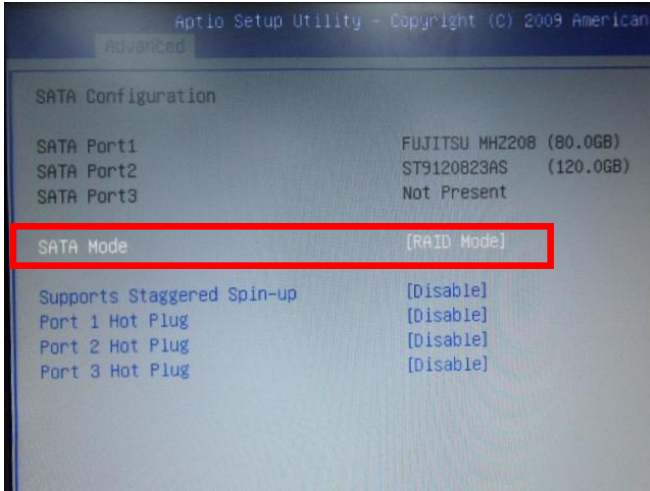


Step 4: The setting procedures "In BIOS Setup Menu"
B: Advanced -> Launch Storage OpROM -> Enabled

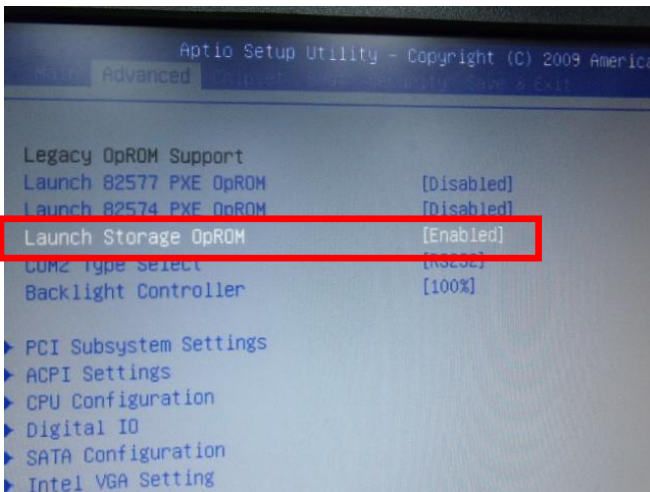


Step 5: The setting procedures "In BIOS Setup Menu"

C: Boot -> Boot Option #1 -> DVD-ROM Type

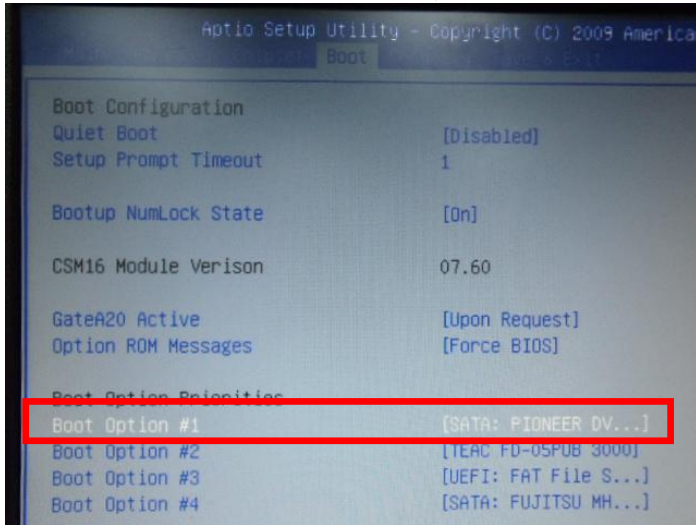


Step 6: The setting procedures "In BIOS Setup Menu"


D: Save & Exit -> Save Changes and Exit

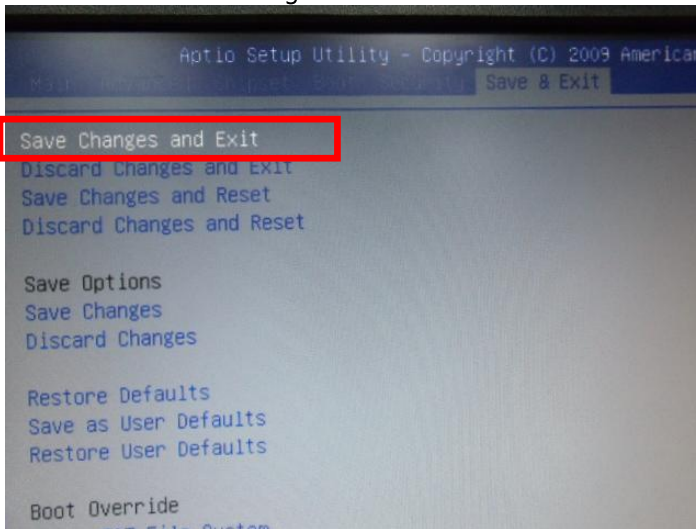


Step 7: Press **Ctrl-I** to enter **MAIN MENU**

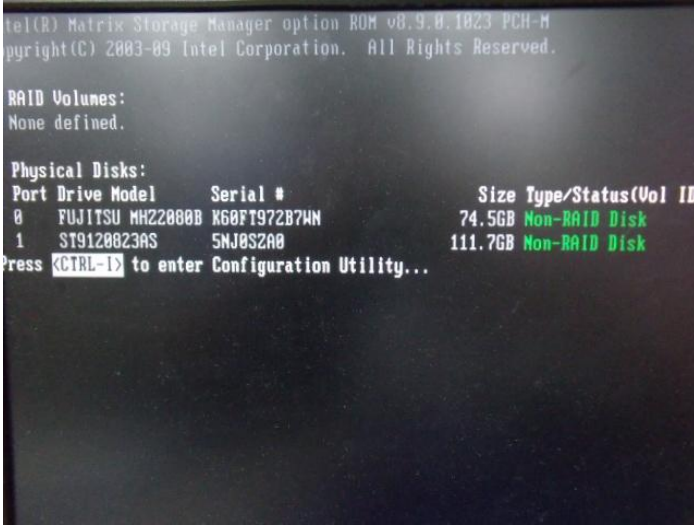


Step 8: Choose "1.Create RAID Volume"

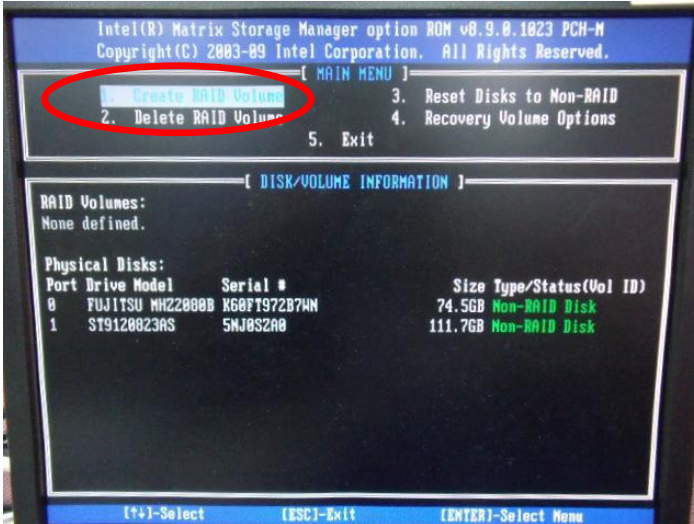


Step 9: RAID Level -> RAID0(Stripe)

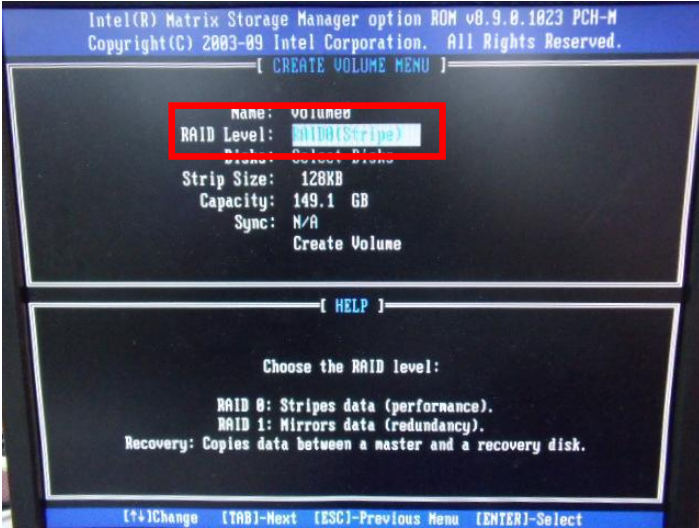


Step 10: Choose "Create Volume"

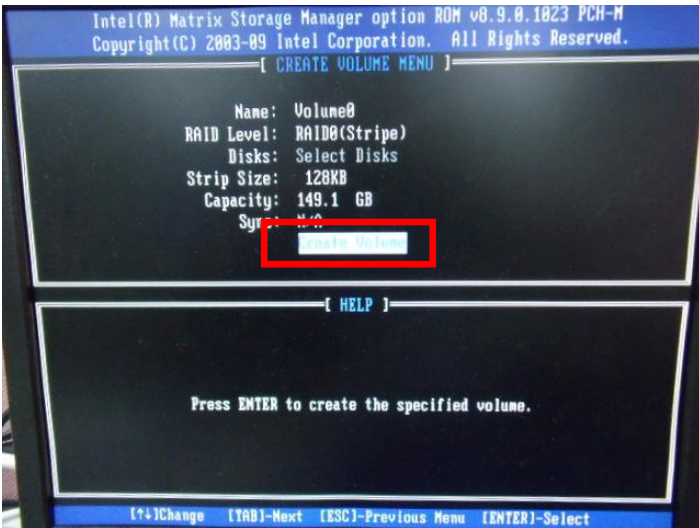


Step 11: Choose "Y"

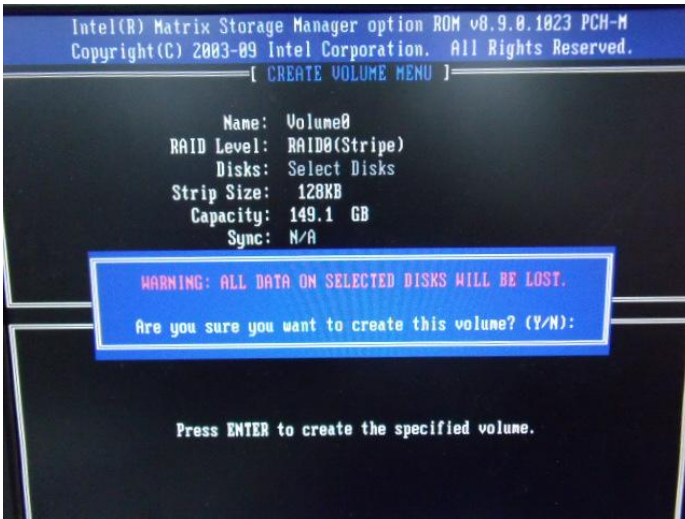


Step 12: Choose "5. Exit"

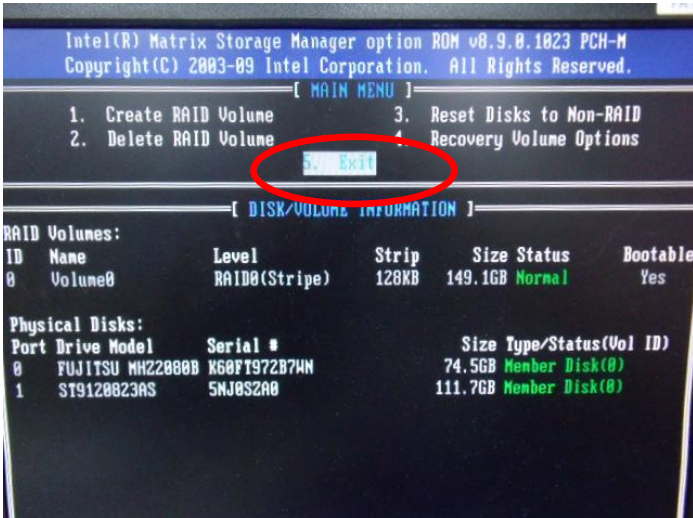

Step 13: Choose "Y"

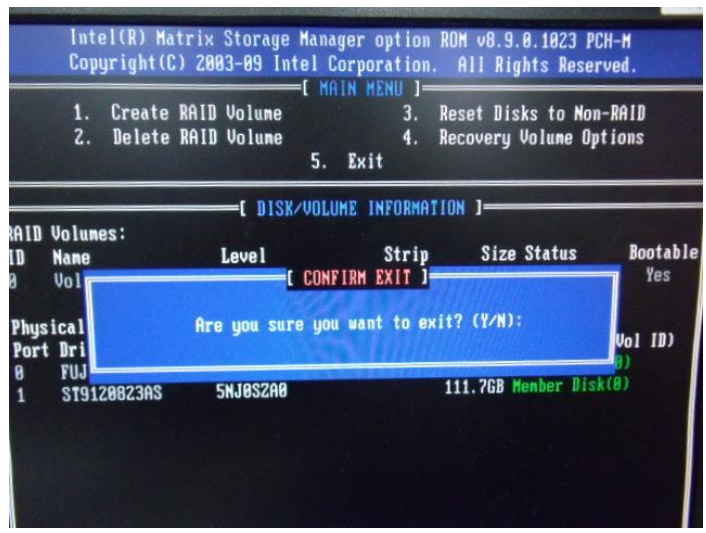


Step 14: Setup OS

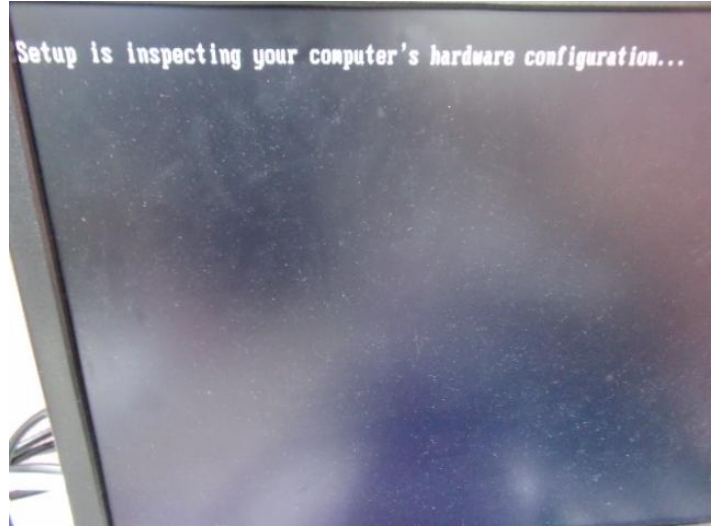


Step 15: Press "F6"




Step 16: Choose "S"

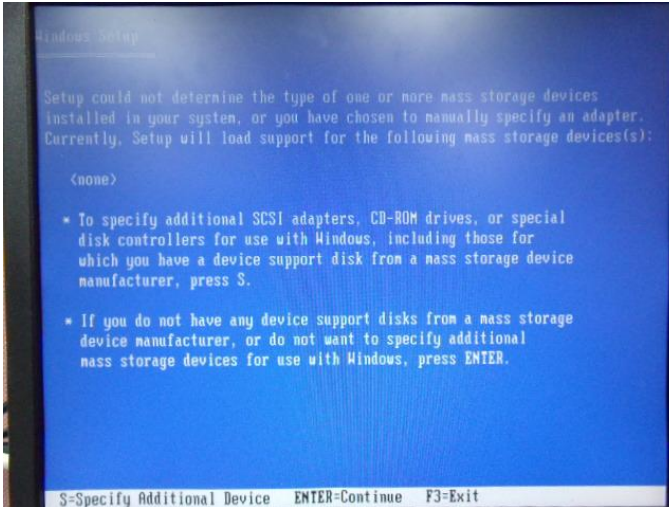


Step 17: Choose "Intel(R) Mobile Express Chipset SATA RAID Controller"

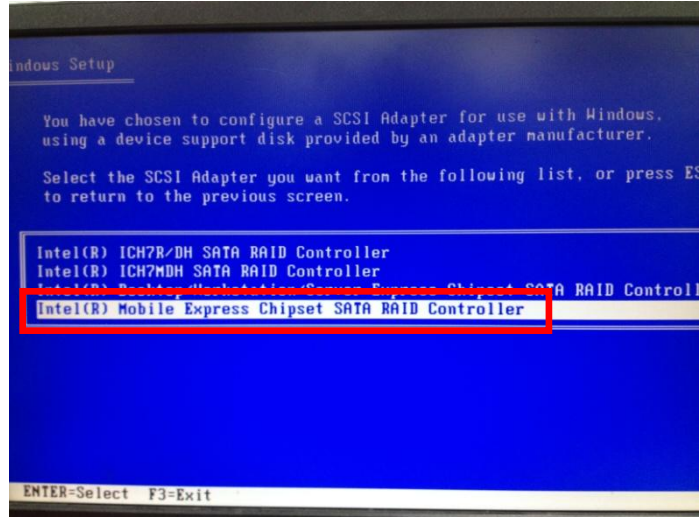

Step 18: It will show the model number you select and then press "ENTER"

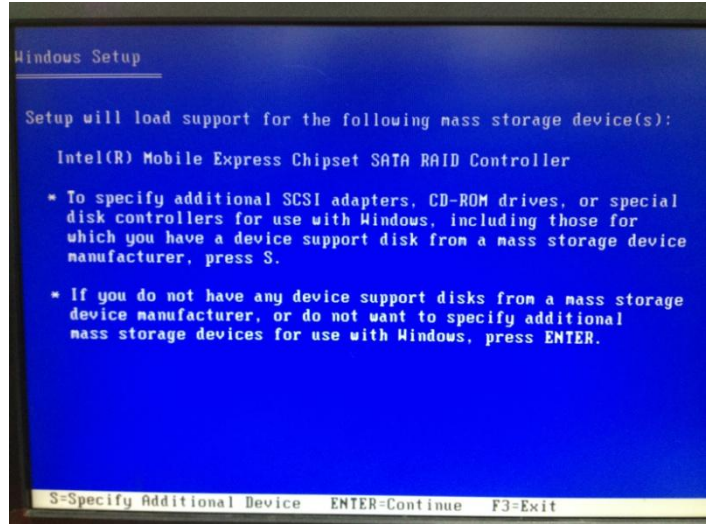

Step 19: Setup is starting Windows

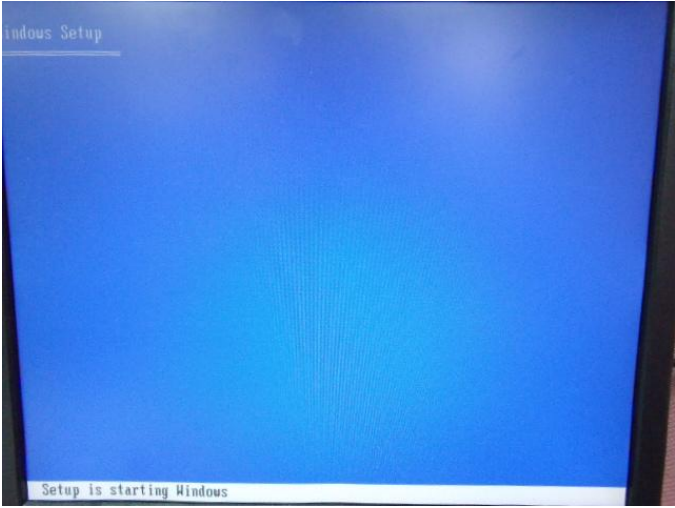

C.2 Setting AHCI

OS installation to setup AHCI Mode

Step 1: Copy the files below from "Driver CD -> Raid Driver -> F6 Floppy - x86" to Disk




Step 2: Connect the USB Floppy (disk with AHCI files) to the board




Step 3: The setting procedures "In BIOS Setup Menu"

A: Advanced -> SATA Configuration -> SATA Configuration -> SATA Mode -> AHCI Mode

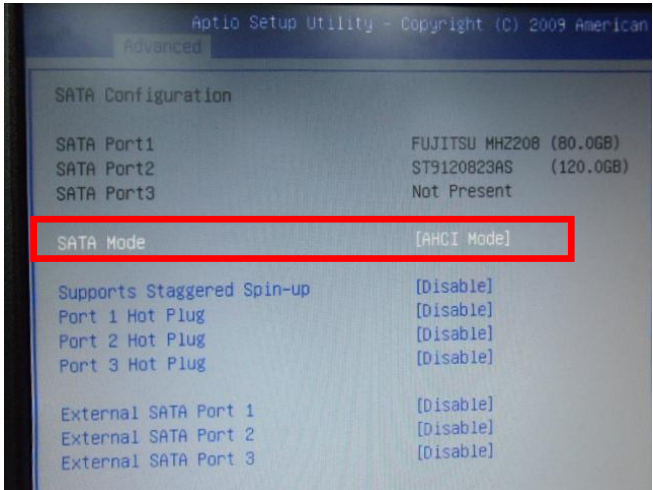


Step 4: The setting procedures "In BIOS Setup Menu"

B: Boot -> Boot Option #1 -> DVD-ROM Type

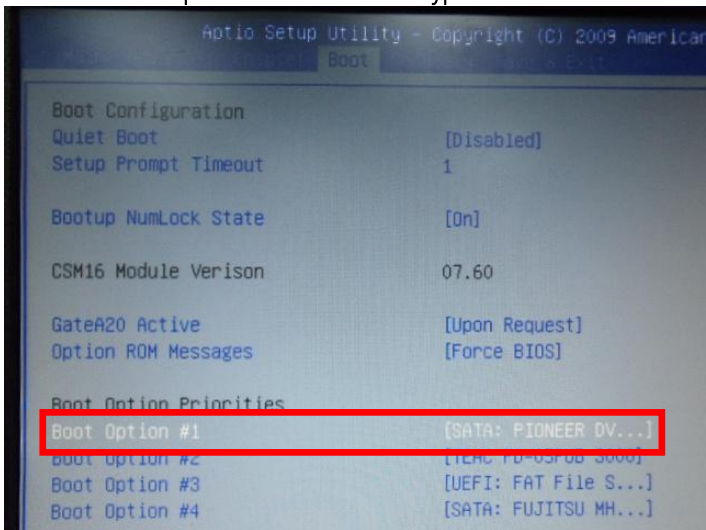


Step 5: The setting procedures "In BIOS Setup Menu"

C: Save & Exit -> Save Changes and Exit

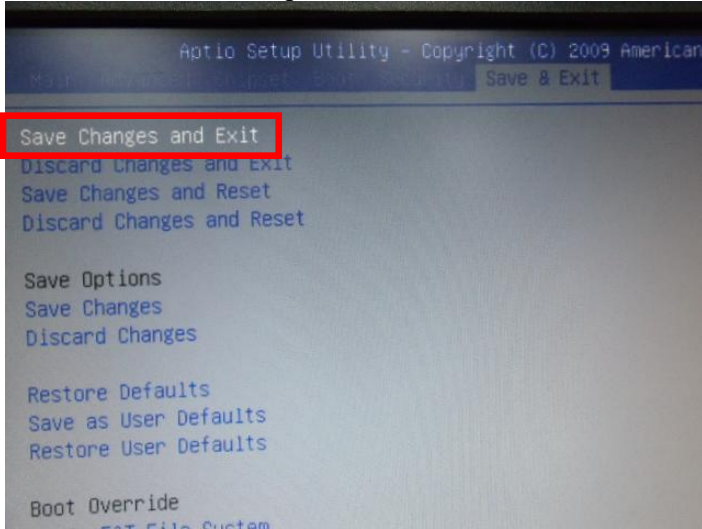


Step 6: Setup OS


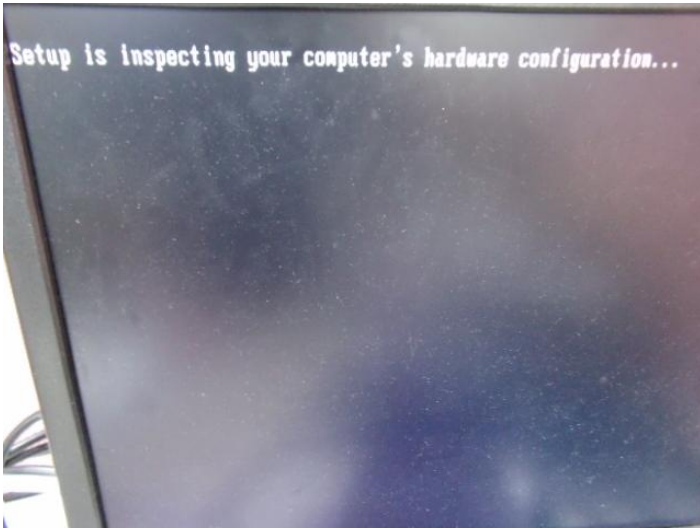


Step 7: Press "F6"



Step 8: Choose "S"

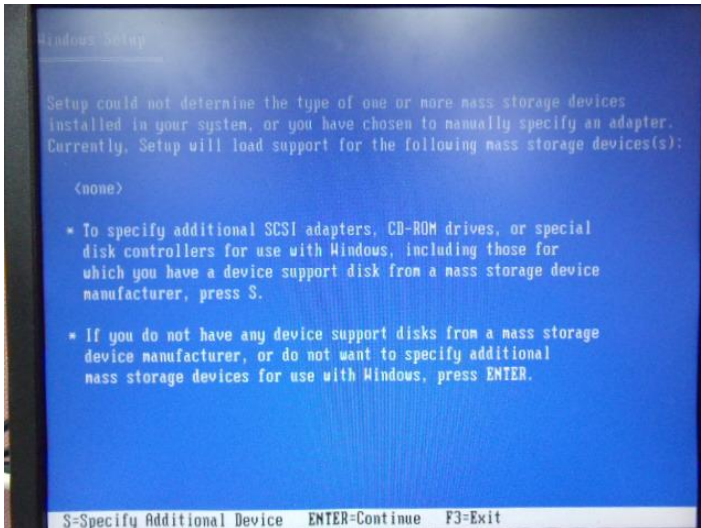

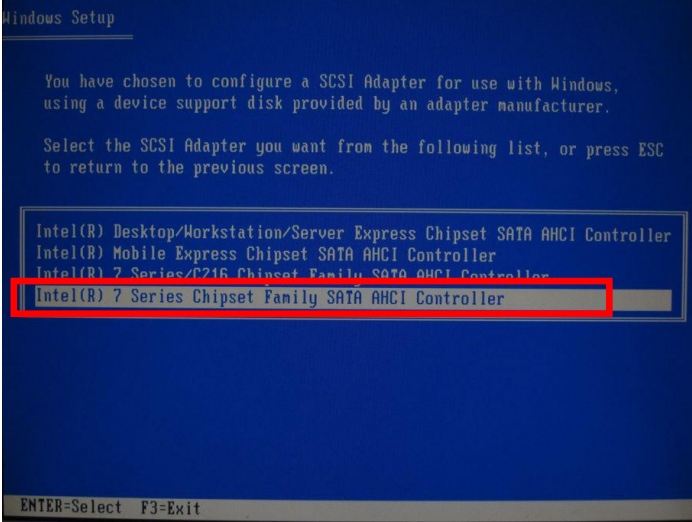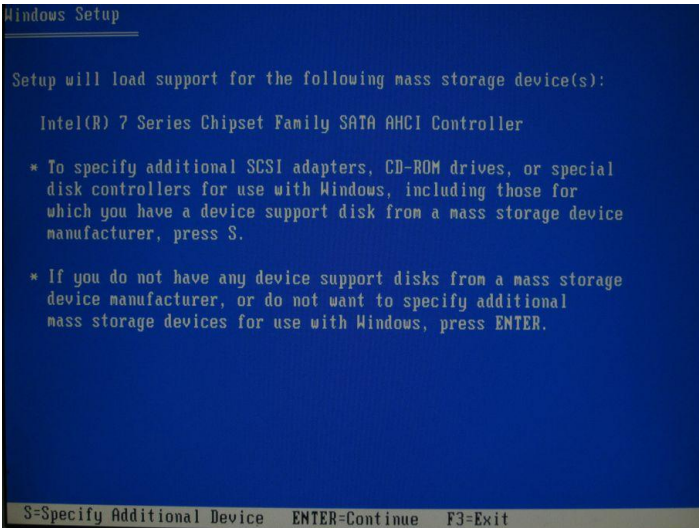Step 9: Choose "Intel(R) 7 Series Chipset Family SATA AHCI Controller"**Step 10: It will show the model number you select and then press "ENTER"**

Step 11: Setup is loading files

