

AEV-6356

Railway Embedded Box PC

User's Manual 2nd Ed

Copyright Notice

This document is copyrighted, 2015. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEMON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEMON reserves the right to make changes in the product design without notice to its users.

Acknowledgement

All other products' name or trademarks are properties of their respective owners.

- Microsoft Windows[®] is a registered trademark of Microsoft Corp.
- ITE is a trademark of Integrated Technology Express, Inc.
- IBM, PC/AT, PS/2, and VGA are trademarks of International Business Machines Corporation.

All other product names or trademarks are properties of their respective owners.

Packing List

Before setting up your product, please make sure the following items have been shipped:

Item	Quantity
● AEV-6356	1
● Wallmount brackets	2
● M12 power DC jack kit	1
● M12 USB Y cable	2
● M12 COM cable	1
● M12 LAN cable	2
● Product DVD with User's Manual (in pdf) and drivers	1

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

About this Document

This User's Manual contains all the essential information, such as detailed descriptions and explanations on the product's hardware and software features (if any), its specifications, dimensions, jumper/connector settings/definitions, and driver installation instructions (if any), to facilitate users in setting up their product.

Users may refer to the AAEON.com for the latest version of this document.

Safety Precautions

Please read the following safety instructions carefully. It is advised that you keep this manual for future references

1. All cautions and warnings on the device should be noted.
2. Make sure the power source matches the power rating of the device.
3. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
4. Always completely disconnect the power before working on the system's hardware.
5. No connections should be made when the system is powered as a sudden rush of power may damage sensitive electronic components.
6. If the device is not to be used for a long time, disconnect it from the power supply to avoid damage by transient over-voltage.
7. Always disconnect this device from any AC supply before cleaning.
8. While cleaning, use a damp cloth instead of liquid or spray detergents.
9. Make sure the device is installed near a power outlet and is easily accessible.
10. Keep this device away from humidity.
11. Place the device on a solid surface during installation to prevent falls
12. Do not cover the openings on the device to ensure optimal heat dissipation.
13. Watch out for high temperatures when the system is running.
14. Do not touch the heat sink or heat spreader when the system is running
15. Never pour any liquid into the openings. This could cause fire or electric shock.
16. As most electronic components are sensitive to static electrical charge, be sure to ground yourself to prevent static charge when installing the internal components. Use a grounding wrist strap and contain all electronic components in any static-shielded containers.

17. If any of the following situations arises, please the contact our service personnel:
 - i. Damaged power cord or plug
 - ii. Liquid intrusion to the device
 - iii. Exposure to moisture
 - iv. Device is not working as expected or in a manner as described in this manual
 - v. The device is dropped or damaged
 - vi. Any obvious signs of damage displayed on the device
18. **DO NOT LEAVE THIS DEVICE IN AN UNCONTROLLED ENVIRONMENT WHERE THE STORAGE TEMPERATURE IS BELOW -45° C (-49°F) OR ABOVE 85°C (185°F) TO PREVENT DAMAGE.**

Warning!



This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Caution:

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions and your local government's recycling or disposal directives.

Attention:

Il y a un risque d'explosion si la batterie est remplacée de façon incorrecte. Ne la remplacer qu'avec le même modèle ou équivalent recommandé par le constructeur. Recycler les batteries usées en accord avec les instructions du fabricant et les directives gouvernementales de recyclage.

China RoHS Requirements (CN)

产品中有毒有害物质或元素名称及含量

AAEON Embedded Box PC/ Industrial System

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板 及其电子组件	×	○	○	○	○	○
外部信号 连接器及线材	×	○	○	○	○	○
外壳	×	○	○	○	○	○
中央处理器 与内存	×	○	○	○	○	○
硬盘	×	○	○	○	○	○
电源	×	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T 11363-2006 标准规定的限量要求以下。

×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 标准规定的限量要求。

备注：
 一、此产品所标示之环保使用期限，系指在一般正常使用状况下。
 二、上述部件物质中央处理器、内存、硬盘、电源为选购品。

China RoHS Requirement (EN)

Poisonous or Hazardous Substances or Elements in Products
 AAEON Embedded Box PC/ Industrial System

Component	Poisonous or Hazardous Substances or Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
PCB & Other Components	x	○	○	○	○	○
Wires & Connectors for External Connections	x	○	○	○	○	○
Chassis	x	○	○	○	○	○
CPU & RAM	x	○	○	○	○	○
Hard Disk	x	○	○	○	○	○
PSU	x	○	○	○	○	○

O: The quantity of poisonous or hazardous substances or elements found in each of the component's parts is below the SJ/T 11363-2006-stipulated requirement.

X: The quantity of poisonous or hazardous substances or elements found in at least one of the component's parts is beyond the SJ/T 11363-2006-stipulated requirement.

Note: The Environment Friendly Use Period as labeled on this product is applicable under normal usage only

Table of Contents

- Chapter 1 - Product Specifications..... 1**
 - 1.1 Specifications..... 2
- Chapter 2 – Hardware Information 4**
 - 2.1 Dimensions 5
 - 2.2 Jumpers and Connectors 6
 - 2.3 List of Jumpers 8
 - 2.3.1 COM4 RS232/422/485 (JP1) 9
 - 2.3.2 Clear CMOS (JP4) 9
 - 2.3.3 COM3 12V/5V/RI (JP5)..... 9
 - 2.3.4 COM2 12V/5V/RI (JP6)..... 10
 - 2.3.5 COM1 RS232/422/485 (JP7) 10
 - 2.3 List of Connectors 11
 - 2.4 RS-232/422/485 Serial Port Connector..... 12
 - 2.5 USB Connector (M12) 13
 - 2.6 LAN Connector (M12)..... 13
 - 2.7 Isolated DI/O 14
- Chapter 3 - AMI BIOS Setup.....16**
 - 3.1 System Test and Initialization 17
 - 3.2 AMI BIOS Setup..... 18
 - 3.3 Setup Submenu: Main..... 19
 - 3.4 Setup Submenu: Advanced 20
 - 3.4.1 Advanced: ACPI Settings..... 21
 - 3.4.2 Advanced: CPU Configuration..... 22
 - 3.4.3 Advanced: IDE Configuration (IDE)..... 23
 - 3.4.3.1 Advanced: IDE Configuration (AHCI) 24
 - 3.4.3.2 Advanced: IDE Configuration (RAID)..... 25

3.4.4	Advanced: Intel TXT (LT) Configuration.....	26
3.4.5	Advanced: PCH-FW Configuration.....	27
3.4.6	Advanced: Firmware Update Configuration.....	28
3.4.7	Advanced: Super IO Configuration	29
3.4.7.1	Super IO Configuration: Serial Port 1 Configuration	30
3.4.7.2	Super IO Configuration: Serial Port 2 Configuration	31
3.4.7.3	Super IO Configuration: Serial Port 3 Configuration	32
3.4.7.4	Super IO Configuration: Serial Port 4 Configuration	33
3.4.8	Advanced: F81866 H/W Monitor	34
3.4.9	Advanced: Digital I/O	35
3.5	Setup submenu: Chipset.....	36
3.5.1	Chipset: PCH-IO Configuration	37
3.6	Setup submenu: Boot.....	39
3.6.1	Boot: BBS Priorities.....	40
3.7	Setup submenu: Security	41
3.8	Setup submenu: Exit.....	42
Chapter 4 – Drivers Installation		43
4.1	Product CD/DVD.....	44
Appendix A - Watchdog Timer Programming.....		46
A.1	Watchdog Timer Initial Program.....	47
A.2	Watchdog Sample Program	48
Appendix B - I/O Information.....		52
B.1	I/O Address Map.....	53
B.2	Memory Address Map.....	55
B.3	IRQ Mapping Chart	56
B.4	DMA Channel Assignment.....	59
Appendix C – RAID & AHCI Settings		60
C.1	Setting RAID	61

C.2	Setting AHCI.....	71
Appendix D – Electrical Specifications for I/O Ports.....		77
D.1	DI/O Programming.....	78
D.2	DI/O Register	79
D.3	Digital I/O Sample Program.....	80

Chapter 1

Product Specifications

1.1 Specifications

System

- **Processor** Intel® Core™ i7-3517UE up to 2.8GHz
Intel® Celeron® 827E ,1.4 GHz
- **System Memory** DDR3 SODIMM x 1, up to 8 GB
- **Chipset** Intel® QM77
- **Display** VGA DB-15 x 1 for VGA
- **Interface** DVI DVI-I x 1
- **Storage** SSD Type 2 CFast™ x 1
- **Device** HDD SATA 3.0 Gb/s HDD bay x 2 (support RAID 0, 1)
- **Network** LAN Gigabit Ethernet x 2
Wireless Optional by Mini Card
- **Front I/O** USB Host USB 2.0 x 2 (M12)
LAN Giga LAN x 2 (M12)
Serial Port RS-232/422/485 x 1 (M12)
Others VGA x 1 (DB-15)
DVI-I x 1
CFast™ slot x 1
SIM slot x 1
Power button
- **Rear I/O** USB Host USB 3.0 x 2 (Type A)
Serial Port RS-232 x 2 (DB-9)
RS-232/422/485 x 1 (DB-9, isolated)
Others Digital input x 6
Digital output x 2
Power input (17 ~ 30 V_{DC} certificated, 17 ~

		75V-compliant) (M12)
● Expansion	PCIe	Full-size Mini PCIe x 1 Half-size Mini PCIe x 1 (WiFi/ 3G/ GPS) (Optional)
● Indicator	Front	System LED x 1 (powerbutton)
● Power Requirement		12 V DC-in with lockable connector ATX mode (optional AT by jumper/ BIOS setting)
● System Cooling		Passive cooling
● Mounting		Wall-mount
● Dimension (W x H x D)		286 x 92 x 164.2 mm (11.26 x 3.62 x 6.47")
● Gross Weight		7 kg (15.4 lb)
● Certification	EMC	Compliant with EN50121-3-2, EN55022 and EN55024



Environmental

● Operating Temperature	-40 ~ 70°C, 85°C for 10 minutes (-40 ~ 158°F, 185°F for 10 minutes) EN 50155: 2007, Clause 12.2.4 EN 60068-2-2: 2007, test Bd.
● Storage Temperature	-45 ~ 85°C (-49 ~ 185°F) EN 50155: 2007, Clause 12.2.3 EN 60068-2-1:2007, test Ad. -40°C
● Anti-Vibration	Compliant with EN 61373
● Anti-Shock	Compliant with EN 61373

Chapter 2


Hardware Information

2.1 Dimensions

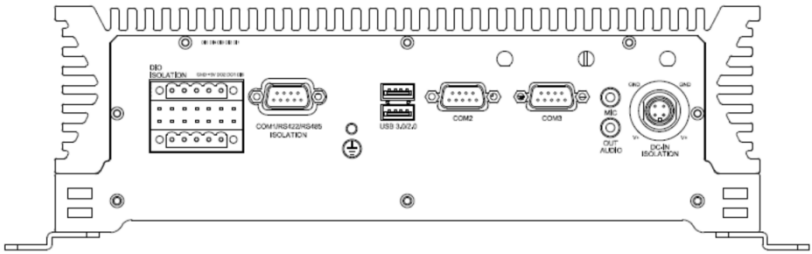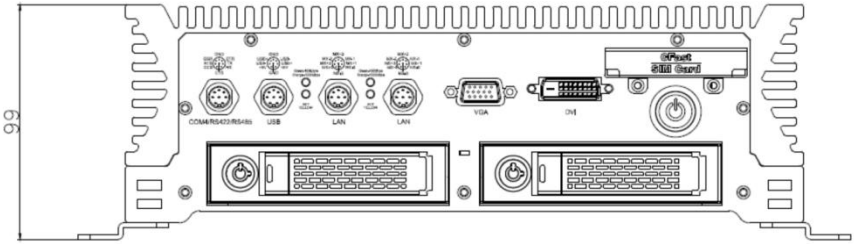


2.2 Jumpers and Connectors

Component side

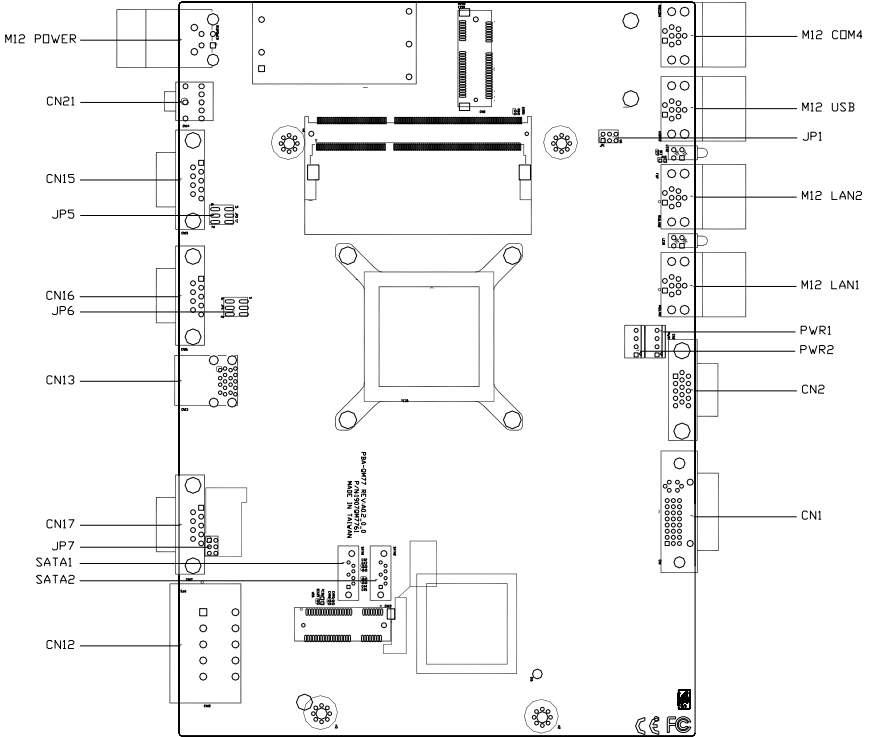

Solder Side

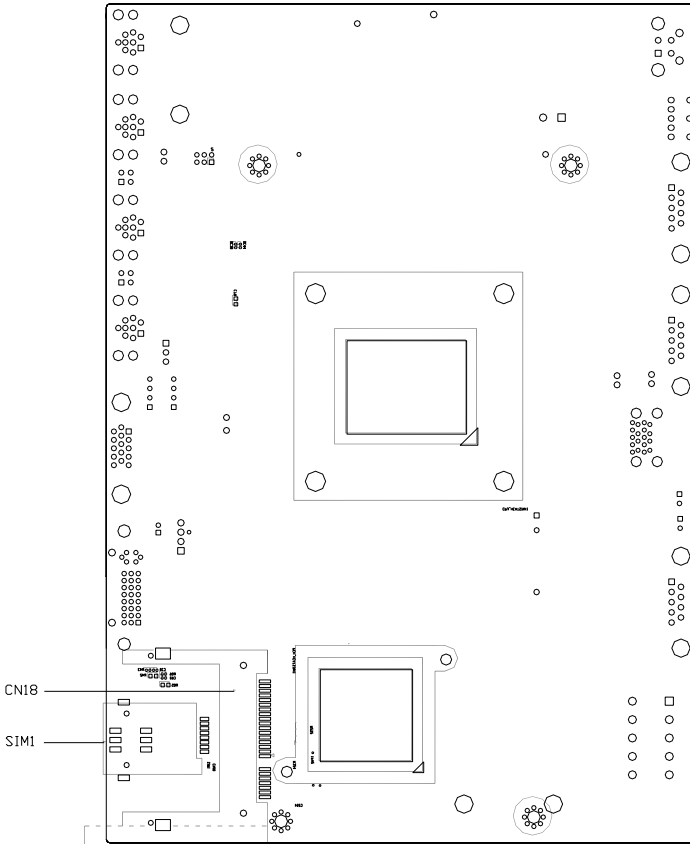


2.3 List of Jumpers

Please refer to the table below for all of the system's jumpers that you can configure for your application

Label	Function
JP1	COM4 RS232/422/485
JP4	Clear CMOS
JP5	COM3 12V/5V/RI
JP6	COM2 12V/5V/RI
JP7	COM1 RS232/422/485

2.3.1 COM4 RS232/422/485 (JP1)

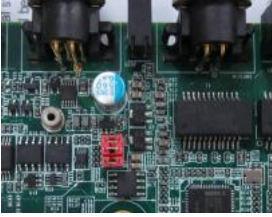

RS-232



RS-422




RS-485

2.3.2 Clear CMOS (JP4)



Clear CMOS


2.3.3 COM3 12V/5V/RI (JP5)

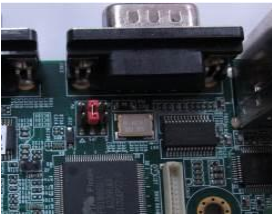

+5 V




+12 V

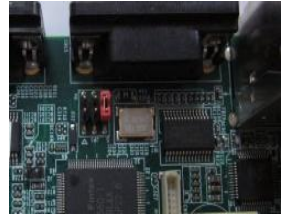


RI


2.3.4 COM2 12V/5V/RI (JP6)

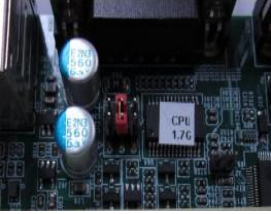

+5 V

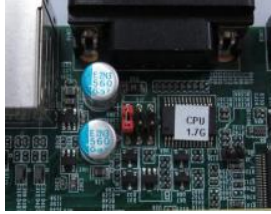


+12 V

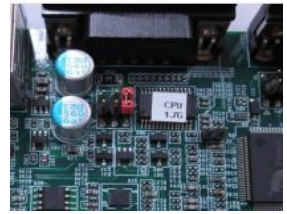


RI

2.3.5 COM1 RS232/422/485 (JP7)

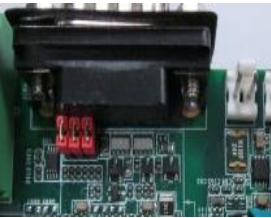

RS-232

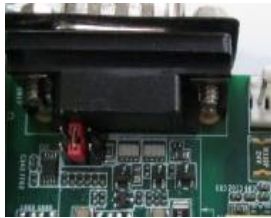

RS-422



RS-485


2.3 List of Connectors

Please refer to the table below for all of the board's connectors that you can configure for your application

Label	Function
CN2	VGA
CN12	Isolated DI/O
CN13	USB3.0
CN15	COM3
CN16	COM2
CN17	COM1
CN18	CFast
CN21	Audio
SIM1	SIM Card
PWR1	SATA Power
PWR2	SATA Power

2.4 RS-232/422/485 Serial Port Connector

COM1

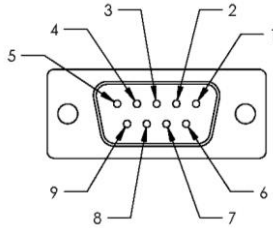


Pin	Signal	Pin	Signal
1	DCD (422TXD-/485DATA-)	2	RXD (422RXD+)
3	TXD (422TXD+/485DATA+)	4	DTR (422RXD-)
5	GND	6	DSR
7	RTS	8	CTS
9	RI		

COM2 and COM3

Pin	Signal
1-2	+12 V
3-4	+5 V (default)
5-6	RI



COM4 (RS-422/RS-485)

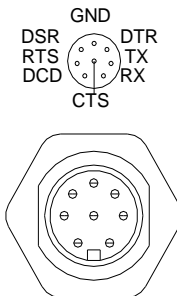



Signal

DCD (422TXD-/485DATA-)	RXD (422RXD+)
TXD (422TXD+/485DATA+)	DTR (422RXD-)

2.5 USB Connector (M12)

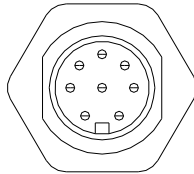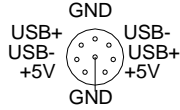


2.6 LAN Connector (M12)

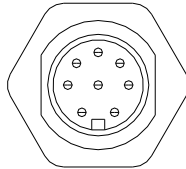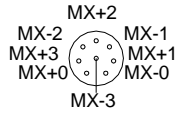

2.7 Isolated DI/O

Isolated Digital Input

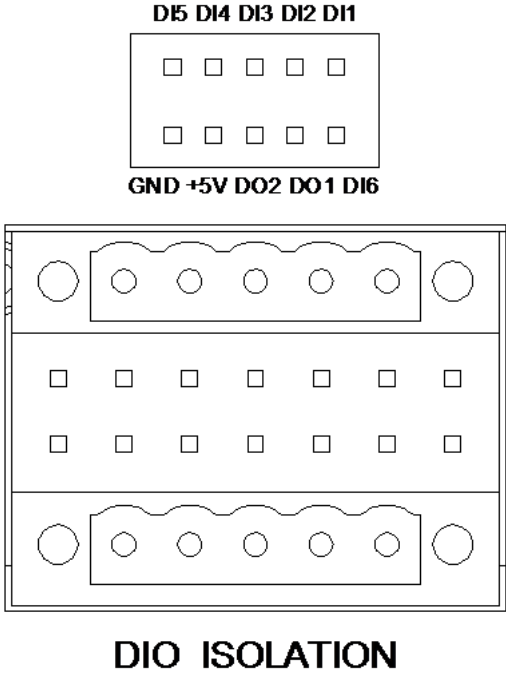

Max. frequency of DI

tPHL : TYP. 48 ns, (Logic High to Low response time)

tPLH : TYP. 50 ns (Logic Low to High response time)

Max. voltage input:

Logic level 0: +2.5 V max.

Logic level 1: +5 V to +30 V (Source to DI)

Max. current input:

20mA

Isolated Digital Output

Max. frequency of IDO

Rise time : 18us(Max)

Fall time : 18us(Max)

Max. voltage output:

+5 V max.

Max. current output:

50mA

Isolated 5V Output (with short protection)

Max. voltage output:

+5 V max.

Max. current output:

200mA

Chapter 3

AMI BIOS Setup

3.1 System Test and Initialization

The system uses certain routines to perform testing and initialization. If an error, fatal or non-fatal, is encountered, a few short beeps or an error message will be outputted. The board can usually continue the boot up sequence with non-fatal errors.

The system configuration verification routines check the current system configuration against the values stored in the CMOS memory. If they do not match, an error message will be outputted, in which case you will need to run the BIOS setup program to set the configuration information in memory.

There are three situations in which you will need to change the CMOS settings:

- You are starting your system for the first time
- You have changed your system's hardware
- The CMOS memory has lost power and the configuration information is erased

The system's CMOS memory uses a backup battery for data retention, which is to be replaced once emptied.

3.2 AMI BIOS Setup

The AMI BIOS ROM has a pre-installed Setup program that allows users to modify basic system configurations, which is stored in the battery-backed CMOS RAM and BIOS NVRAM so that the information is retained when the power is turned off.

To enter BIOS Setup, press or <F2> immediately while your computer is powering up.

The function for each interface can be found below.

Main – Date and time can be set here. Press <Tab> to switch between date elements

Advanced – Enable/ Disable boot option for legacy network devices


Chipset – For hosting bridge parameters

Boot – Enable/ Disable quiet Boot Option


Security – The setup administrator password can be set here

Save & Exit – Save your changes and exit the program


3.3 Setup Submenu: Main

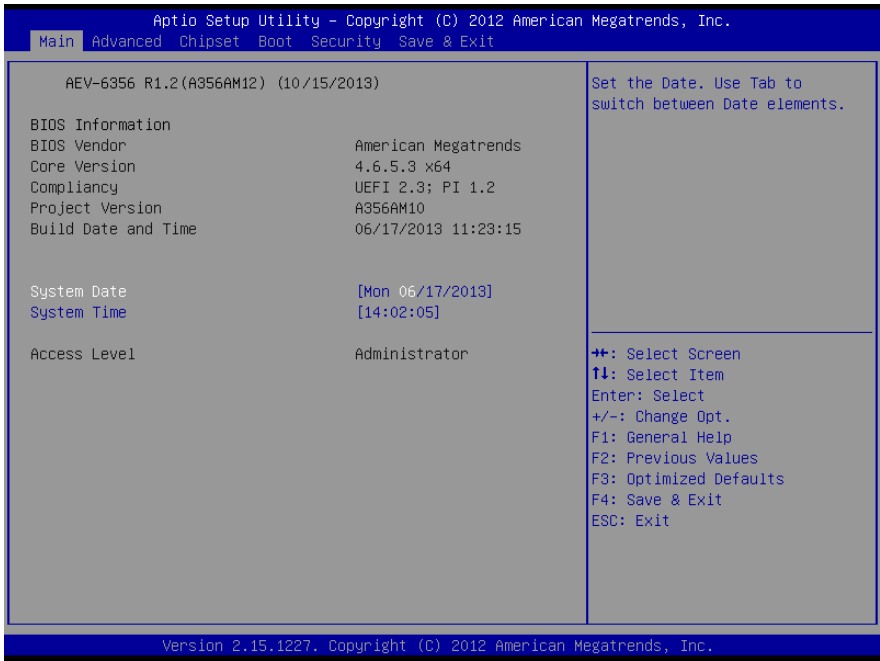

3.4 Setup Submenu: Advanced

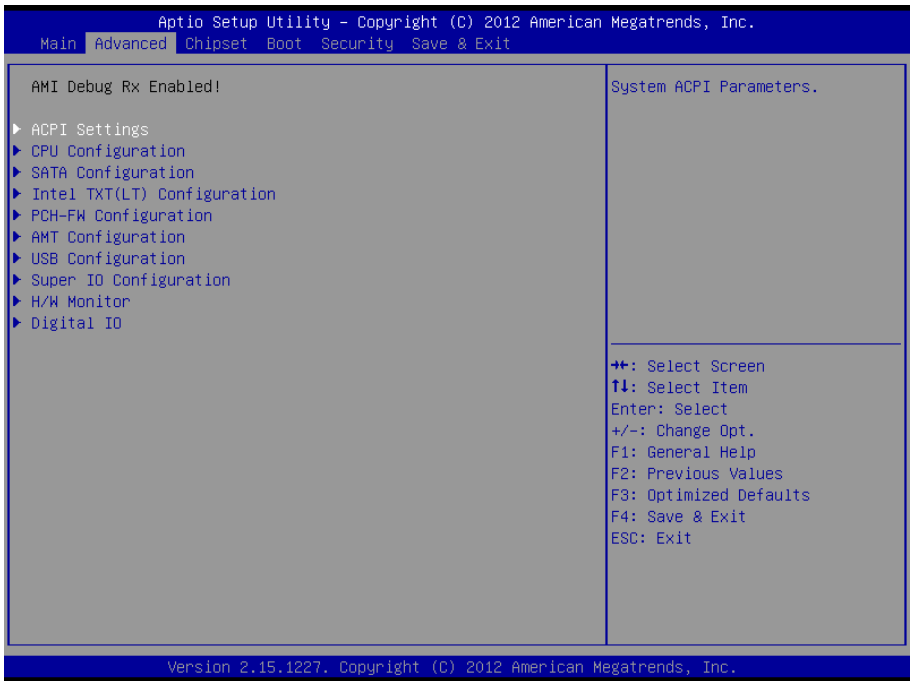


3.4.1 Advanced: ACPI Settings

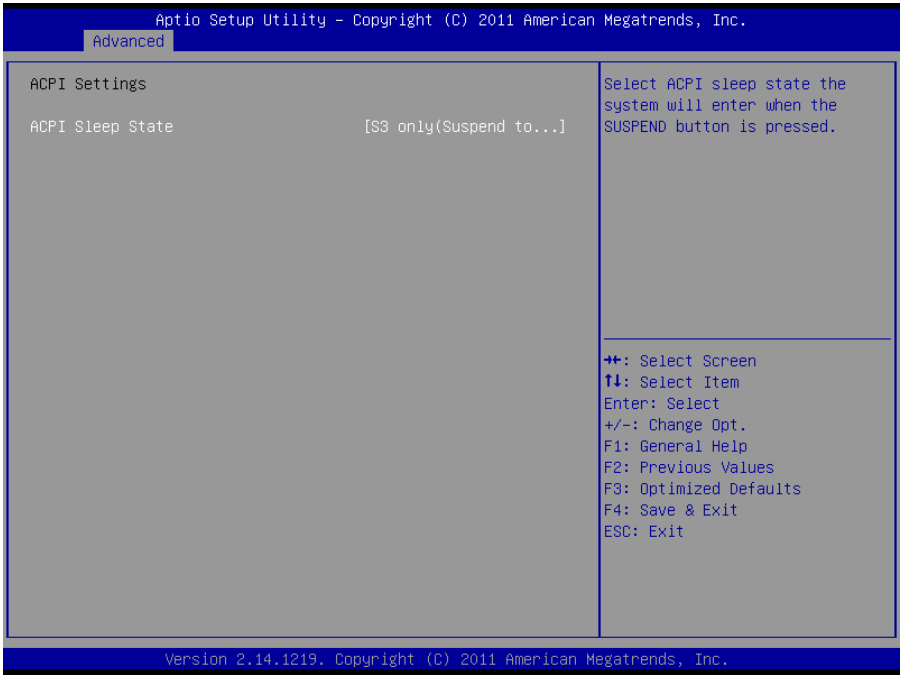

Options summary:

Suspend mode	S1 only (CPU Stop Clock)	Optimal Default, Failsafe Default
	S3 only (Suspend to RAM)	
Select the ACPI state used for System Suspend		


3.4.2 Advanced: CPU Configuration

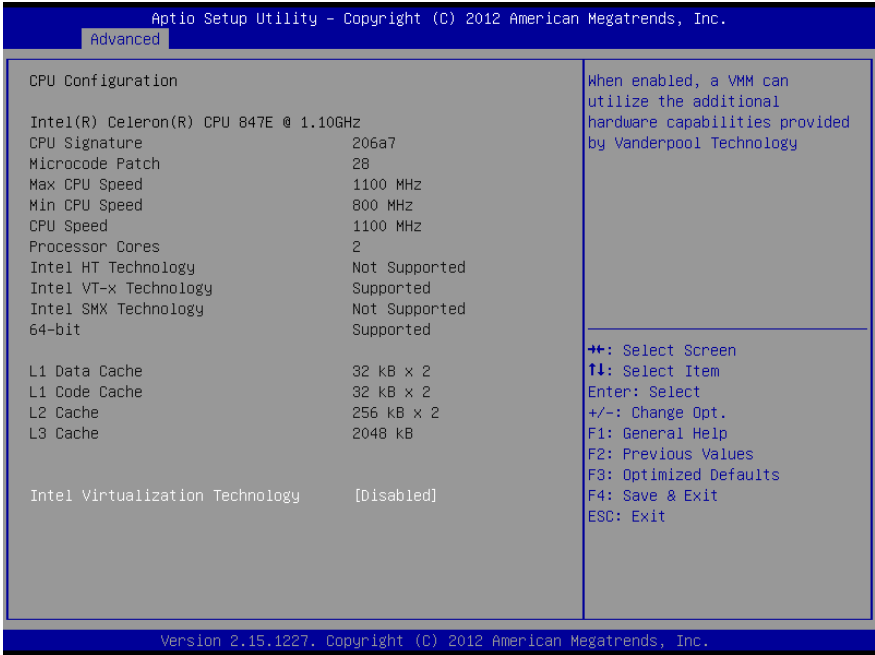


Options summary:

Intel Virtualization Technology	Disabled	Optimal Default, Failsafe Default
	Enabled	
When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology		


3.4.3 Advanced: IDE Configuration (IDE)

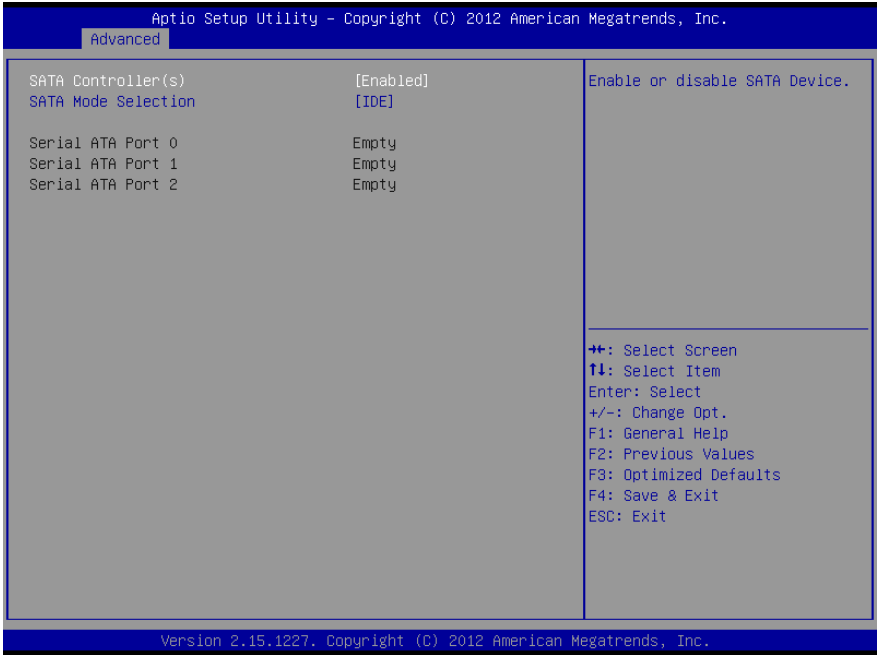

3.4.3.1 Advanced: IDE Configuration (AHCI)

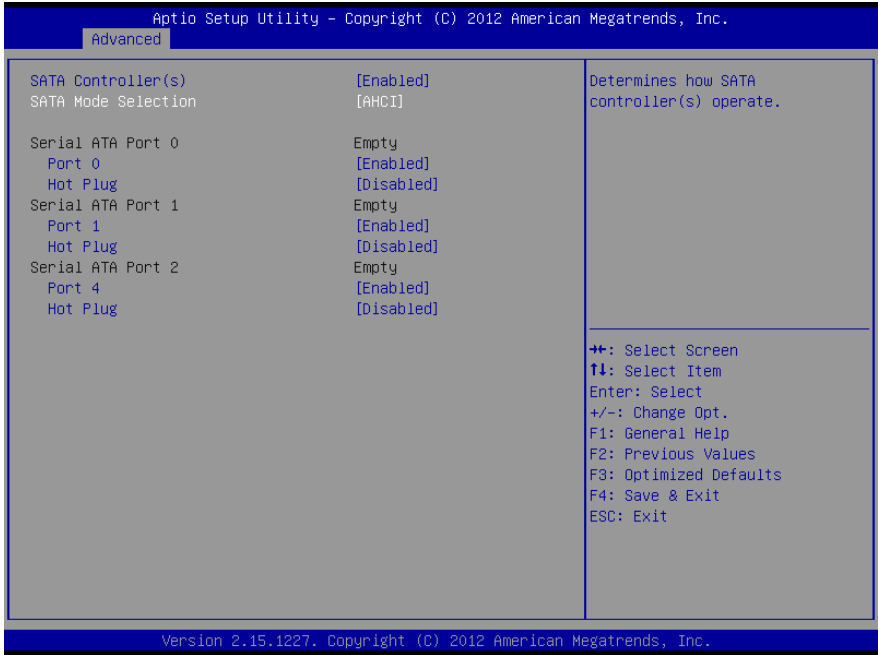


3.4.3.2 Advanced: IDE Configuration (RAID)

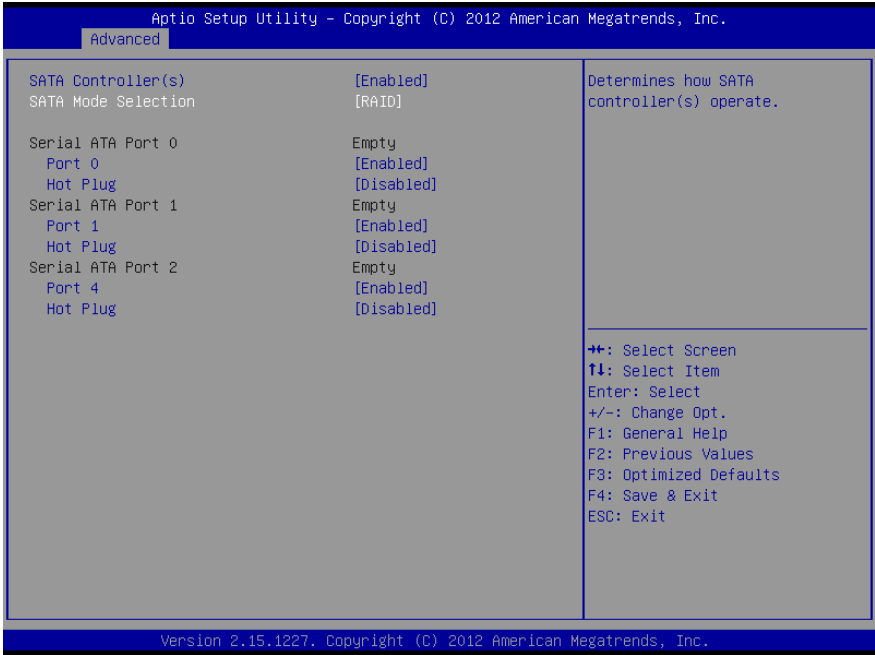


Options summary:

SATA Controllers	Disabled	Default
	Enabled	
En/Disable SATA Controller.		
SATA Mode	IDE	Default
	AHCI	
	RAID	
IDE: Configure SATA controllers as legacy IDEAHCI: Configure SATA controllers to operate in AHCI mode		
Port x	Disabled	Optimal Default, Failsafe Default
	Enabled	
En/Disable SATA Port.		
Hot Plug	Disabled	Optimal Default, Failsafe Default
	Enabled	
En/Disable Hot Plug feature.		

3.4.4 Advanced: Intel TXT (LT) Configuration

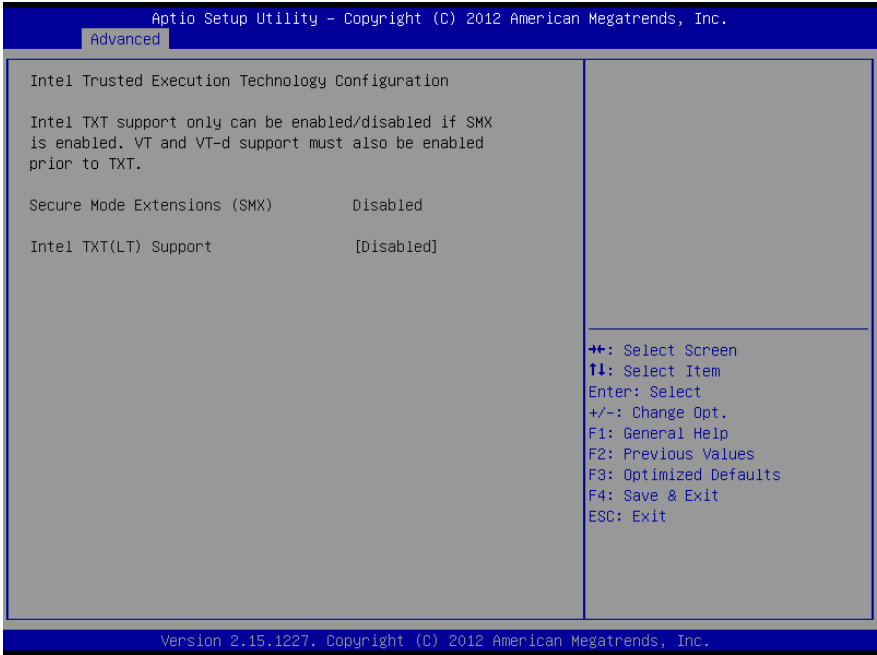

3.4.5 Advanced: PCH-FW Configuration

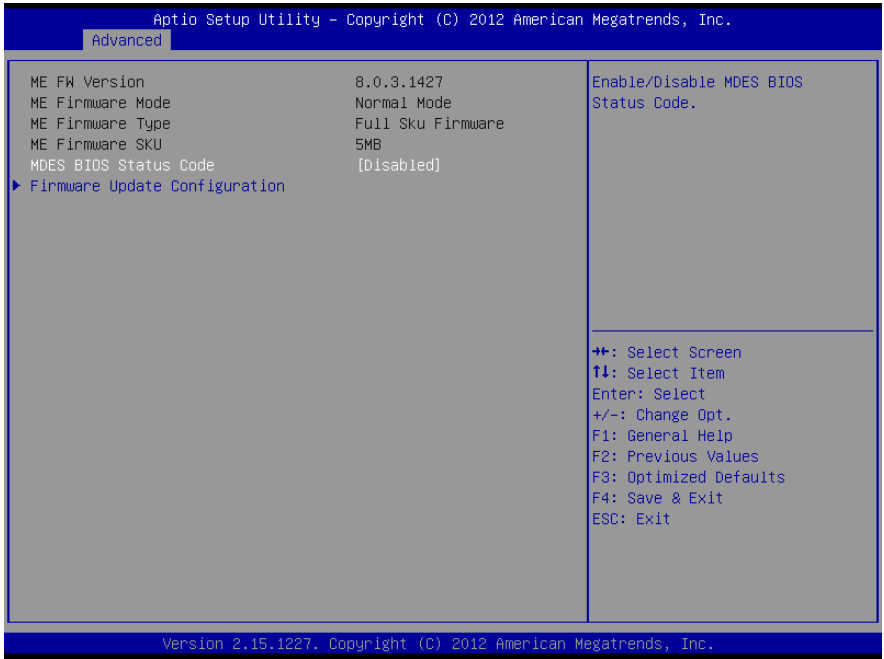

Options summary:

MDES BIOS Status Code	Disabled	Optimal Default, Failsafe Default
	Enabled	
Enable/Disable MDES BIOS Status Code.		


3.4.6 Advanced: Firmware Update Configuration



Options summary:

Me FW Image Re-Flash	Disabled	Optimal Default, Failsafe Default
	Enabled	
Enable/Disable Me FW Image Re-Flash function.		

3.4.7 Advanced: Super IO Configuration

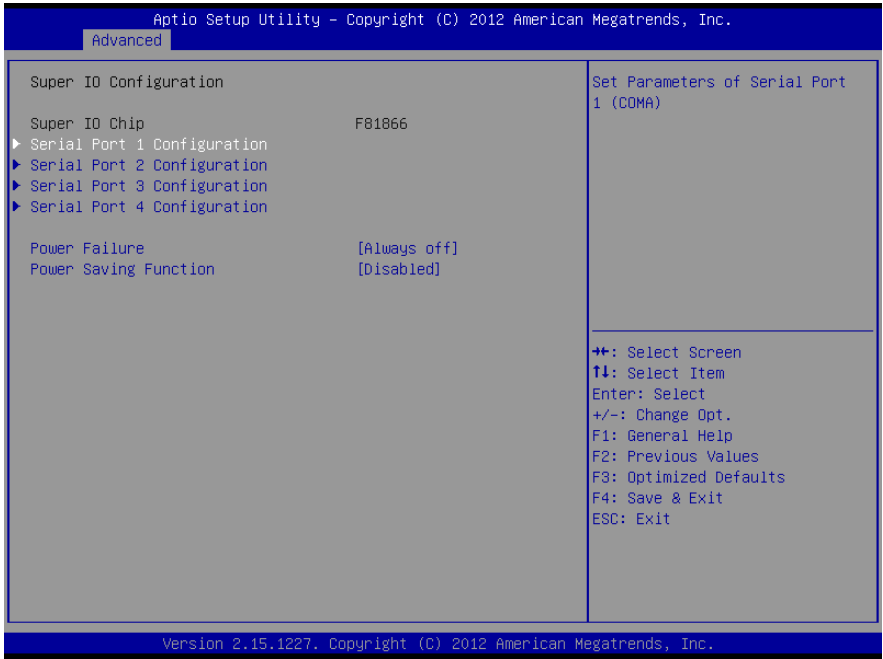

Options summary:

Power Failure	Keep last state	Default
	Always on	
	Always off	
Power Saving Function	Disabled	Default
	Enabled	
<p>Enable to reduce power consumption in system off state. When Enabled, only power button can power-up system.</p>		


3.4.7.1 Super IO Configuration: Serial Port 1 Configuration



Options summary:

Serial Port	Disabled	Default
	Enabled	
Allows BIOS to En/Disable correspond serial port.		
Change Settings	Auto	Default
	IO=3F8h; IRQ=4;	
	IO=3F8h; IRQ=3,4;	
	IO=2F8h; IRQ=3,4;	
	IO=3E8h; IRQ=3,4	
IO=2E8h; IRQ=3,4;		
Allows BIOS to Select Serial Port resource.		


3.4.7.2 Super IO Configuration: Serial Port 2 Configuration

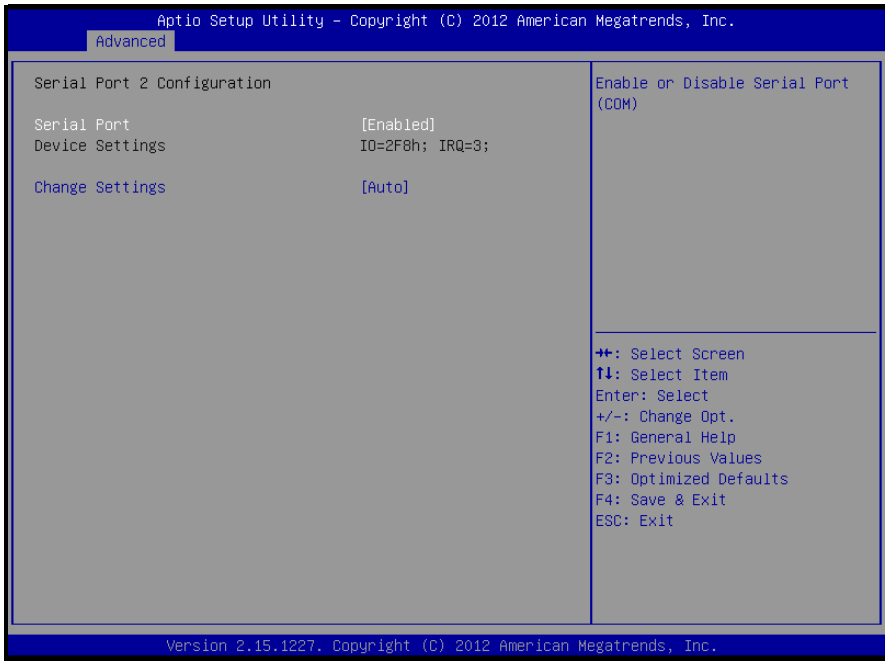

Options summary:

Serial Port	Disabled	
	Enabled	Default
Allows BIOS to En/Disable correspond serial port.		
Change Settings	Auto	Default
	IO=2F8h; IRQ=3;	
	IO=3F8h; IRQ=3,4;	
	IO=2F8h; IRQ=3,4;	
	IO=3E8h; IRQ=3,4;	
	IO=2E8h; IRQ=3,4;	
Allows BIOS to Select Serial Port resource.		


3.4.7.3 Super IO Configuration: Serial Port 3 Configuration

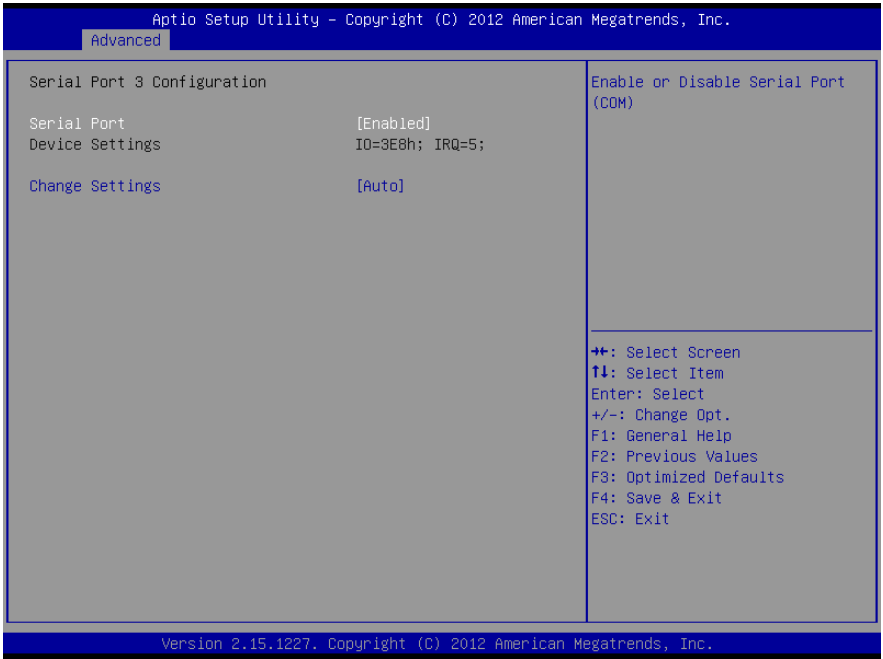

Options summary:

Serial Port	Disabled	Default
	Enabled	
Allows BIOS to En/Disable correspond serial port.		
Change Settings	Auto	Default
	IO=3E8h; IRQ=10;	
	IO=3E8h; IRQ=10,11;;	
	IO=2E8h; IRQ=10,11;	
	IO=2D0h; IRQ=10,11;	
	IO=2D8h; IRQ=10,11;	
Allows BIOS to Select Serial Port resource.		

3.4.7.4 Super IO Configuration: Serial Port 4 Configuration

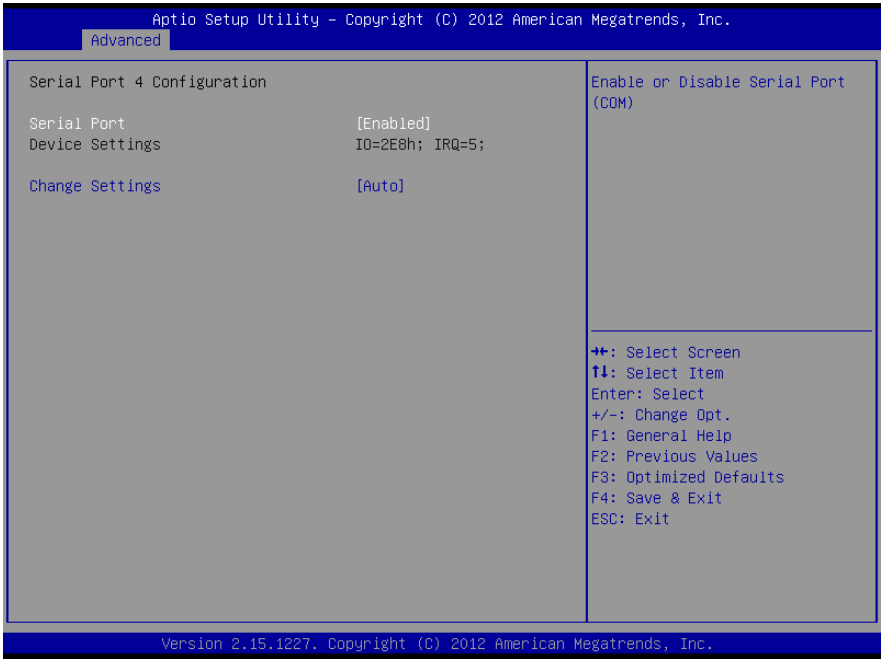

Options summary:

Serial Port	Disabled	Default
	Enabled	
Allows BIOS to En/Disable correspond serial port.		
Change Settings	Auto	Default
	IO=2E8h; IRQ=10;	
	IO=3E8h; IRQ=10,11;;	
	IO=2E8h; IRQ=10,11;	
	IO=2D0h; IRQ=10,11;	
	IO=2D8h; IRQ=10,11;	
Allows BIOS to Select Serial Port resource.		

3.4.8 Advanced: F81866 H/W Monitor

Aptio Setup Utility - Copyright (C) 2012 American Megatrends, Inc.


Advanced

Pc Health Status	
CPU temperature	: +47 °C
System temperature	: +46 °C
Fan1 Speed	: N/A
Fan2 Speed	: N/A
Vcore	: +0.960 V
5Vdual	: +4.980 V
5Vsb	: +4.908 V
12V	: +12.033 V
VCC3V	: +3.312 V
VSB3V	: +3.328 V
VBAT	: +3.248 V

→+: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.15.1227. Copyright (C) 2012 American Megatrends, Inc.


3.4.9 Advanced: Digital I/O

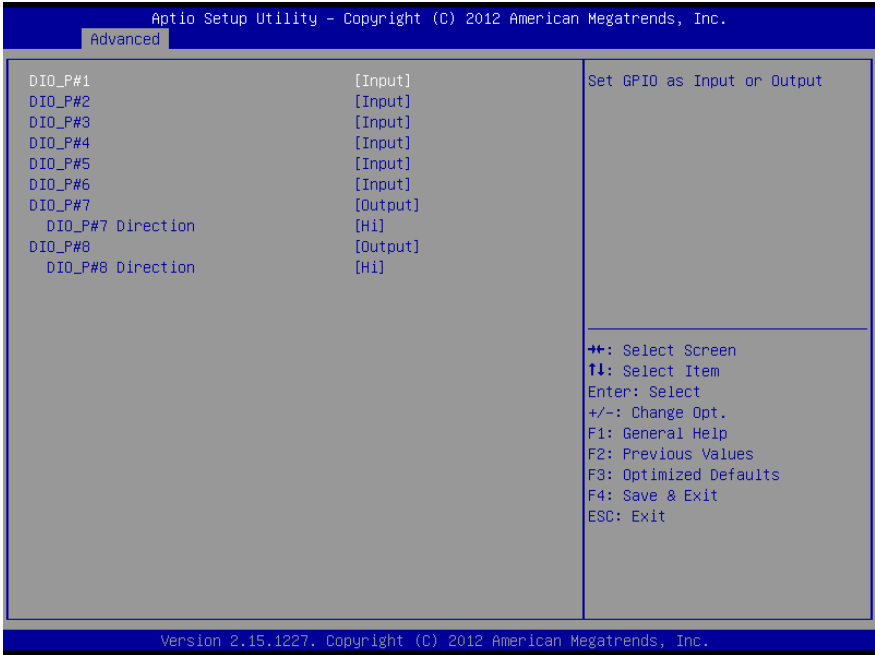


Options summary:

DIO_P#1~6	Input	Default
	Output	
Allows BIOS to select input/output function to corresponding DIO ping.		
DIO_P#7~8	Input	Default
	Output	
Allows BIOS to select input/output function to corresponding DIO ping.		
DIO_P#7~8 Direction	Low	Default
	Hi	
Allows BIOS to select high/low voltage level to output to corresponding DIO ping.		

3.5 Setup submenu: Chipset

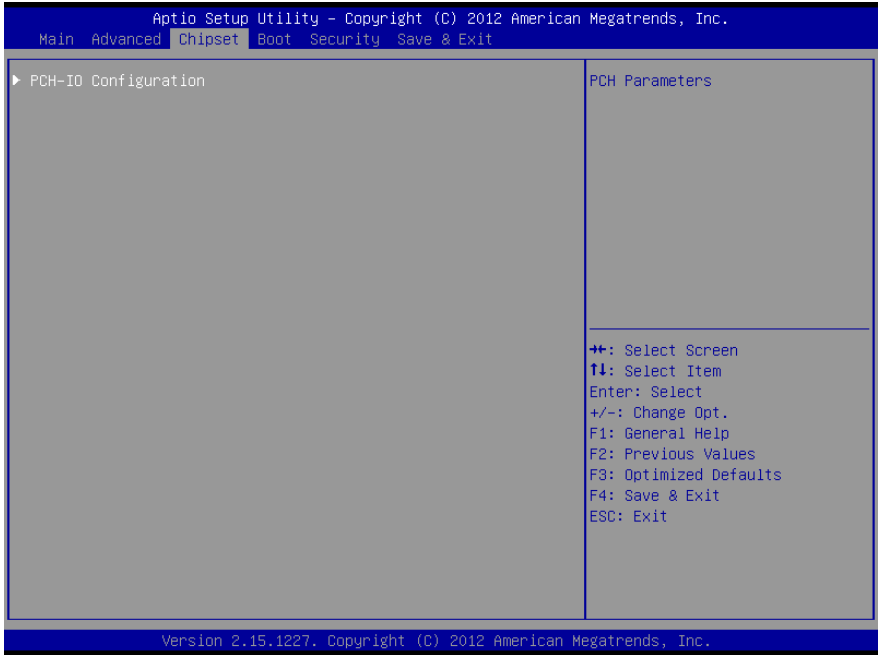

3.5.1 Chipset: PCH-IO Configuration

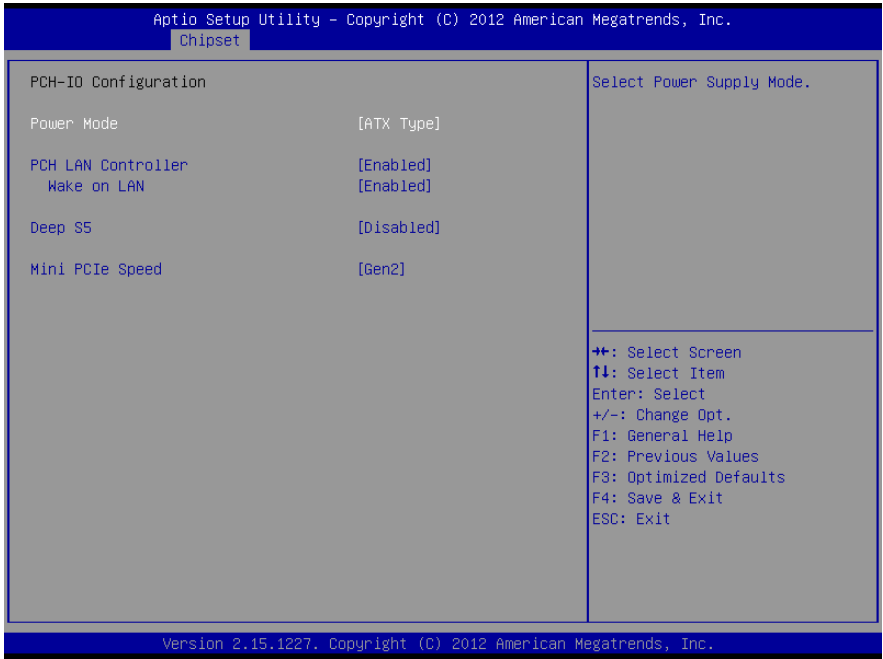


Options summary:

Power Mode	ATX Type	Default
	AT Type	
Select Power Supply Mode.		
PCH LAN Controller	Enabled	Default
	Disabled	
Enable or disable onboard NIC.		
Wake on LAN	Enabled	Default
	Disabled	
Enable or disable integrated LAN to wake the system.(The Wake On LAN cannot be disabled if ME is on at Sx state.)		
Deep S5	Disabled	Default
	Enabled	
Enabled/Disabled Deep S5. Note: When Deep S5 is enabled, Intel(R) AMT and Wake On PCH LAN functions are not available in system shut down.		
Mini PCIe Spped	Gen1	

	Gen2	Default
Select Mini PCI Express port speed.		


3.6 Setup submenu: Boot

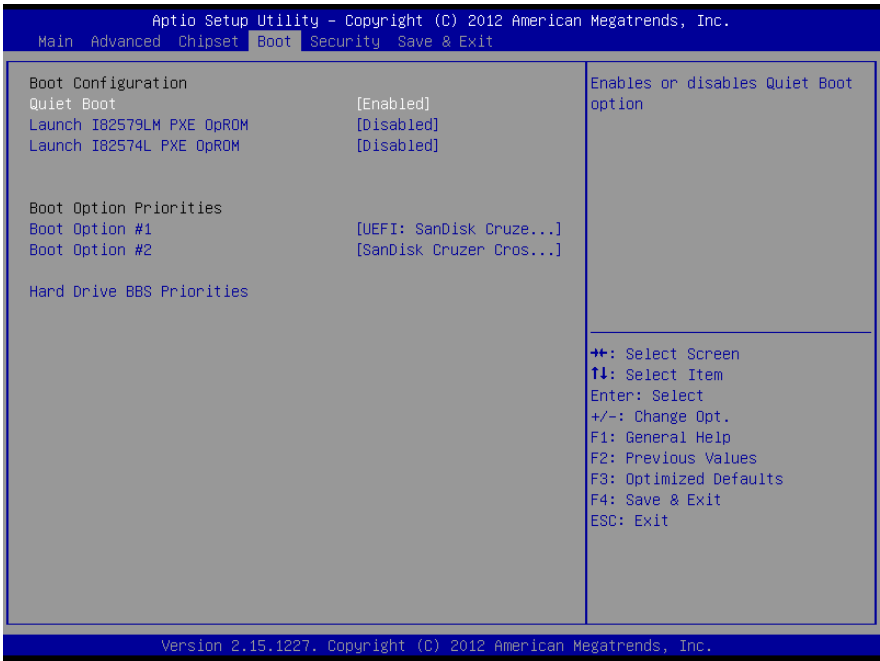


Options summary:

Quiet Boot	Disabled	Default
	Enabled	
En/Disable showing boot logo.		
Launch I82579LM PXE OpROM	Disabled	Default
	Enabled	
En/Disable Legacy Boot Option for I82579LM.		
Launch I82574L PXE OpROM	Disabled	Default
	Enabled	
En/Disable Legacy Boot Option for I82583V.		

3.6.1 Boot: BBS Priorities

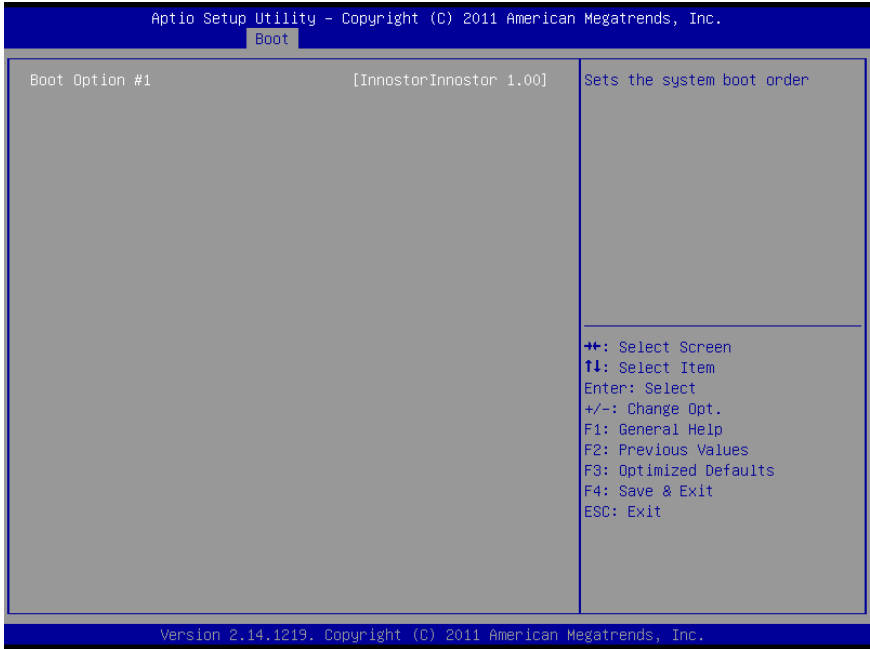

3.7 Setup submenu: Security

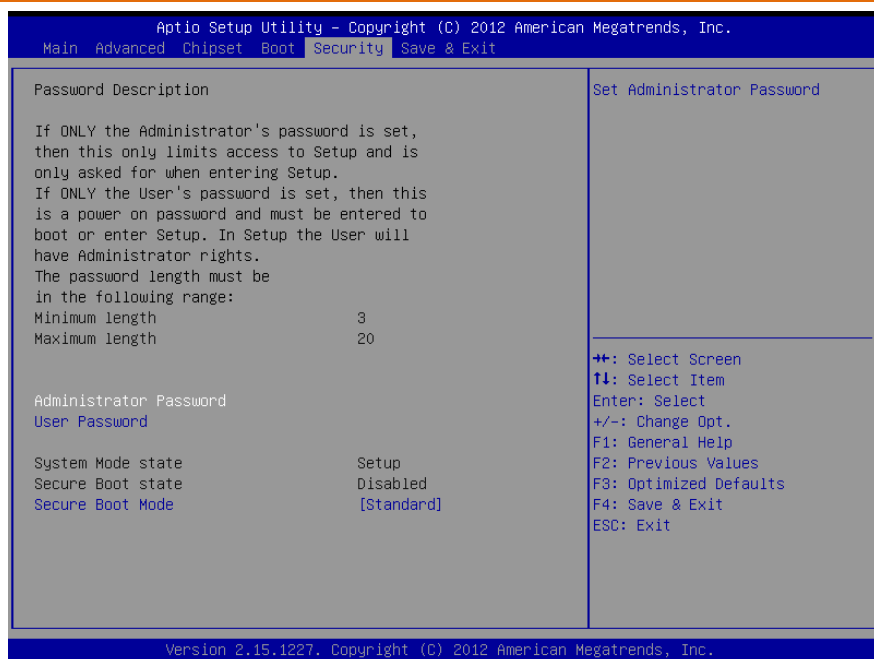

Change User/Administrator Password


You can set a User Password once an Administrator Password is set. The password will be required during boot up, or when the user enters the Setup utility. Please Note that a User Password does not provide access to many of the features in the Setup utility.

Select the password you wish to set, press Enter to open a dialog box to enter your password (you can enter no more than six letters or numbers). Press Enter to confirm your entry, after which you will be prompted to retype your password for a final confirmation. Press Enter again after you have retyped it correctly.

Removing the Password

Highlight this item and type in the current password. At the next dialog box press Enter to disable password protection.

3.8 Setup submenu: Exit

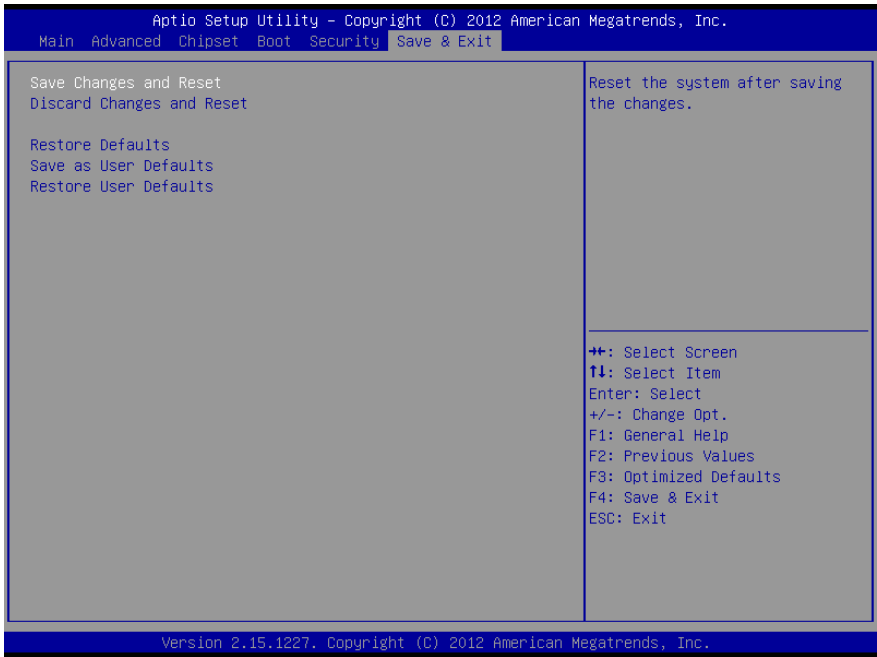

Chapter 4

Drivers Installation

4.1 Product CD/DVD

The AEV-6356 comes with a product DVD that contains all the drivers and utilities you need to setup your product. Insert the DVD and follow the steps in the autorun program to install the drivers.

In case the program does not start, follow the sequence below to install the drivers.

Step 1 – Install Chipset Drivers

1. Open the **Step 1 - Chipset** folder followed by the **infinst_autol_9.3.0.1020.exe** file
2. Follow the instructions
3. Drivers will be installed automatically

Step 2 – Install Graphics Driver

1. Open the **Step 2 - VGA** folder and select your OS
2. Open the **Setup.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Step 3 – Install Network Driver

1. Open the **Step 3 - LAN** folder and select your OS
2. Open the **.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Step 4 – Install Audio Driver (Windows 8.1/10 only)

1. Open the **Step 4 – Audio** folder and select your OS
2. Open the **.exe** file in the folder
3. Follow the instructions
4. Drivers will be installed automatically

Step 5 – Install USB 3.0 Drivers

1. Open the **Step 5 – USB 3.0** followed by the **Setup.exe** file
2. Follow the instructions
3. Drivers will be installed automatically

Step 6 – Install RAID & AHCI Drivers

Please refer to **Appendix C RAID & AHCI Settings**

Step 7 – Install ME Drivers

1. Open the **Step 7 – ME** followed by the **Setup.exe** file
2. Follow the instructions
1. Drivers will be installed automatically

Appendix A

Watchdog Timer Programming

A.1 Watchdog Timer Initial Program

Table 1 : SuperIO relative register table		
	Default Value	Note
Index	0x2E(Note1)	SIO MB PnP Mode Index Register 0x2E or 0x4E
Data	0x2F(Note2)	SIO MB PnP Mode Data Register 0x2F or 0x4F

Table 2 : Watchdog relative register table					
	LDN	Register	BitNum	Value	Note
Timer Counter	0x07(Note3)	0xF6(Note4)		(Note24)	Time of watchdog timer (0~255) This register is byte access
Counting Unit	0x07(Note5)	0xF5(Note6)	3(Note7)	0(Note8)	Select time unit. 0: second 1: minute
Watchdog Enable	0x07(Note9)	0xF5(Note10)	5(Note11)	1(Note12)	0: Disable 1: Enable
Timeout Status	0x07(Note13)	0xF5(Note14)	6(Note15)	1	1: Clear timeout status
Output Mode	0x07(Note16)	0xF5(Note17)	4(Note18)	1(Note19)	Select WDTRST# output mode 0: level 1: pulse
WDTRST output	0x07(Note20)	0xFA(Note21)	0(Note22)	1(Note23)	Enable/Disable time out output via WDTRST# 0: Disable 1: Enable

A.2 Watchdog Sample Program

```
*****
// SuperIO relative definition (Please reference to Table 1)
#define byte SIOIndex //This parameter is represented from Note1
#define byte SIOData //This parameter is represented from Note2
#define void IOWriteByte(byte IOPort, byte Value);
#define byte IOReadByte(byte IOPort);
// Watch Dog relative definition (Please reference to Table 2)
#define byte TimerLDN //This parameter is represented from Note3
#define byte TimerReg //This parameter is represented from Note4
#define byte TimerVal // This parameter is represented from Note24
#define byte UnitLDN //This parameter is represented from Note5
#define byte UnitReg //This parameter is represented from Note6
#define byte UnitBit //This parameter is represented from Note7
#define byte UnitVal //This parameter is represented from Note8
#define byte EnableLDN //This parameter is represented from Note9
#define byte EnableReg //This parameter is represented from Note10
#define byte EnableBit //This parameter is represented from Note11
#define byte EnableVal //This parameter is represented from Note12
#define byte StatusLDN // This parameter is represented from Note13
#define byte StatusReg // This parameter is represented from Note14
#define byte StatusBit // This parameter is represented from Note15
#define byte ModeLDN // This parameter is represented from Note16
#define byte ModeReg // This parameter is represented from Note17
#define byte ModeBit // This parameter is represented from Note18
#define byte ModeVal // This parameter is represented from Note19
#define byte WDTRstLDN // This parameter is represented from Note20
#define byte WDTRstReg // This parameter is represented from Note21
#define byte WDTRstBit // This parameter is represented from Note22
#define byte WDTRstVal // This parameter is represented from Note23
*****
```

```
*****  
VOID Main(){  
    // Procedure : AaeonWDTConfig  
    // (byte)Timer : Time of WDT timer.(0x00~0xFF)  
    // (boolean)Unit : Select time unit(0: second, 1: minute).  
    AaeonWDTConfig();  
  
    // Procedure : AaeonWDTEnable  
    // This procedure will enable the WDT counting.  
    AaeonWDTEnable();  
}  
*****
```

```

*****
// Procedure : AaeonWDTEnable
VOID  AaeonWDTEnable (){
    WDTEnableDisable(EnableLDN, EnableReg, EnableBit, 1);
}

// Procedure : AaeonWDTConfig
VOID  AaeonWDTConfig (){
    // Disable WDT counting
    WDTEnableDisable(EnableLDN, EnableReg, EnableBit, 0);
    // Clear Watchdog Timeout Status
    WDTClearTimeoutStatus();
    // WDT relative parameter setting
    WDTParameterSetting();
}

VOID  WDTEnableDisable(byte LDN, byte Register, byte BitNum, byte Value){
    SIOBitSet(LDN, Register, BitNum, Value);
}

VOID  WDTParameterSetting(){
    // Watchdog Timer counter setting
    SIOByteSet(TimerLDN, TimerReg, TimerVal);
    // WDT counting unit setting
    SIOBitSet(UnitLDN, UnitReg, UnitBit, UnitVal);
    // WDT output mode setting, level / pulse
    SIOBitSet(ModelLDN, ModeReg, ModeBit, ModeVal);
    // Watchdog timeout output via WDTRST#
    SIOBitSet(WDTRstLDN, WDTRstReg, WDTRstBit, WDTRstVal);
}

VOID  WDTClearTimeoutStatus(){
    SIOBitSet(StatusLDN, StatusReg, StatusBit, 1);
}
*****

```

```

*****
VOID  SIOEnterMBPnPMode(){
    IOWriteByte(SIOIndex, 0x87);
    IOWriteByte(SIOIndex, 0x87);
}

VOID  SIOExitMBPnPMode(){
    IOWriteByte(SIOIndex, 0xAA);
}

VOID  SIOSelectLDN(byte LDN){
    IOWriteByte(SIOIndex, 0x07); // SIO LDN Register Offset = 0x07
    IOWriteByte(SIOData, LDN);
}

VOID  SIOBitSet(byte LDN, byte Register, byte BitNum, byte Value){
    Byte TmpValue;

    SIOEnterMBPnPMode();
    SIOSelectLDN(byte LDN);
    IOWriteByte(SIOIndex, Register);
    TmpValue = IOReadByte(SIOData);
    TmpValue &= ~(1 << BitNum);
    TmpValue |= (Value << BitNum);
    IOWriteByte(SIOData, TmpValue);
    SIOExitMBPnPMode();
}


VOID  SIOByteSet(byte LDN, byte Register, byte Value){
    SIOEnterMBPnPMode();
    SIOSelectLDN(LDN);
    IOWriteByte(SIOIndex, Register);
    IOWriteByte(SIOData, Value);
    SIOExitMBPnPMode();
}
*****

```


Appendix B

I/O Information

B.1 I/O Address Map

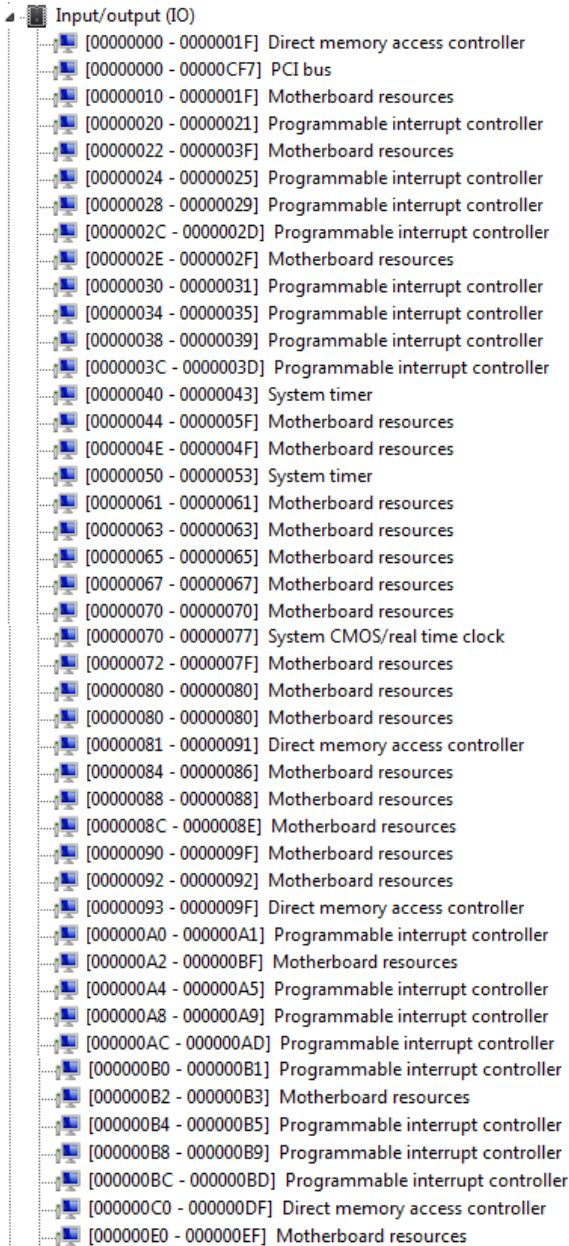

Address Range	Device Name
[00000000 - 0000001F]	Direct memory access controller
[00000000 - 00000CF7]	PCI bus
[00000010 - 0000001F]	Motherboard resources
[00000020 - 00000021]	Programmable interrupt controller
[00000022 - 0000003F]	Motherboard resources
[00000024 - 00000025]	Programmable interrupt controller
[00000028 - 00000029]	Programmable interrupt controller
[0000002C - 0000002D]	Programmable interrupt controller
[0000002E - 0000002F]	Motherboard resources
[00000030 - 00000031]	Programmable interrupt controller
[00000034 - 00000035]	Programmable interrupt controller
[00000038 - 00000039]	Programmable interrupt controller
[0000003C - 0000003D]	Programmable interrupt controller
[00000040 - 00000043]	System timer
[00000044 - 0000005F]	Motherboard resources
[0000004E - 0000004F]	Motherboard resources
[00000050 - 00000053]	System timer
[00000061 - 00000061]	Motherboard resources
[00000063 - 00000063]	Motherboard resources
[00000065 - 00000065]	Motherboard resources
[00000067 - 00000067]	Motherboard resources
[00000070 - 00000070]	Motherboard resources
[00000070 - 00000077]	System CMOS/real time clock
[00000072 - 0000007F]	Motherboard resources
[00000080 - 00000080]	Motherboard resources
[00000080 - 00000080]	Motherboard resources
[00000081 - 00000091]	Direct memory access controller
[00000084 - 00000086]	Motherboard resources
[00000088 - 00000088]	Motherboard resources
[0000008C - 0000008E]	Motherboard resources
[00000090 - 0000009F]	Motherboard resources
[00000092 - 00000092]	Motherboard resources
[00000093 - 0000009F]	Direct memory access controller
[000000A0 - 000000A1]	Programmable interrupt controller
[000000A2 - 000000BF]	Motherboard resources
[000000A4 - 000000A5]	Programmable interrupt controller
[000000A8 - 000000A9]	Programmable interrupt controller
[000000AC - 000000AD]	Programmable interrupt controller
[000000B0 - 000000B1]	Programmable interrupt controller
[000000B2 - 000000B3]	Motherboard resources
[000000B4 - 000000B5]	Programmable interrupt controller
[000000B8 - 000000B9]	Programmable interrupt controller
[000000BC - 000000BD]	Programmable interrupt controller
[000000C0 - 000000DF]	Direct memory access controller
[000000E0 - 000000EF]	Motherboard resources

[00000F0 - 00000FF]	Numeric data processor
[000003B0 - 000003BB]	Intel(R) HD Graphics 4000
[000003C0 - 000003DF]	Intel(R) HD Graphics 4000
[00000400 - 00000453]	Motherboard resources
[00000454 - 00000457]	Motherboard resources
[00000458 - 0000047F]	Motherboard resources
[000004D0 - 000004D1]	Motherboard resources
[000004D0 - 000004D1]	Programmable interrupt controller
[00000500 - 0000057F]	Motherboard resources
[00000680 - 0000069F]	Motherboard resources
[00000A00 - 00000A0F]	Motherboard resources
[00000A10 - 00000A1F]	Motherboard resources
[00000A20 - 00000A2F]	Motherboard resources
[00000D00 - 0000FFFF]	PCI bus
[00001000 - 0000100F]	Motherboard resources
[0000164E - 0000164F]	Motherboard resources
[0000E000 - 0000EFFF]	Intel(R) 7 Series/C216 Chipset Family PCI Express Root Port 2 - 1E12
[0000F000 - 0000F03F]	Intel(R) HD Graphics 4000
[0000F040 - 0000F05F]	Intel(R) 7 Series/C216 Chipset Family SMBus Host Controller - 1E22
[0000F080 - 0000F08F]	Intel(R) 7 Series/C216 Chipset Family 2 port Serial ATA Storage Controller - 1E09
[0000F090 - 0000F09F]	Intel(R) 7 Series/C216 Chipset Family 2 port Serial ATA Storage Controller - 1E09
[0000F0A0 - 0000F0A3]	Intel(R) 7 Series/C216 Chipset Family 2 port Serial ATA Storage Controller - 1E09
[0000F0B0 - 0000F0B7]	Intel(R) 7 Series/C216 Chipset Family 2 port Serial ATA Storage Controller - 1E09
[0000F0C0 - 0000F0C3]	Intel(R) 7 Series/C216 Chipset Family 2 port Serial ATA Storage Controller - 1E09
[0000F0D0 - 0000F0D7]	Intel(R) 7 Series/C216 Chipset Family 2 port Serial ATA Storage Controller - 1E09
[0000F0E0 - 0000F0EF]	Intel(R) 7 Series/C216 Chipset Family 4 port Serial ATA Storage Controller - 1E01
[0000F0F0 - 0000F0FF]	Intel(R) 7 Series/C216 Chipset Family 4 port Serial ATA Storage Controller - 1E01
[0000F100 - 0000F103]	Intel(R) 7 Series/C216 Chipset Family 4 port Serial ATA Storage Controller - 1E01
[0000F110 - 0000F117]	Intel(R) 7 Series/C216 Chipset Family 4 port Serial ATA Storage Controller - 1E01
[0000F120 - 0000F123]	Intel(R) 7 Series/C216 Chipset Family 4 port Serial ATA Storage Controller - 1E01
[0000F130 - 0000F137]	Intel(R) 7 Series/C216 Chipset Family 4 port Serial ATA Storage Controller - 1E01
[0000F140 - 0000F147]	Intel(R) Active Management Technology - SOL (COM5)
[0000FFFF - 0000FFFF]	Motherboard resources
[0000FFFF - 0000FFFF]	Motherboard resources

B.2 Memory Address Map































The image shows a screenshot of the Windows System Information tool, specifically the 'Memory' section. It displays a list of memory addresses and their corresponding hardware components. The list is organized into two sections, with a dotted line separating them. Each entry includes a memory address range, a hardware icon, and the device name.


















Memory Address Range	Hardware Component
[000A0000 - 000BFFFF]	Intel(R) HD Graphics 4000
[000A0000 - 000BFFFF]	PCI bus
[000D0000 - 000D3FFF]	PCI bus
[000D4000 - 000D7FFF]	PCI bus
[000D8000 - 000DBFFF]	PCI bus
[000DC000 - 000DFFFF]	PCI bus
[000E0000 - 000E3FFF]	PCI bus
[000E4000 - 000E7FFF]	PCI bus
[20000000 - 201FFFFF]	System board
[40004000 - 40004FFF]	System board
[DFA00000 - DFA00FFF]	Motherboard resources
[DFA00000 - FEAFFFFF]	PCI bus
[E0000000 - EFFFFFFF]	Intel(R) HD Graphics 4000
[F7800000 - F7BFFFFF]	Intel(R) HD Graphics 4000
[F7C00000 - F7CFFFFFFF]	Intel(R) 7 Series/C216 Chipset Family PCI Express Root Port 2 - 1E12
[F7C40000 - F7C5FFFF]	Intel(R) Gigabit CT Desktop Adapter
[F7C60000 - F7C63FFF]	Intel(R) Gigabit CT Desktop Adapter
[F7D00000 - F7D1FFFF]	Intel(R) 82579LM Gigabit Network Connection
[F7D20000 - F7D2FFFF]	Intel(R) USB 3.0 eXtensible Host Controller
[F7D30000 - F7D33FFF]	High Definition Audio Controller
[F7D35000 - F7D350FF]	Intel(R) 7 Series/C216 Chipset Family SMBus Host Controller - 1E22
[F7D36000 - F7D363FF]	Intel(R) 7 Series/C216 Chipset Family USB Enhanced Host Controller - 1E26
[F7D37000 - F7D373FF]	Intel(R) 7 Series/C216 Chipset Family USB Enhanced Host Controller - 1E2D
[F7D38000 - F7D38FFF]	Intel(R) 82579LM Gigabit Network Connection
[F7D39000 - F7D39FFF]	Intel(R) Active Management Technology - SOL (COM5)
[F7D3B000 - F7D3B00F]	Intel(R) Management Engine Interface
[F8000000 - FBFFFFFF]	Motherboard resources
[FED00000 - FED003FF]	High precision event timer
[FED10000 - FED17FFF]	Motherboard resources
[FED18000 - FED18FFF]	Motherboard resources
[FED19000 - FED19FFF]	Motherboard resources
[FED1C000 - FED1FFFF]	Motherboard resources
[FED20000 - FED3FFFF]	Motherboard resources
[FED40000 - FED44FFF]	System board
[FED45000 - FED8FFFF]	Motherboard resources
[FED90000 - FED93FFF]	Motherboard resources
[FEE00000 - FEEFFFFFFF]	Motherboard resources
[FF000000 - FFFFFFFF]	Intel(R) 82802 Firmware Hub Device
[FF000000 - FFFFFFFF]	Motherboard resources




B.3 IRQ Mapping Chart








































ISA Address	Device Name
(ISA) 0x00000000 (00)	System timer
(ISA) 0x00000008 (08)	System CMOS/real time clock
(ISA) 0x0000000D (13)	Numeric data processor
(ISA) 0x00000051 (81)	Microsoft ACPI-Compliant System
(ISA) 0x00000052 (82)	Microsoft ACPI-Compliant System
(ISA) 0x00000053 (83)	Microsoft ACPI-Compliant System
(ISA) 0x00000054 (84)	Microsoft ACPI-Compliant System
(ISA) 0x00000055 (85)	Microsoft ACPI-Compliant System
(ISA) 0x00000056 (86)	Microsoft ACPI-Compliant System
(ISA) 0x00000057 (87)	Microsoft ACPI-Compliant System
(ISA) 0x00000058 (88)	Microsoft ACPI-Compliant System
(ISA) 0x00000059 (89)	Microsoft ACPI-Compliant System
(ISA) 0x0000005A (90)	Microsoft ACPI-Compliant System
(ISA) 0x0000005B (91)	Microsoft ACPI-Compliant System
(ISA) 0x0000005C (92)	Microsoft ACPI-Compliant System
(ISA) 0x0000005D (93)	Microsoft ACPI-Compliant System
(ISA) 0x0000005E (94)	Microsoft ACPI-Compliant System
(ISA) 0x0000005F (95)	Microsoft ACPI-Compliant System
(ISA) 0x00000060 (96)	Microsoft ACPI-Compliant System
(ISA) 0x00000061 (97)	Microsoft ACPI-Compliant System
(ISA) 0x00000062 (98)	Microsoft ACPI-Compliant System
(ISA) 0x00000063 (99)	Microsoft ACPI-Compliant System
(ISA) 0x00000064 (100)	Microsoft ACPI-Compliant System
(ISA) 0x00000065 (101)	Microsoft ACPI-Compliant System
(ISA) 0x00000066 (102)	Microsoft ACPI-Compliant System
(ISA) 0x00000067 (103)	Microsoft ACPI-Compliant System
(ISA) 0x00000068 (104)	Microsoft ACPI-Compliant System
(ISA) 0x00000069 (105)	Microsoft ACPI-Compliant System
(ISA) 0x0000006A (106)	Microsoft ACPI-Compliant System
(ISA) 0x0000006B (107)	Microsoft ACPI-Compliant System
(ISA) 0x0000006C (108)	Microsoft ACPI-Compliant System
(ISA) 0x0000006D (109)	Microsoft ACPI-Compliant System
(ISA) 0x0000006E (110)	Microsoft ACPI-Compliant System
(ISA) 0x0000006F (111)	Microsoft ACPI-Compliant System
(ISA) 0x00000070 (112)	Microsoft ACPI-Compliant System
(ISA) 0x00000071 (113)	Microsoft ACPI-Compliant System
(ISA) 0x00000072 (114)	Microsoft ACPI-Compliant System
(ISA) 0x00000073 (115)	Microsoft ACPI-Compliant System
(ISA) 0x00000074 (116)	Microsoft ACPI-Compliant System
(ISA) 0x00000075 (117)	Microsoft ACPI-Compliant System
(ISA) 0x00000076 (118)	Microsoft ACPI-Compliant System
(ISA) 0x00000077 (119)	Microsoft ACPI-Compliant System
(ISA) 0x00000078 (120)	Microsoft ACPI-Compliant System

 (ISA) 0x0000079 (121) Microsoft ACPI-Compliant System
 (ISA) 0x000007A (122) Microsoft ACPI-Compliant System
 (ISA) 0x000007B (123) Microsoft ACPI-Compliant System
 (ISA) 0x000007C (124) Microsoft ACPI-Compliant System

 (ISA) 0x000007D (125) Microsoft ACPI-Compliant System
 (ISA) 0x000007E (126) Microsoft ACPI-Compliant System
 (ISA) 0x000007F (127) Microsoft ACPI-Compliant System
 (ISA) 0x0000080 (128) Microsoft ACPI-Compliant System
 (ISA) 0x0000081 (129) Microsoft ACPI-Compliant System
 (ISA) 0x0000082 (130) Microsoft ACPI-Compliant System
 (ISA) 0x0000083 (131) Microsoft ACPI-Compliant System
 (ISA) 0x0000084 (132) Microsoft ACPI-Compliant System
 (ISA) 0x0000085 (133) Microsoft ACPI-Compliant System
 (ISA) 0x0000086 (134) Microsoft ACPI-Compliant System
 (ISA) 0x0000087 (135) Microsoft ACPI-Compliant System
 (ISA) 0x0000088 (136) Microsoft ACPI-Compliant System
 (ISA) 0x0000089 (137) Microsoft ACPI-Compliant System
 (ISA) 0x000008A (138) Microsoft ACPI-Compliant System
 (ISA) 0x000008B (139) Microsoft ACPI-Compliant System
 (ISA) 0x000008C (140) Microsoft ACPI-Compliant System
 (ISA) 0x000008D (141) Microsoft ACPI-Compliant System
 (ISA) 0x000008E (142) Microsoft ACPI-Compliant System
 (ISA) 0x000008F (143) Microsoft ACPI-Compliant System
 (ISA) 0x0000090 (144) Microsoft ACPI-Compliant System
 (ISA) 0x0000091 (145) Microsoft ACPI-Compliant System
 (ISA) 0x0000092 (146) Microsoft ACPI-Compliant System
 (ISA) 0x0000093 (147) Microsoft ACPI-Compliant System
 (ISA) 0x0000094 (148) Microsoft ACPI-Compliant System

 (ISA) 0x0000095 (149) Microsoft ACPI-Compliant System
 (ISA) 0x0000096 (150) Microsoft ACPI-Compliant System
 (ISA) 0x0000097 (151) Microsoft ACPI-Compliant System
 (ISA) 0x0000098 (152) Microsoft ACPI-Compliant System
 (ISA) 0x0000099 (153) Microsoft ACPI-Compliant System
 (ISA) 0x000009A (154) Microsoft ACPI-Compliant System
 (ISA) 0x000009B (155) Microsoft ACPI-Compliant System
 (ISA) 0x000009C (156) Microsoft ACPI-Compliant System
 (ISA) 0x000009D (157) Microsoft ACPI-Compliant System
 (ISA) 0x000009E (158) Microsoft ACPI-Compliant System
 (ISA) 0x000009F (159) Microsoft ACPI-Compliant System
 (ISA) 0x00000A0 (160) Microsoft ACPI-Compliant System
 (ISA) 0x00000A1 (161) Microsoft ACPI-Compliant System
 (ISA) 0x00000A2 (162) Microsoft ACPI-Compliant System
 (ISA) 0x00000A3 (163) Microsoft ACPI-Compliant System
 (ISA) 0x00000A4 (164) Microsoft ACPI-Compliant System
 (ISA) 0x00000A5 (165) Microsoft ACPI-Compliant System

 (ISA) 0x00000A6 (166) Microsoft ACPI-Compliant System
 (ISA) 0x00000A7 (167) Microsoft ACPI-Compliant System
 (ISA) 0x00000A8 (168) Microsoft ACPI-Compliant System

	(ISA) 0x000000A9 (169)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AA (170)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AB (171)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AC (172)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AD (173)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AE (174)	Microsoft ACPI-Compliant System
	(ISA) 0x000000AF (175)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B0 (176)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B1 (177)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B2 (178)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B3 (179)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B4 (180)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B5 (181)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B6 (182)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B7 (183)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B8 (184)	Microsoft ACPI-Compliant System
	(ISA) 0x000000B9 (185)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BA (186)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BB (187)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BC (188)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BD (189)	Microsoft ACPI-Compliant System
	(ISA) 0x000000BE (190)	Microsoft ACPI-Compliant System
	(PCI) 0x0000000B (11)	Intel(R) 7 Series/C216 Chipset Family SMBus Host Controller - 1E22
	(PCI) 0x00000010 (16)	Intel(R) 7 Series/C216 Chipset Family USB Enhanced Host Controller - 1E2D
	(PCI) 0x00000010 (16)	Intel(R) 7 Series/C216 Chipset Family PCI Express Root Port 1 - 1E10
	(PCI) 0x00000010 (16)	Intel(R) Management Engine Interface
	(PCI) 0x00000011 (17)	Intel(R) 7 Series/C216 Chipset Family PCI Express Root Port 2 - 1E12
	(PCI) 0x00000013 (19)	Intel(R) 7 Series/C216 Chipset Family 4 port Serial ATA Storage Controller - 1E01
	(PCI) 0x00000013 (19)	Intel(R) 7 Series/C216 Chipset Family 2 port Serial ATA Storage Controller - 1E09
	(PCI) 0x00000013 (19)	Intel(R) Active Management Technology - SOL (COM5)
	(PCI) 0x00000016 (22)	High Definition Audio Controller
	(PCI) 0x00000017 (23)	Intel(R) 7 Series/C216 Chipset Family USB Enhanced Host Controller - 1E26
	(PCI) 0xFFFFFFFF8 (-8)	Intel(R) 82579LM Gigabit Network Connection
	(PCI) 0xFFFFFFFF9 (-7)	Intel(R) USB 3.0 eXtensible Host Controller
	(PCI) 0xFFFFFFFFA (-6)	Intel(R) HD Graphics 4000
	(PCI) 0xFFFFFFFFB (-5)	Intel(R) Gigabit CT Desktop Adapter
	(PCI) 0xFFFFFFFFC (-4)	Intel(R) Gigabit CT Desktop Adapter
	(PCI) 0xFFFFFFFFD (-3)	Intel(R) Gigabit CT Desktop Adapter
	(PCI) 0xFFFFFFFFE (-2)	Intel(R) Gigabit CT Desktop Adapter

B.4 DMA Channel Assignment

- Direct memory access (DMA)
 - 4 Direct memory access controller

Appendix C

RAID & AHCI Settings

C.1 Setting RAID

OS installation to setup RAID Mode


Step 1: Copy the files below from "Driver CD -> Step6 - RAID&AHCI\F6 Floppy - x86" to Disk




Step 2: Connect the USB Floppy (disk with RAID files) to the board



Step 3: The setting procedures "In BIOS Setup Menu"
A: Advanced -> SATA Configuration -> SATA Mode -> RAID Mode

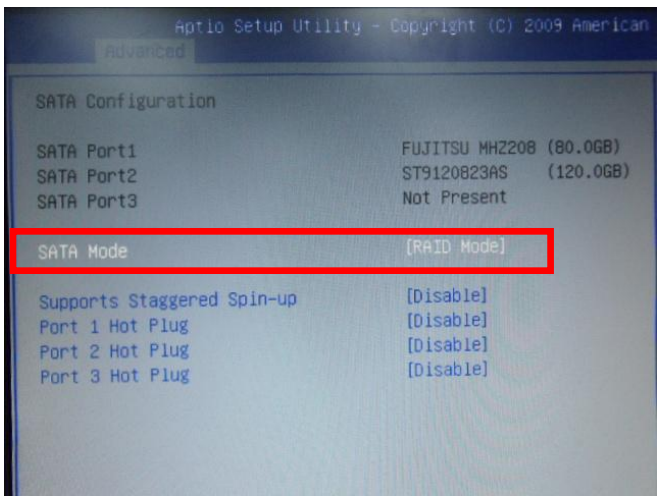


Step 4: The setting procedures "In BIOS Setup Menu"
B: Advanced -> Launch Storage OpROM -> Enabled

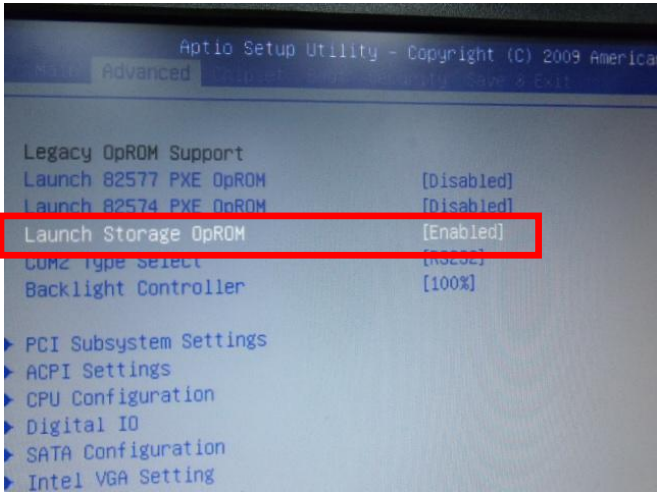


Step 5: The setting procedures "In BIOS Setup Menu"

C: Boot -> Boot Option #1 -> DVD-ROM Type

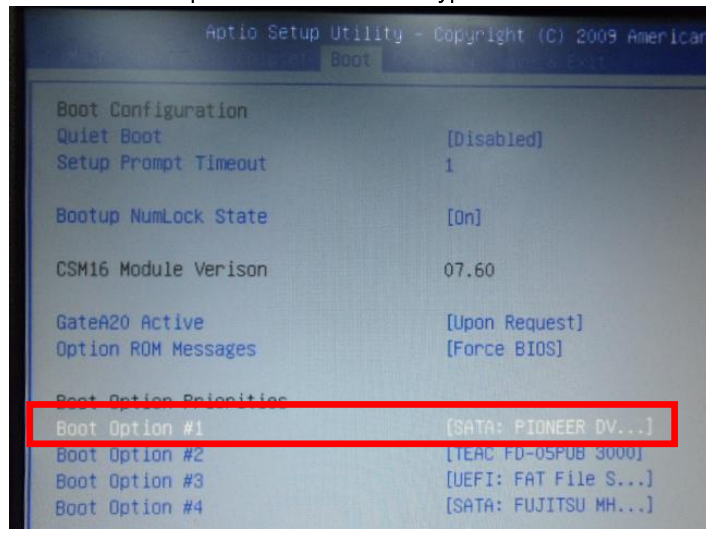


Step 6: The setting procedures "In BIOS Setup Menu"


D: Save & Exit -> Save Changes and Exit

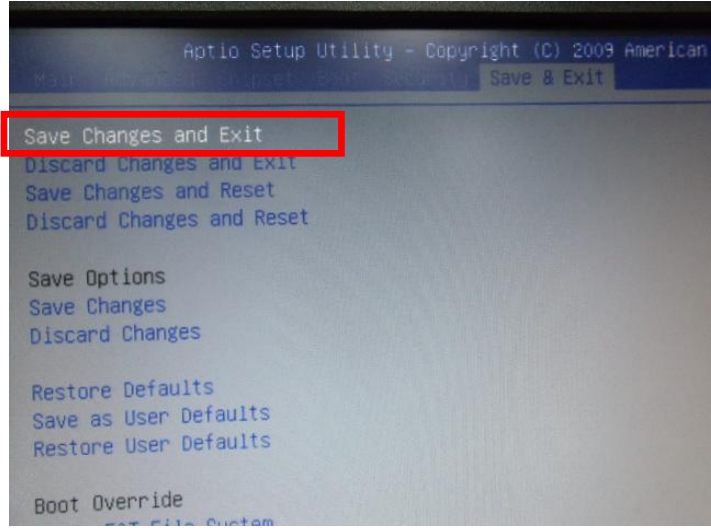


Step 7: Press **Ctrl-I** to enter **MAIN MENU**

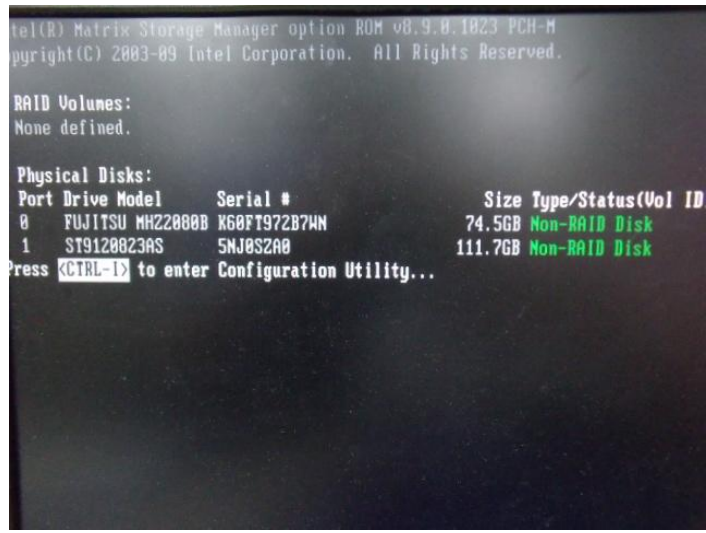


Step 8: Choose **"1.Create RAID Volume"**

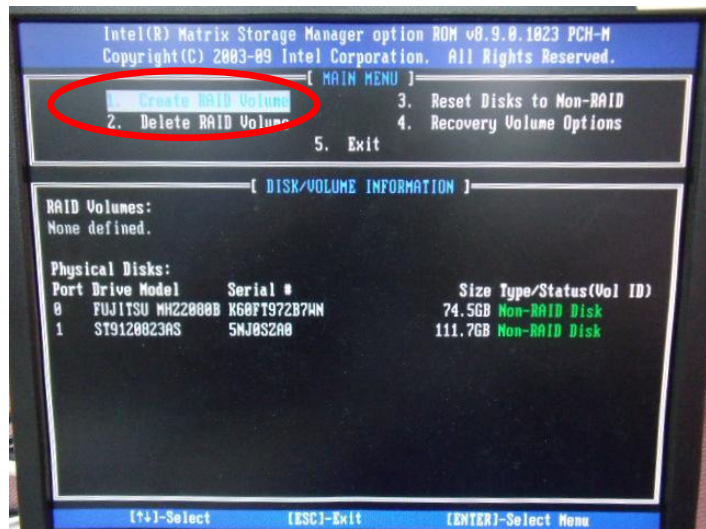

Step 9: RAID Level -> RAID0(Stripe)

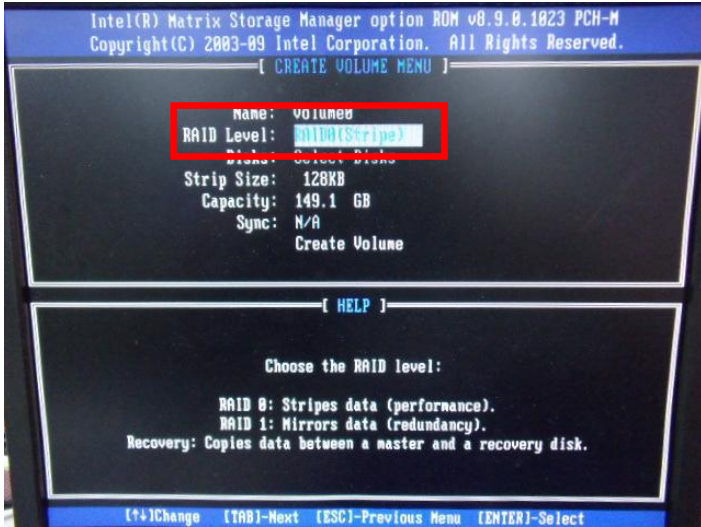


Step 10: Choose "Create Volume"

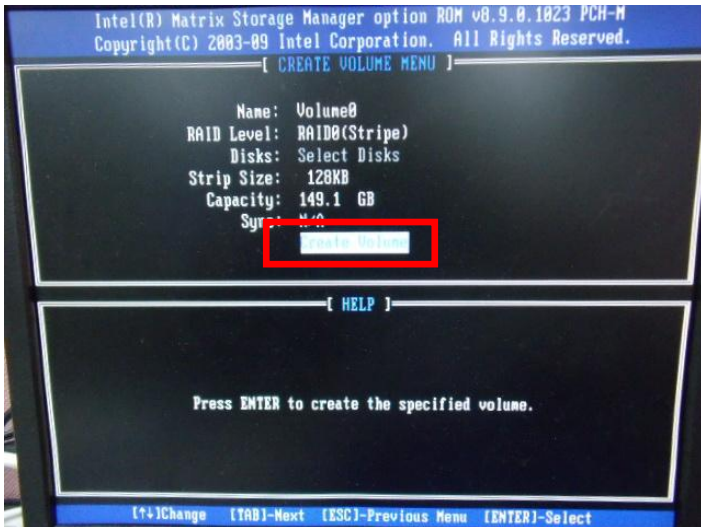


Step 11: Choose "Y"




Step 12: Choose "5. Exit"

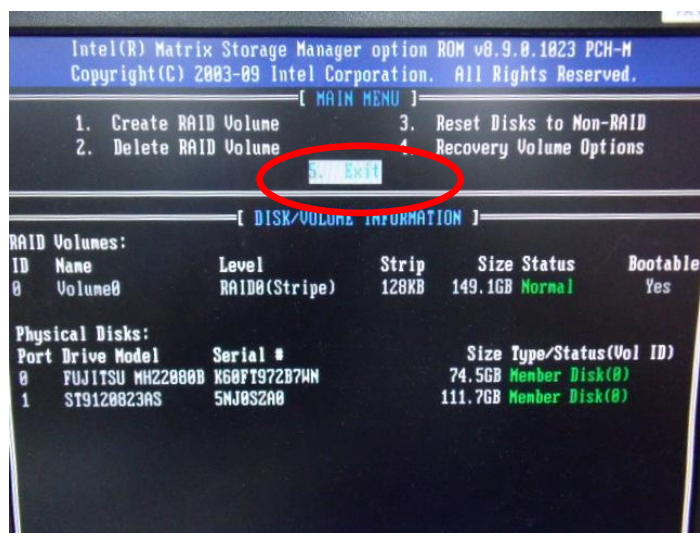

Step 13: Choose "Y"

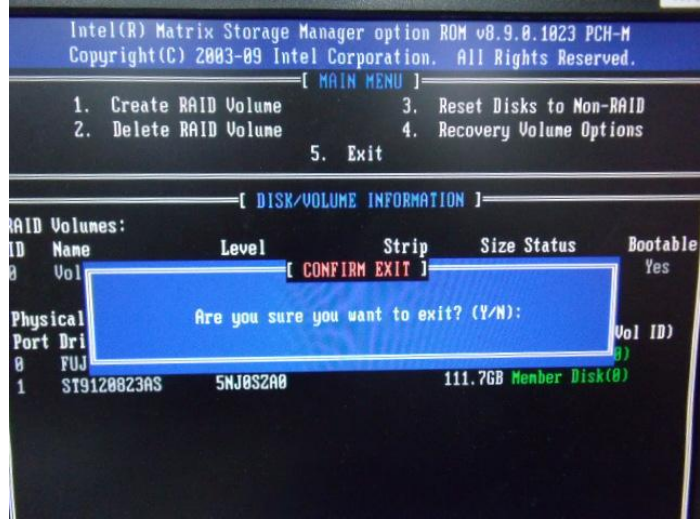


Step 14: Setup OS

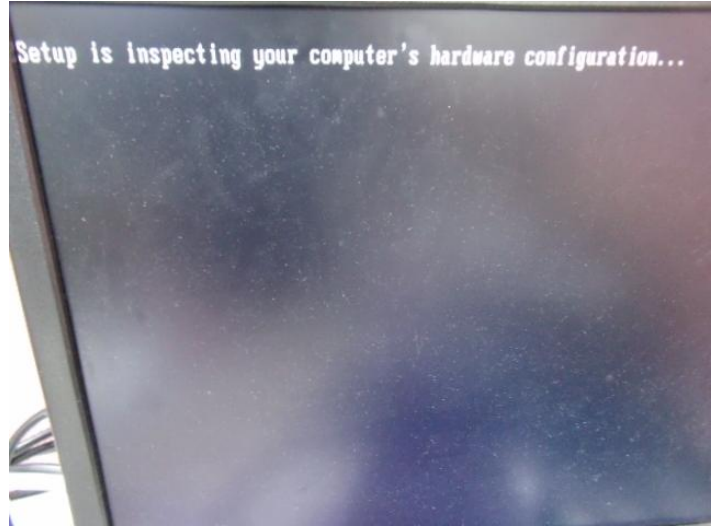


Step 15: Press "F6"



Step 16: Choose "S"

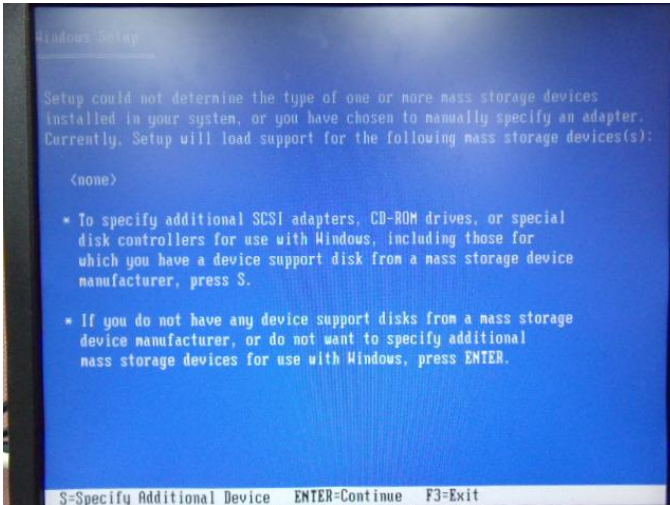


Step 17: Choose "Intel(R) ICH8M-E/ICH9M-E/5 Series SATA RAID Controller"

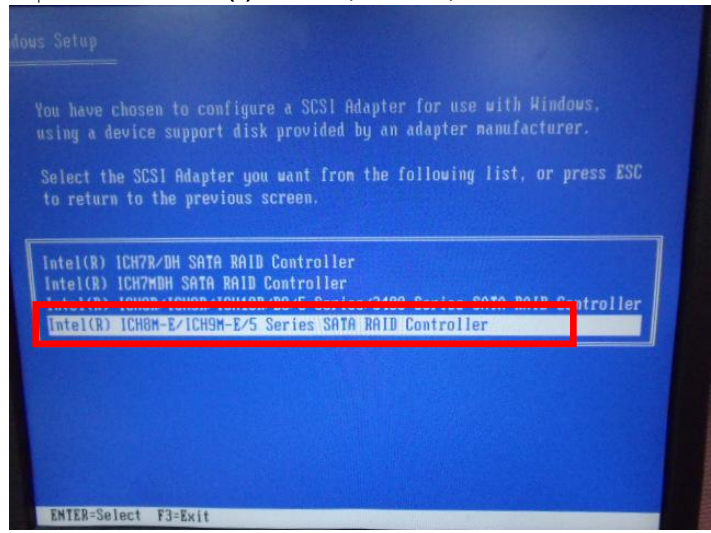

Step 18: It will show the model number you select and then press "ENTER"



Step 19: Setup is starting Windows

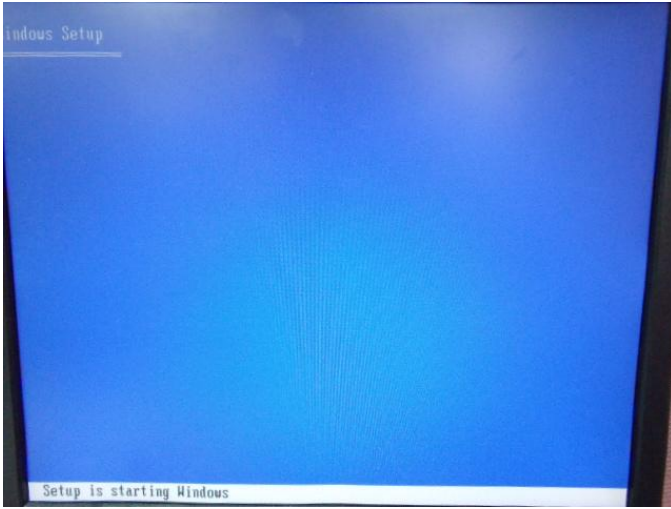

C.2 Setting AHCI

OS installation to setup AHCI Mode

Step 1: Copy the files below from "Driver CD -> Step 6 - RAID&AHCI\F6 Floppy - x86" to Disk




Step 2: Connect the USB Floppy (disk with RAID files) to the board




Step 3: The setting procedures "In BIOS Setup Menu"

A: Advanced -> SATA Configuration -> SATA Configuration -> SATA Mode -> AHCI Mode

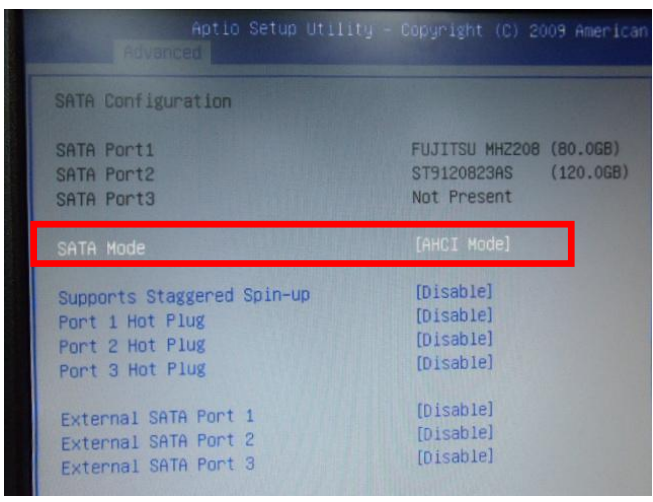


Step 4: The setting procedures "In BIOS Setup Menu"

B: Boot -> Boot Option #1 -> DVD-ROM Type

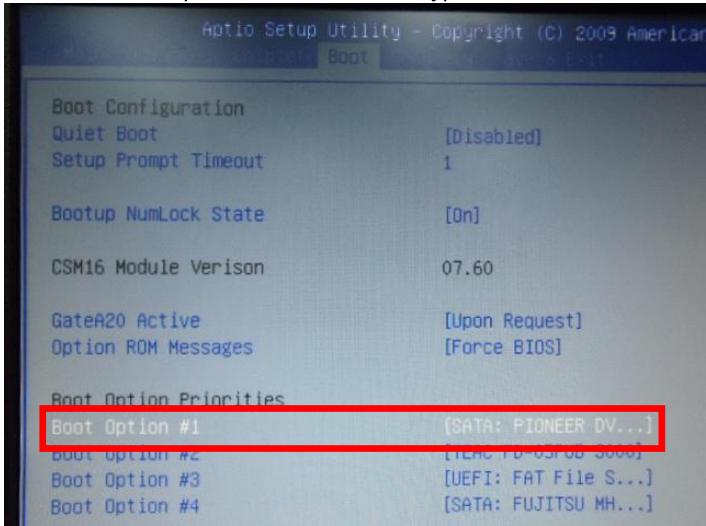


Step 5: The setting procedures "In BIOS Setup Menu"

C: Save & Exit -> Save Changes and Exit

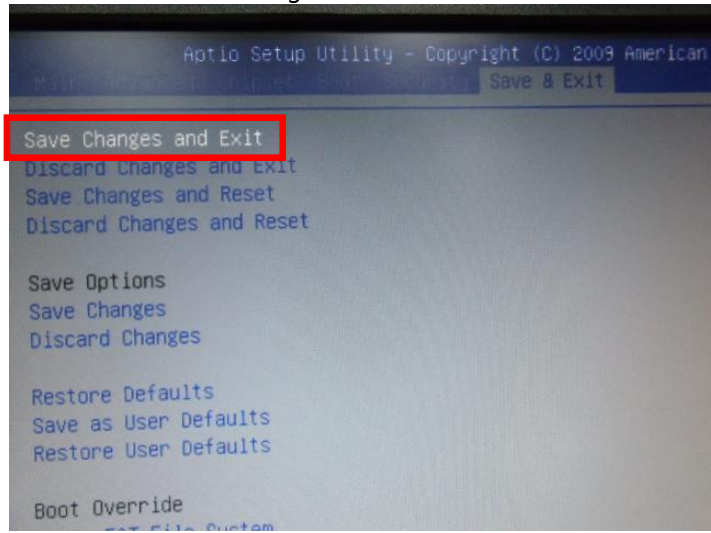

Step 6: Setup OS

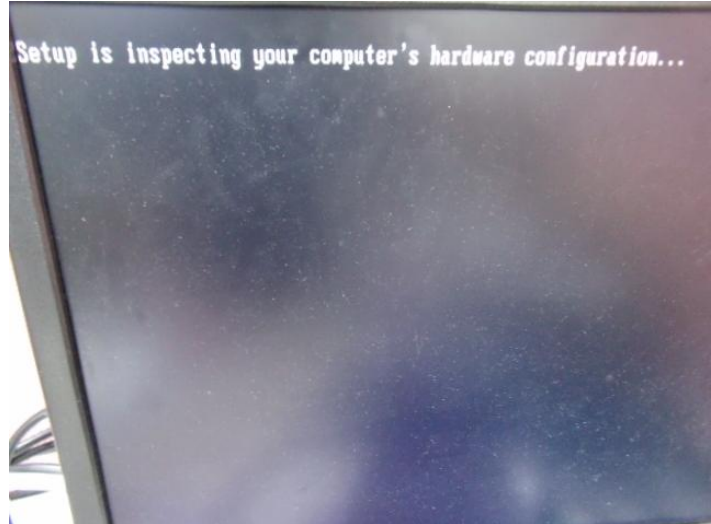


Step 7: Press "F6"



Step 8: Choose "S"




Step 9: Choose "Intel(R) 5 Series 6 Port SATA AHCI Controller"

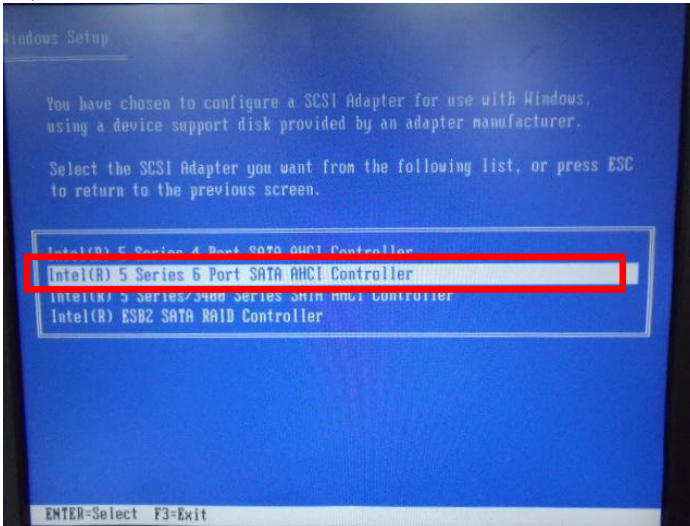

Step 10: It will show the model number you select and then press "ENTER"



Step 11: Setup is loading files

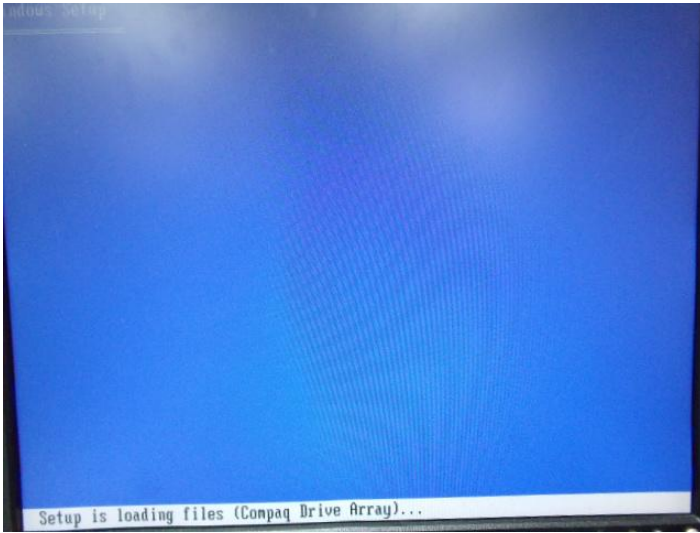

Appendix D

Electrical Specifications for I/O Ports

D.1 DI/O Programming

AEV-6356 utilizes FINTEK 81866 chipset as its Digital I/O controller.

Below are the procedures to complete its configuration and the AAEON initial watchdog timer program is also attached based on which you can develop customized program to fit your application.

There are three steps to complete the configuration setup:

- (1) Enter the MB PnP Mode;
- (2) Modify the data of configuration registers;
- (3) Exit the MB PnP Mode. Undesired result may occur if the MB PnP Mode is not exited normally.(These three steps are the same as programming WDT)

D.2 DI/O Register

Table 1 : SuperIO relative register table		
	Default Value	Note
Index	0x2E(Note1)	SIO MB PnP Mode Index Register 0x2E or 0x4E
Data	0x2F(Note2)	SIO MB PnP Mode Data Register 0x2F or 0x4F

Table 2 : Digital Input relative register table					
	LDN	Register	BitNum	Value	Note
DIO-1 Pin Status	0x06(Note3)	0x8A(Note4)	0(Note5)		GPIO80
DIO-2 Pin Status	0x06(Note6)	0x8A(Note7)	1(Note8)		GPIO81
DIO-3 Pin Status	0x06(Note9)	0x8A(Note10)	2(Note11)		GPIO82
DIO-4 Pin Status	0x06(Note12)	0x8A(Note13)	3(Note14)		GPIO83
DIO-5 Pin Status	0x06(Note15)	0x8A(Note16)	4(Note17)		GPIO84
DIO-6 Pin Status	0x06(Note18)	0x8A(Note19)	5(Note20)		GPIO85
DIO-7 Pin Status	0x06(Note21)	0x8A(Note22)	6(Note23)		GPIO86
DIO-8 Pin Status	0x06(Note24)	0x8A(Note25)	7(Note26)		GPIO87

Table 3 : Digital Output relative register table					
	LDN	Register	BitNum	Value	Note
DIO-1 Output Data	0x06(Note27)	0x89(Note28)	0(Note29)	(Note30)	GPIO80
DIO-2 Output Data	0x06(Note31)	0x89(Note32)	1(Note33)	(Note34)	GPIO81
DIO-3 Output Data	0x06(Note35)	0x89(Note36)	2(Note37)	(Note38)	GPIO82
DIO-4 Output Data	0x06(Note39)	0x89(Note40)	3(Note41)	(Note42)	GPIO83
DIO-5 Output Data	0x06(Note43)	0x89(Note44)	4(Note45)	(Note46)	GPIO84
DIO-6 Output Data	0x06(Note47)	0x89(Note48)	5(Note49)	(Note50)	GPIO85
DIO-7 Output Data	0x06(Note51)	0x89(Note52)	6(Note53)	(Note54)	GPIO86
DIO-8 Output Data	0x06(Note55)	0x89(Note56)	7(Note57)	(Note58)	GPIO87

D.3 Digital I/O Sample Program

```
*****
// SuperIO relative definition (Please reference to Table 1)
#define byte SIOIndex //This parameter is represented from Note1
#define byte SIOData //This parameter is represented from Note2
#define void IOWriteByte(byte IOPort, byte Value);
#define byte IOReadByte(byte IOPort);
// Digital Input Status relative definition (Please reference to Table 2)
#define byte DInput1LDN // This parameter is represented from Note3
#define byte DInput1Reg // This parameter is represented from Note4
#define byte DInput1Bit // This parameter is represented from Note5
#define byte DInput2LDN // This parameter is represented from Note6
#define byte DInput2Reg // This parameter is represented from Note7
#define byte DInput2Bit // This parameter is represented from Note8
#define byte DInput3LDN // This parameter is represented from Note9
#define byte DInput3Reg // This parameter is represented from Note10
#define byte DInput3Bit // This parameter is represented from Note11
#define byte DInput4LDN // This parameter is represented from Note12
#define byte DInput4Reg // This parameter is represented from Note13
#define byte DInput4Bit // This parameter is represented from Note14
#define byte DInput5LDN // This parameter is represented from Note15
#define byte DInput5Reg // This parameter is represented from Note16
#define byte DInput5Bit // This parameter is represented from Note17
#define byte DInput6LDN // This parameter is represented from Note18
#define byte DInput6Reg // This parameter is represented from Note19
#define byte DInput6Bit // This parameter is represented from Note20
#define byte DInput7LDN // This parameter is represented from Note21
#define byte DInput7Reg // This parameter is represented from Note22
#define byte DInput7Bit // This parameter is represented from Note23
#define byte DInput8LDN // This parameter is represented from Note24
#define byte DInput8Reg // This parameter is represented from Note25
#define byte DInput8Bit // This parameter is represented from Note26
*****
```

```

*****
// Digital Output control relative definition (Please reference to Table 3)
#define byte DOutput1LDN // This parameter is represented from Note27
#define byte DOutput1Reg // This parameter is represented from Note28
#define byte DOutput1Bit // This parameter is represented from Note29
#define byte DOutput1Val // This parameter is represented from Note30
#define byte DOutput2LDN // This parameter is represented from Note31
#define byte DOutput2Reg // This parameter is represented from Note32
#define byte DOutput2Bit // This parameter is represented from Note33
#define byte DOutput2Val // This parameter is represented from Note34
#define byte DOutput3LDN // This parameter is represented from Note35
#define byte DOutput3Reg // This parameter is represented from Note36
#define byte DOutput3Bit // This parameter is represented from Note37
#define byte DOutput3Val // This parameter is represented from Note38
#define byte DOutput4LDN // This parameter is represented from Note39
#define byte DOutput4Reg // This parameter is represented from Note40
#define byte DOutput4Bit // This parameter is represented from Note41
#define byte DOutput4Val // This parameter is represented from Note42
#define byte DOutput5LDN // This parameter is represented from Note43
#define byte DOutput5Reg // This parameter is represented from Note44
#define byte DOutput5Bit // This parameter is represented from Note45
#define byte DOutput5Val // This parameter is represented from Note46
#define byte DOutput6LDN // This parameter is represented from Note47
#define byte DOutput6Reg // This parameter is represented from Note48
#define byte DOutput6Bit // This parameter is represented from Note49
#define byte DOutput6Val // This parameter is represented from Note50
#define byte DOutput7LDN // This parameter is represented from Note51
#define byte DOutput7Reg // This parameter is represented from Note52
#define byte DOutput7Bit // This parameter is represented from Note53
#define byte DOutput7Val // This parameter is represented from Note54
#define byte DOutput8LDN // This parameter is represented from Note55
#define byte DOutput8Reg // This parameter is represented from Note56
#define byte DOutput8Bit // This parameter is represented from Note57
#define byte DOutput8Val // This parameter is represented from Note58
*****

```

```
*****
VOID Main(){
    Boolean PinStatus ;

    // Procedure : AaeonReadPinStatus
    // Input :
    //     Example, Read Digital I/O Pin 3 status
    // Output :
    //     InputStatus :
    //         0: Digital I/O Pin level is low
    //         1: Digital I/O Pin level is High
    PinStatus = AaeonReadPinStatus(DInput3LDN, DInput3Reg, DInput3Bit);

    // Procedure : AaeonSetOutputLevel
    // Input :
    //     Example, Set Digital I/O Pin 6 level
    AaeonSetOutputLevel(DOutput6LDN, DOutput6Reg, DOutput6Bit,
DOutput6Val);
}
*****
```

```
*****  
Boolean  AaeonReadPinStatus(byte LDN, byte Register, byte BitNum){  
    Boolean PinStatus ;  
  
    PinStatus = SIOBitRead(LDN, Register, BitNum);  
    Return PinStatus ;  
}  
VOID  AaeonSetOutputLevel(byte LDN, byte Register, byte BitNum, byte Value){  
    ConfigToOutputMode(LDN, Register, BitNum);  
    SIOBitSet(LDN, Register, BitNum, Value);  
}  
*****
```



```

*****
VOID  SIOEnterMBPnPMode(){
    IOWriteByte(SIOIndex, 0x87);
    IOWriteByte(SIOIndex, 0x87);
}

VOID  SIOExitMBPnPMode(){
    IOWriteByte(SIOIndex, 0xAA);
}

VOID  SIOSelectLDN(byte LDN){
    IOWriteByte(SIOIndex, 0x07); // SIO LDN Register Offset = 0x07
    IOWriteByte(SIOData, LDN);
}

VOID  SIOBitSet(byte LDN, byte Register, byte BitNum, byte Value){
    Byte TmpValue;

    SIOEnterMBPnPMode();
    SIOSelectLDN(byte LDN);
    IOWriteByte(SIOIndex, Register);
    TmpValue = IOReadByte(SIOData);
    TmpValue &= ~(1 << BitNum);
    TmpValue |= (Value << BitNum);
    IOWriteByte(SIOData, TmpValue);
    SIOExitMBPnPMode();
}

VOID  SIOByteSet(byte LDN, byte Register, byte Value){
    SIOEnterMBPnPMode();
    SIOSelectLDN(LDN);
    IOWriteByte(SIOIndex, Register);
    IOWriteByte(SIOData, Value);
    SIOExitMBPnPMode();
}
*****

```

```

*****
Boolean  SIOBitRead(byte LDN, byte Register, byte BitNum){
    Byte TmpValue;

    SIOEnterMBPnPMode();
    SIOSelectLDN(LDN);
    IOWriteByte(SIOIndex, Register);
    TmpValue = IOReadByte(SIOData);
    TmpValue &= (1 << BitNum);
    SIOExitMBPnPMode();
    If(TmpValue == 0)
        Return 0;
    Return 1;
}

VOID  ConfigToOutputMode(byte LDN, byte Register, byte BitNum){
    Byte TmpValue, OutputEnableReg;

    OutputEnableReg = Register-1;
    SIOEnterMBPnPMode();
    SIOSelectLDN(LDN);
    IOWriteByte(SIOIndex, OutputEnableReg);
    TmpValue = IOReadByte(SIOData);
    TmpValue |= (1 << BitNum);
    IOWriteByte(SIOData, OutputEnableReg);
    SIOExitMBPnPMode();
}
*****

```